## C304

### 14A504

B118
Side air bag sensor,
right (14B345)

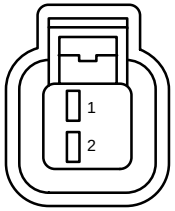


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1264 (BN) | Air bag – passenger side impact – crash sensor to module – return |
| 2 | 1263 (WH) | Air bag – driver side impact – crash sensor to module – feed |

## C305

### 14A504

B119
Side air bag sensor,
left (14B345)

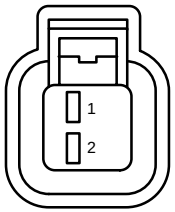


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1262 (BN/LG) | Air bag – driver side impact – crash sensor to module – return |
| 2 | 1261 (WH/LG) | Air bag – driver side impact – crash sensor to module – feed |

## C311

### 14K155

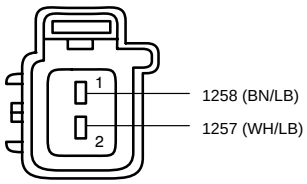


F02211

### 14A504

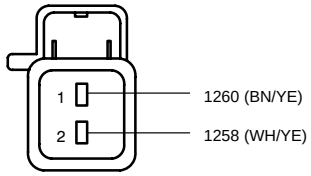


F02042

## C312

### 14A504

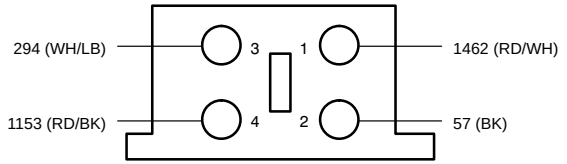


F04058

### 14B084

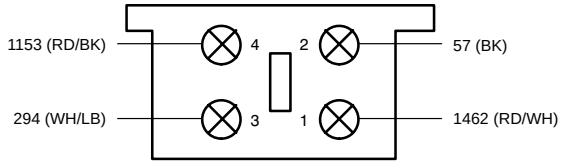


F04059

## C313

### 14K155

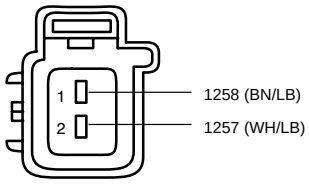


F02211

### 14A504

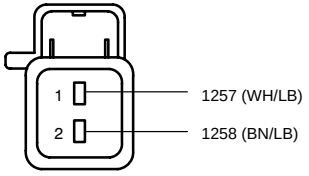


F02042