C110 GY

13076

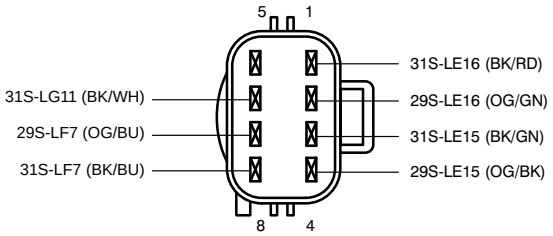

F08153

14290

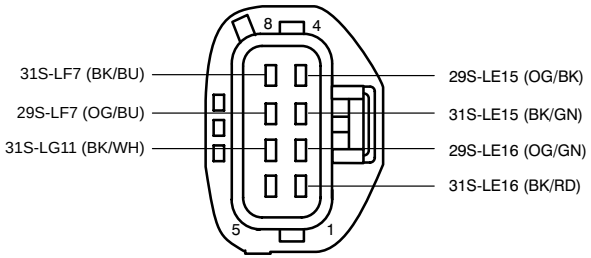

F08141

C111

12B637

P66
Coil On Plug (COP) 1
(12029)

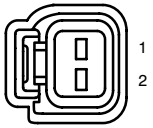

F02109

Pin	Circuit	Circuit function
1	91S-RR5 (BN)	Ground, Switched
2	15-RR5 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C112

12B637

P67
Coil On Plug (COP)
2 (12029)

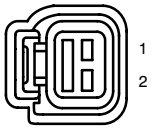

F02109

Pin	Circuit	Circuit function
1	91S-RR6 (BN/RD)	Ground, Switched
2	15-RR6 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C113

12B637

P68
Coil On Plug (COP)
3 (12029)

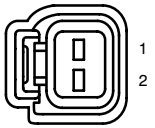

F02109

Pin	Circuit	Circuit function
1	91S-RR7 (BN/BU)	Ground, Switched
2	15-RR7 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C114

12B637

P69
Coil On Plug (COP)
4 (12029)

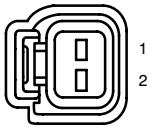

F02109

Pin	Circuit	Circuit function
1	91S-RR8 (BN/GN)	Ground, Switched
2	15-RR8 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)