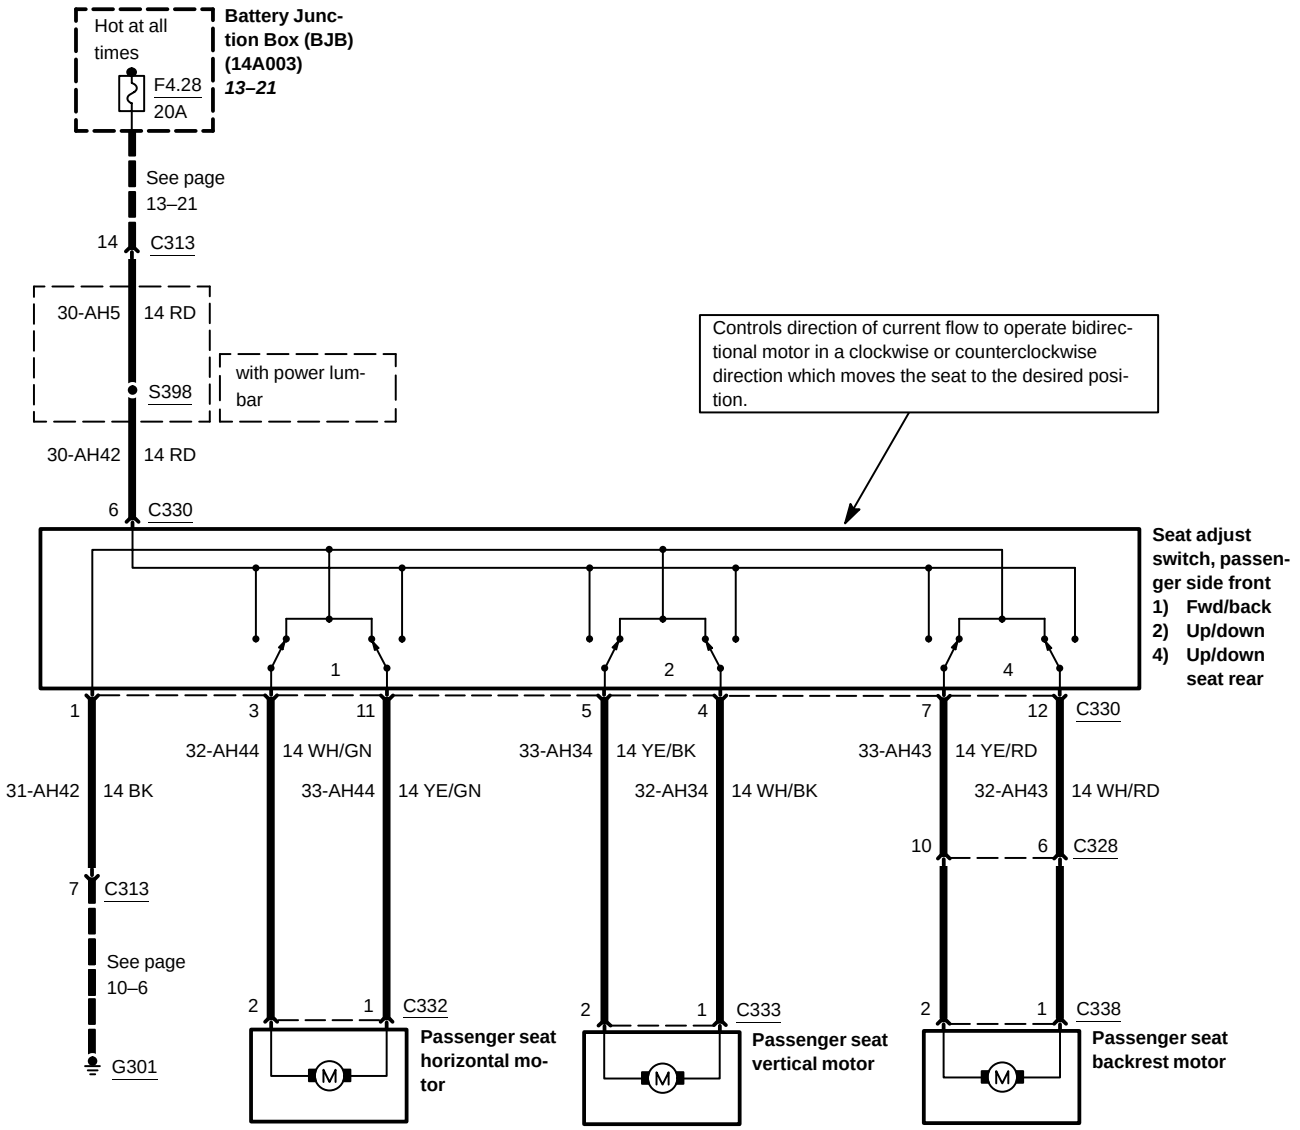
Hot at all times
Battery Junction Box (BJB) (14A003)
13–21
F4.28
20A
See page 13–21
14
C313
30-AH5
14 RD
with power lumbar
S398
30-AH42
14 RD
6
C330
Controls direction of current flow to operate bidirectional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
Seat adjust switch, passenger side front
1) Fwd/back
2) Up/down
4) Up/down seat rear
1
2
4
1
3
11
5
4
7
12
C330
32-AH44
14 WH/GN
33-AH34
14 YE/BK
33-AH43
14 YE/RD
31-AH42
14 BK
33-AH44
14 YE/GN
32-AH34
14 WH/BK
32-AH43
14 WH/RD
10
6
C328
7
C313
See page 10–6
G301
2
1
C332
Passenger seat horizontal motor
2
1
C333
Passenger seat vertical motor
2
1
C338
Passenger seat backrest motor
M