## C420c

### 14A005

A212
Rear Electronic
Module (REM)

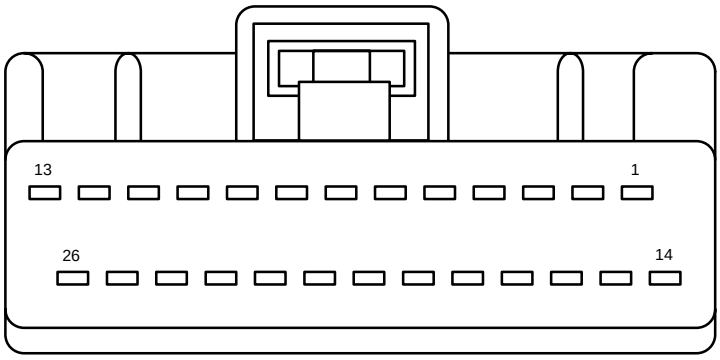


F26018

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | – | not used |
| 2 | – | not used |
| 3 | – | not used |
| 4 | 33-AA15 (YE/GN) | Switched between: Battery voltage, Ground or Open |
| 5 | 33-AA2 (YE/RD) | Switched between: Battery voltage, Ground or Open |
| 6 | 32-AA1 (WH) | Switched between: Battery voltage, Ground or Open |
| 7 | 32-AA16 (WH/BK) | Switched between: Battery voltage, Ground or Open |
| 8 | – | not used |
| 9 | – | not used |
| 10 | 29S-AA83 (OG) | Voltage supplied at all times (overload protected), Switched |
| 11 | 31-DK30D (BK/OG) | Ground |
| 12 | 31-DK30E (BK/OG) | Ground |
| 13 | 29S-DK31 (OG/BK) | Voltage supplied at all times (overload protected), Switched |
| 14 | 5-AG12 (BU/BK) | Data link, bus negative |

| Pin | Circuit | Circuit Function |
|---|---|---|
| 15 | 4-AG12 (GY/OG) | Data link, bus positive |
| 16 | 31S-GL12 (BK/OG) | Ground, Switched |
| 17 | – | not used |
| 18 | – | not used |
| 19 | 8-RE32 (WH/VT) | Sensor signal |
| 20 | 8-AA20 (WH/BU) | Sensor signal |
| 21 | 8-AA21 (WH/GN) | Sensor signal |
| 22 | 10-AJ14 (GY/VT) | Signal 2 (Y–direction, reverse, downward) |
| 23 | 9-GA1 (BN) | Sensor signal return (reference/ground) |
| 24 | 8-AJ14 (WH/BU) | Sensor signal |
| 25 | 31-DK30F (BK/OG) | Ground |
| 26 | 31-DK30G (BK/OG) | Ground |