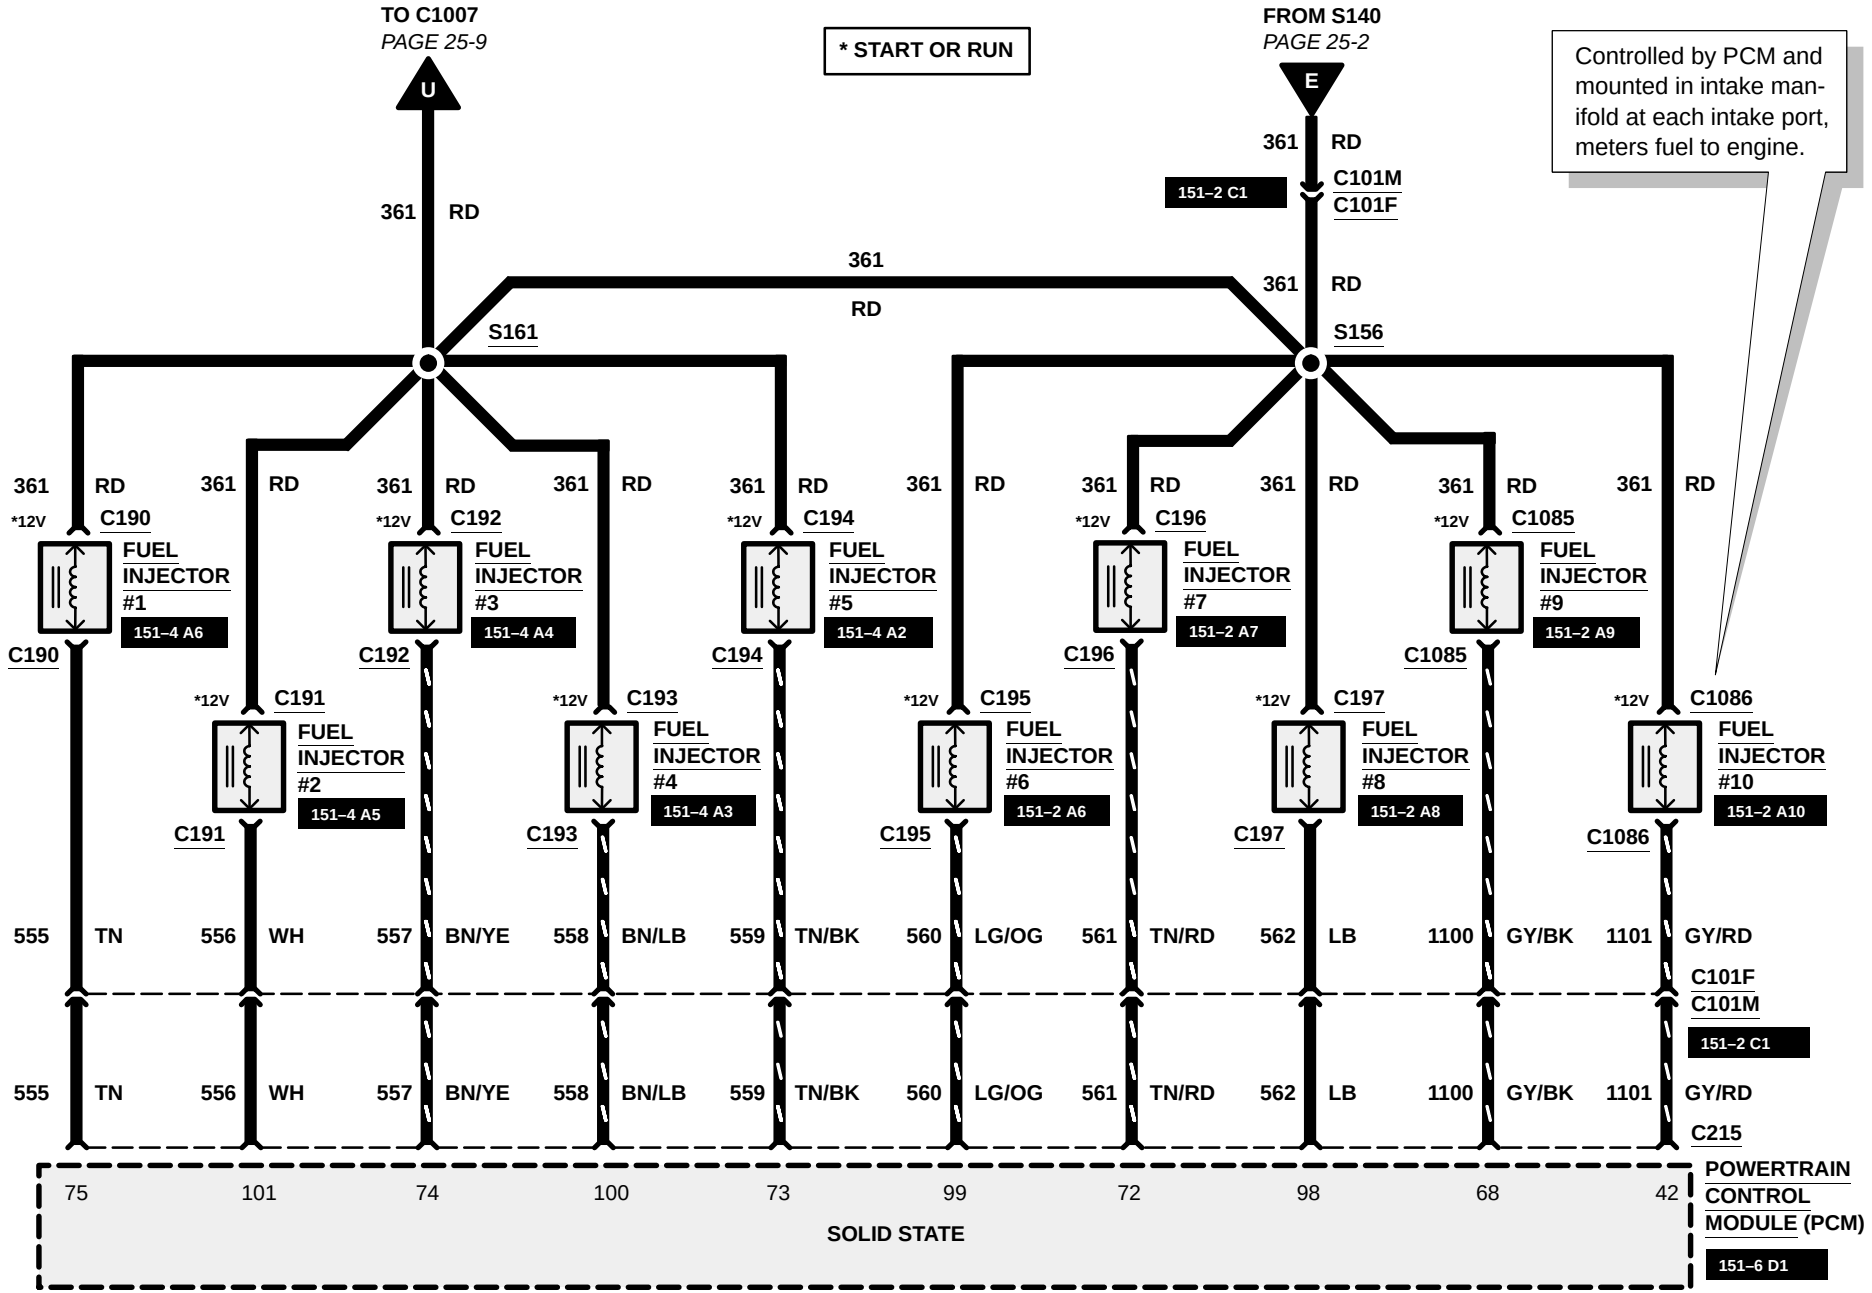
TO C1007
PAGE 25-9
* START OR RUN
FROM S140
PAGE 25-2
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
U
E
361 RD
151–2 C1
C101M
C101F
S161
S156
*12V
C190
FUEL INJECTOR #1
151–4 A6
C191
FUEL INJECTOR #2
151–4 A5
C192
FUEL INJECTOR #3
151–4 A4
C193
FUEL INJECTOR #4
151–4 A3
C194
FUEL INJECTOR #5
151–4 A2
C195
FUEL INJECTOR #6
151–2 A6
C196
FUEL INJECTOR #7
151–2 A7
C197
FUEL INJECTOR #8
151–2 A8
C1085
FUEL INJECTOR #9
151–2 A9
C1086
FUEL INJECTOR #10
151–2 A10
555 TN
556 WH
557 BN/YE
558 BN/LB
559 TN/BK
560 LG/OG
561 TN/RD
562 LB
1100 GY/BK
1101 GY/RD
C101F
C101M
151–2 C1
C215
75
101
74
100
73
99
72
98
68
42
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 D1