C282

14A005

N61
Inertia Fuel Shutoff
(IFS) switch



F03032

Pin	Circuit	Circuit Function
1	–	not used
2	15-RP3 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
3	15-RP12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)

C283a

14A005

P62
Auxiliary Junction
Box (AJB), interior

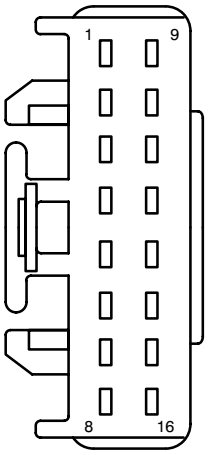

F16029

Pin	Circuit	Circuit Function
1	4-MC9 (GY/OG)	Data link, bus positive
2	9-LB1 (BN)	Sensor signal return (reference/ ground)
3	5-MC9 (BU/BK)	Data link, bus negative
4	5-EG13 (BU/BK)	Data link, bus negative
5	64S-LK9 (BU/WH)	Variable D.C. voltage (not over-load protected), Switched
6	–	not used
7	–	not used
8	4-EG13 (GY/OG)	Data link, bus positive
9	64S-LH1 (BU)	Variable D.C. voltage (not over-load protected), Switched
10	–	not used
11	9-LC36 (BN)	Sensor signal return (reference/ ground)
12	5-AH80 (BU/OG)	Data link, bus negative
13	64S-LH2 (BU/RD)	Variable D.C. voltage (not over-load protected), Switched
14	31-JA10 (BK/RD)	Ground
15	–	not used
16	4-AH80 (GY/WH)	Data link, bus positive