C1009

A405
Natural Gas Vehicle
(NGV) module

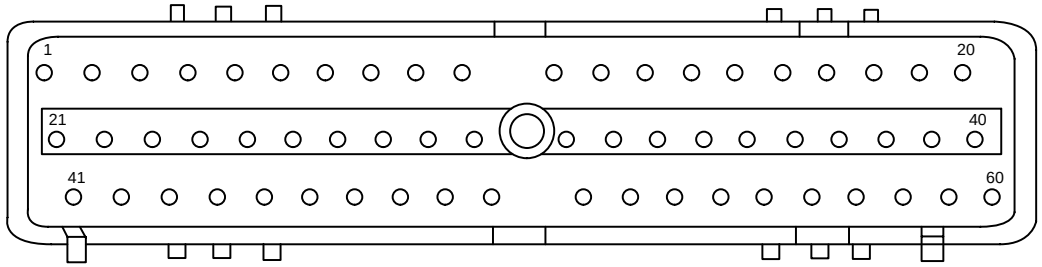

F60008

Pin	Circuit	Circuit function
1	37 (YE)	Voltage supplied at all times (overload protected)
2	–	not used
3	555 (TN)	Fuel injector 1, control
4	556 (WH)	Fuel injector 2, control
5	557 (BN/YE)	Fuel injector 3, control
6	–	not used
7	141 (RD/PK)	Injector pressure sensor, except 1,9 TDI unit injector engine
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	1503 (BK/LB)	signal, Signal Ground
17	–	not used
18	915 (PK/LB)	SCP Bus –
19	914 (TN/OG)	SCP Bus +
20	875 (BK/LB)	Ground

Pin	Circuit	Circuit function
21	–	not used
22	–	not used
23	558 (BN/LB)	Fuel injector 4, control
24	559 (TN/BK)	Fuel injector 5, control
25	560 (LG/OG)	Fuel injector 6, control
26	351 (BN/WH)	Reference, voltage
27	–	not used
28	–	not used
29	–	not used
30	–	not used
31	–	not used
32	–	not used
33	559 (TN/BK)	Fuel injector 5, control
34	–	not used
35	558 (BN/LB)	Fuel injector 4, control
36	–	not used
37	361 (RD)	Voltage supplied in Start and Run (overload protected)
38	29 (YE/WH)	Fuel pump/fuel gauge sender
39	557 (BN/YE)	Fuel injector 3, control
40	1501 (BK)	Ground

Pin	Circuit	Circuit function
41	–	not used
42	560 (LG/OG)	Fuel injector 6, control
43	561 (TN/RD)	Fuel injector 7, control
44	562 (LB)	Fuel injector 8, control
45	–	not used
46	359 (GY/RD)	signal, return
47	204 (OG/LG)	Fuel tank temperature sensor, signal
48	–	not used
49	–	not used
50	–	not used

Pin	Circuit	Circuit function
51	–	not used
52	–	not used
53	561 (TN/RD)	Fuel injector 7, control
54	562 (LB)	Fuel injector 8, control
55	–	not used
56	–	not used
57	361 (RD)	Voltage supplied in Start and Run (overload protected)
58	555 (TN)	Fuel injector 1, control
59	556 (WH)	Fuel injector 2, control
60	1501 (BK)	Ground