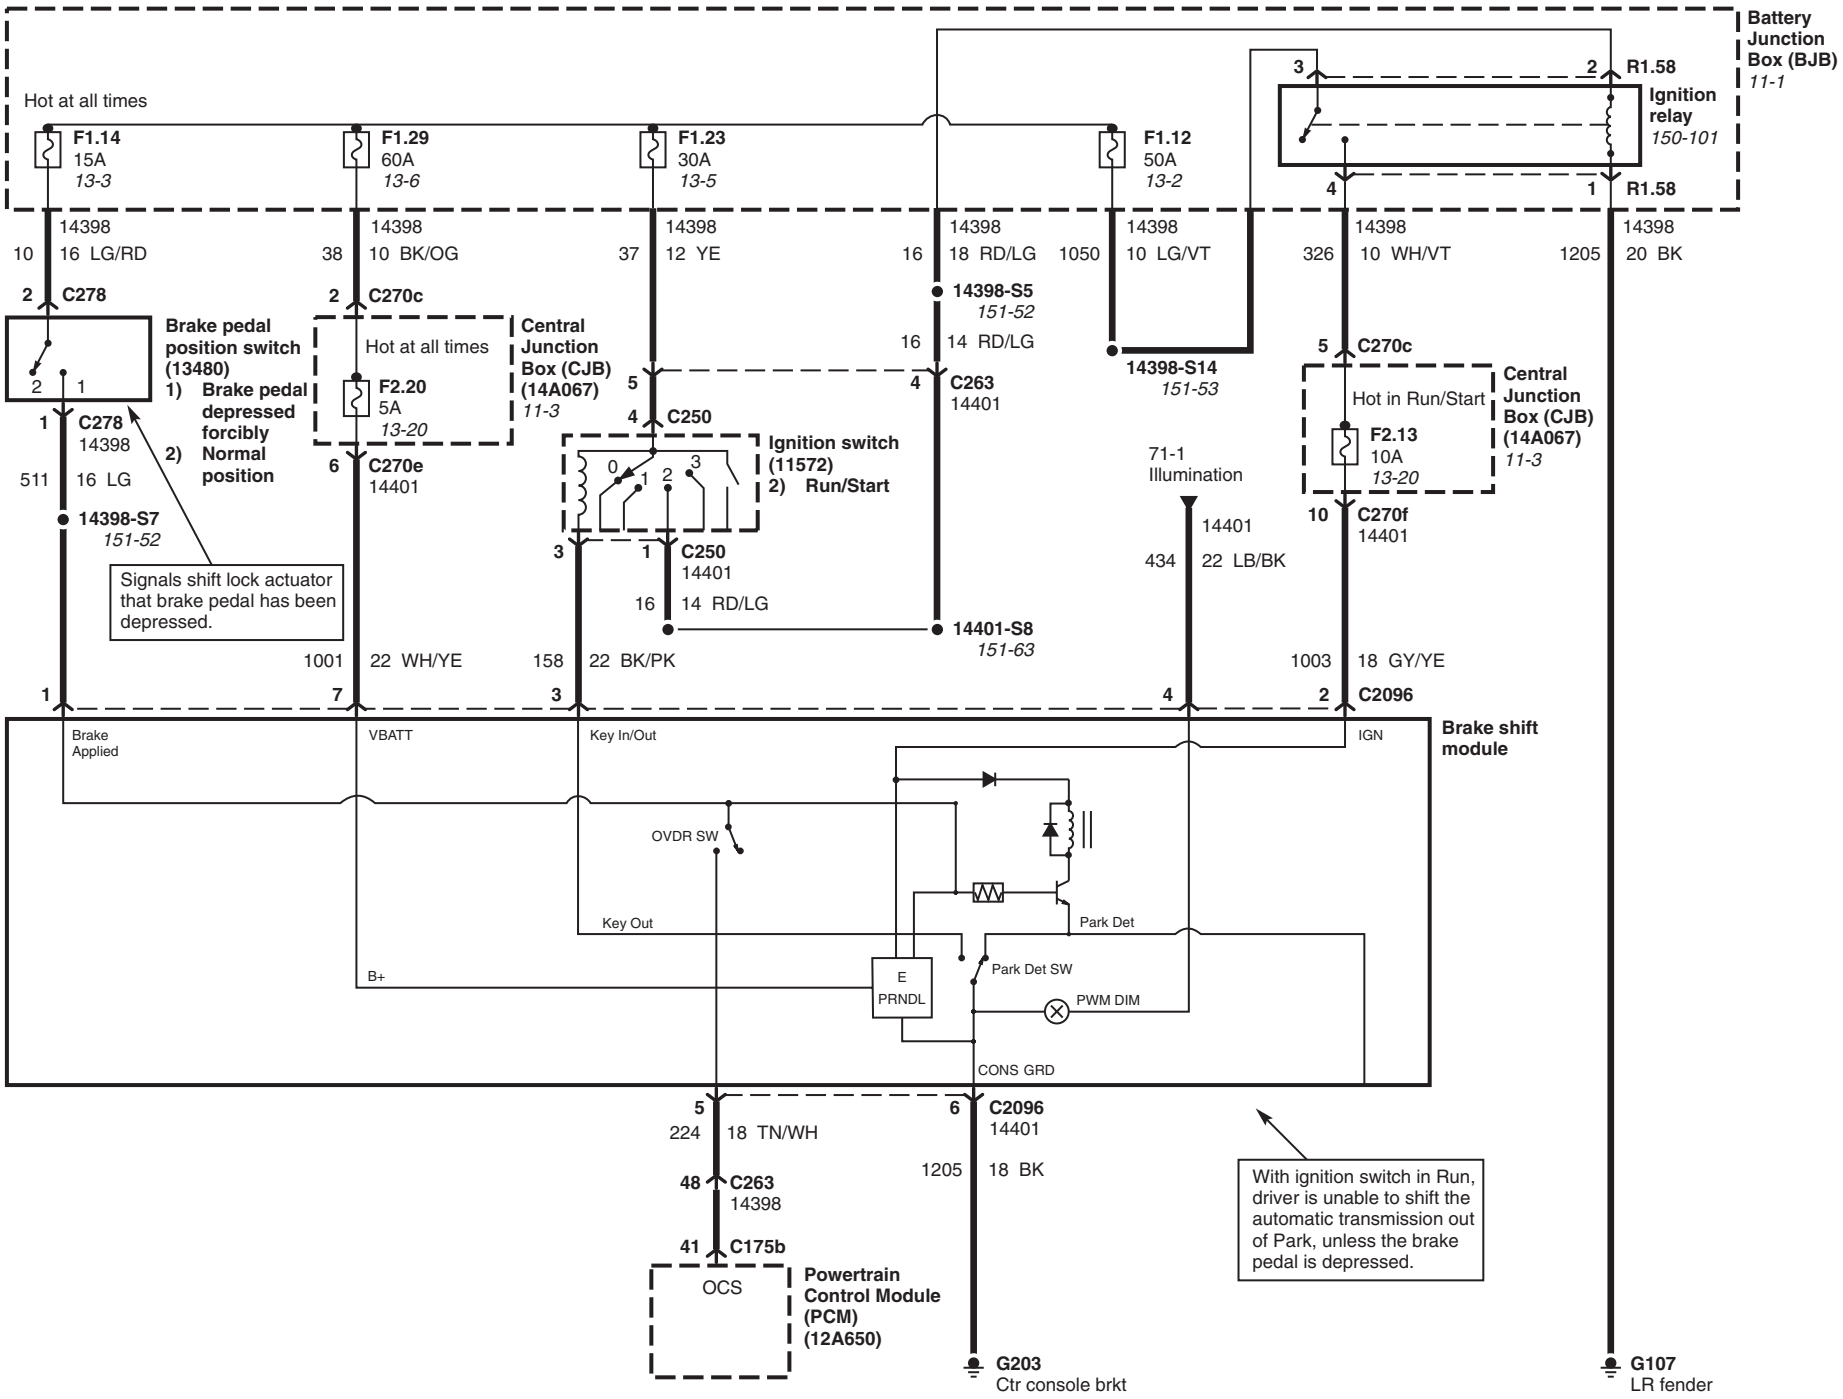
Battery Junction Box (BJB) 11-1
Hot at all times
F1.14 15A 13-3
F1.29 60A 13-6
F1.23 30A 13-5
F1.12 50A 13-2
R1.58 Ignition relay 150-101
R1.58
14398 10 16 LG/RD
14398 38 10 BK/OG
14398 37 12 YE
14398 16 18 RD/LG
14398 1050 10 LG/VT
14398 326 10 WH/VT
14398 1205 20 BK
C278
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
C270c
Hot at all times
F2.20 5A 13-20
Central Junction Box (CJB) (14A067) 11-3
14398-S5 151-52
16 14 RD/LG
C263 14401
14398-S14 151-53
C270c
Hot in Run/Start
F2.13 10A 13-20
Central Junction Box (CJB) (14A067) 11-3
C278 14398
511 16 LG
14398-S7 151-52
Signals shift lock actuator that brake pedal has been depressed.
C270e 14401
C250
Ignition switch (11572)
2) Run/Start
C250 14401
16 14 RD/LG
14401-S8 151-63
71-1 Illumination
14401
434 22 LB/BK
C270f 14401
1001 22 WH/YE
158 22 BK/PK
1003 18 GY/YE
C2096
Brake shift module
Brake Applied
VBATT
Key In/Out
IGN
OVDR SW
Key Out
Park Det
B+
E PRNDL
Park Det SW
PWM DIM
CONS GRD
224 18 TN/WH
C2096 14401
1205 18 BK
C263 14398
C175b
OCS
Powertrain Control Module (PCM) (12A650)
With ignition switch in Run, driver is unable to shift the automatic transmission out of Park, unless the brake pedal is depressed.
G203 Ctr console brkt
G107 LR fender