C192

12A522

V7
A/C Compressor
clutch diode



F02125

Pin	Circuit	Circuit Function
1	HXE2 (BK)	Ground
2	HA58 (WH/OG)	A/C clutch relay, switched output

C193

14A103

K143
Anti–theft relay

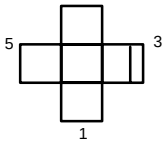

F04127

Pin	Circuit	Circuit Function
1	ST96 (BU)	Anti–theft relay, control
2	ST95 (GN/RD)	Voltage supplied at all times (overload protected)
3	ST98 (BU/WH)	Anti–theft relay, switched power
4	ST97 (LG/BK)	Voltage supplied with park/neutral
5	–	not used

C195 (WH)

7A488

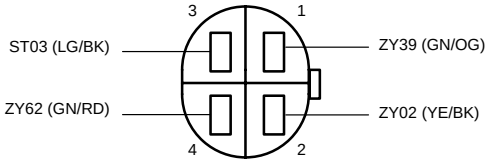

F04045.01

14A103

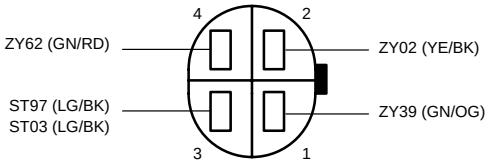

F04045

C196 (BK)

14A103

B213
Intake Air Tempera-
ture (IAT) sensor

F02137

Pin	Circuit	Circuit Function
1	AVE6 (BK/YE)	signal, return
2	AV28 (YE/GN)	Intake Air Temperature (IAT) sensor, input