## C1245d

**1807463C91**

Manifold intake air heater relay

F01025

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 3996 (RD/YE) | output, to, Manifold intake air heater relay |
| | (RD) | Manifold intake air heater relay, to, Air intake heater grid |

## C1250

**12A581**

Stop lamp relay

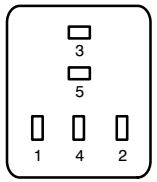


F05139

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 511 (LG) | Brake pedal position switch (13480), to stoplamps |
| 3 | 810 (RD/LG) | Brake pedal position switch (13480), input |
| 4 | – | not used |
| 5 | 10 (LG/RD) | Voltage supplied at all times (overload protected) |

## C1249a

**14N144/14300**

Battery II

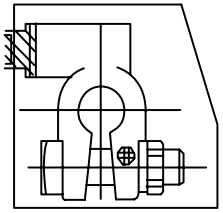

F01155

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 2037 (RD) | Battery cable + |

## C1251a

**14305**

Generator, secondary

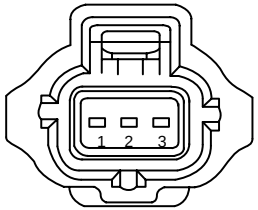


F03273

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1185 (YE) | Generator, Power |
| 2 | – | not used |
| 3 | 35 (OG/LB) | Voltage supplied at all times (overload protected) |

## C1249b

**14301**

Battery II

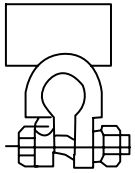

F01157

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 2057 (BK) | Battery cable – |

## C1251b

**10K304**

Generator, secondary



F01085

| Pin | Circuit | Circuit function |
|---|---|---|
| B+ | 38 (BK/OG) | Voltage supplied at all times (not overload protected) |