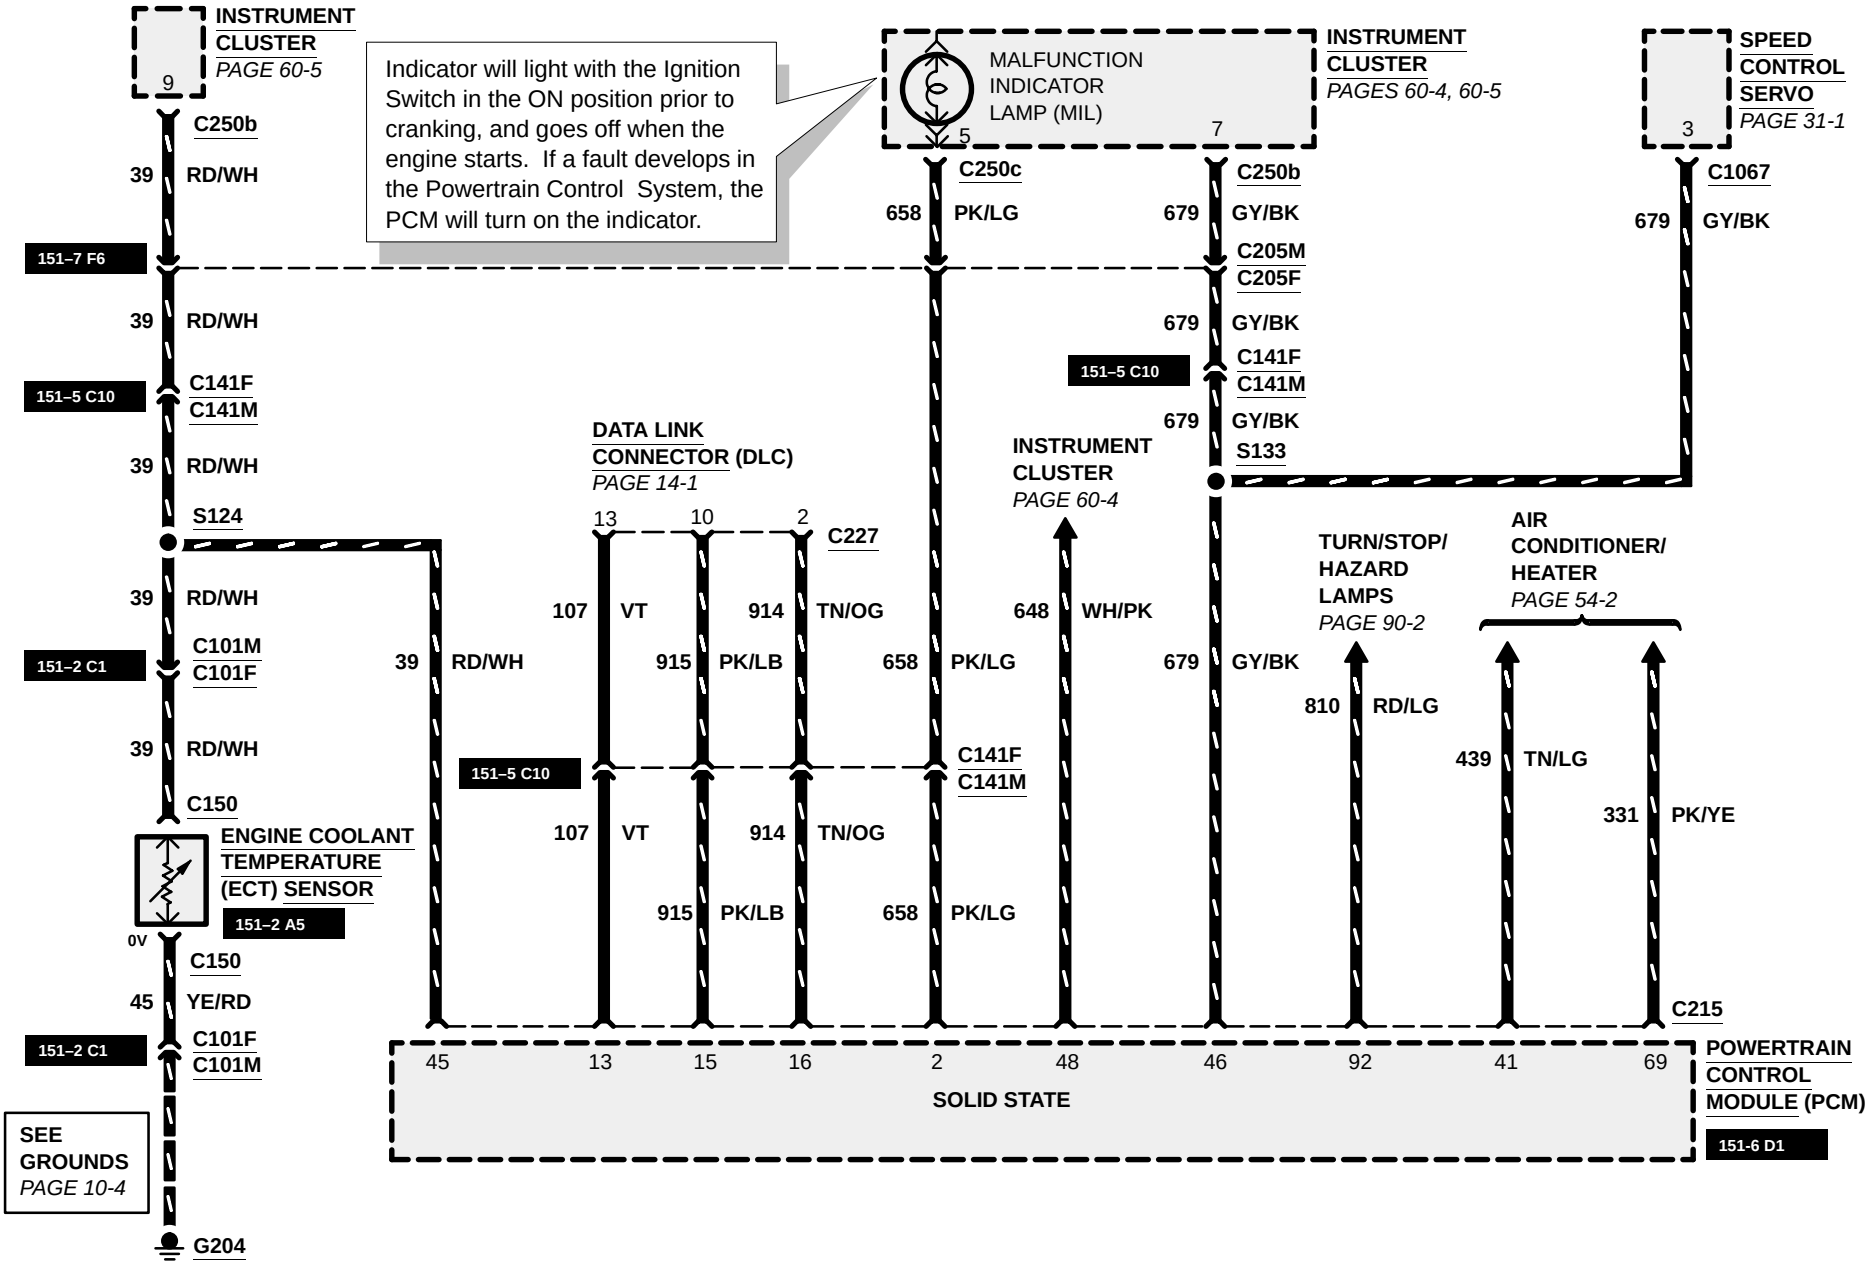
INSTRUMENT CLUSTER
PAGE 60-5
9
C250b
39 RD/WH
151–7 F6
39 RD/WH
151–5 C10
C141F
C141M
39 RD/WH
S124
39 RD/WH
151–2 C1
C101M
C101F
39 RD/WH
C150
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–2 A5
0V
C150
45 YE/RD
151–2 C1
C101F
C101M
SEE GROUNDS PAGE 10-4
G204
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If a fault develops in the Powertrain Control System, the PCM will turn on the indicator.
MALFUNCTION INDICATOR LAMP (MIL)
5
INSTRUMENT CLUSTER
PAGES 60-4, 60-5
7
C250c
658 PK/LG
C250b
679 GY/BK
C205M
C205F
679 GY/BK
151–5 C10
C141F
C141M
679 GY/BK
S133
SPEED CONTROL SERVO
PAGE 31-1
3
C1067
679 GY/BK
DATA LINK CONNECTOR (DLC)
PAGE 14-1
13
10
2
C227
107 VT
914 TN/OG
915 PK/LB
658 PK/LG
151–5 C10
C141F
C141M
107 VT
914 TN/OG
915 PK/LB
658 PK/LG
INSTRUMENT CLUSTER
PAGE 60-4
648 WH/PK
TURN/STOP/ HAZARD LAMPS
PAGE 90-2
810 RD/LG
AIR CONDITIONER/ HEATER
PAGE 54-2
439 TN/LG
331 PK/YE
C215
45 13 15 16 2 48 46 92 41 69
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151-6 D1