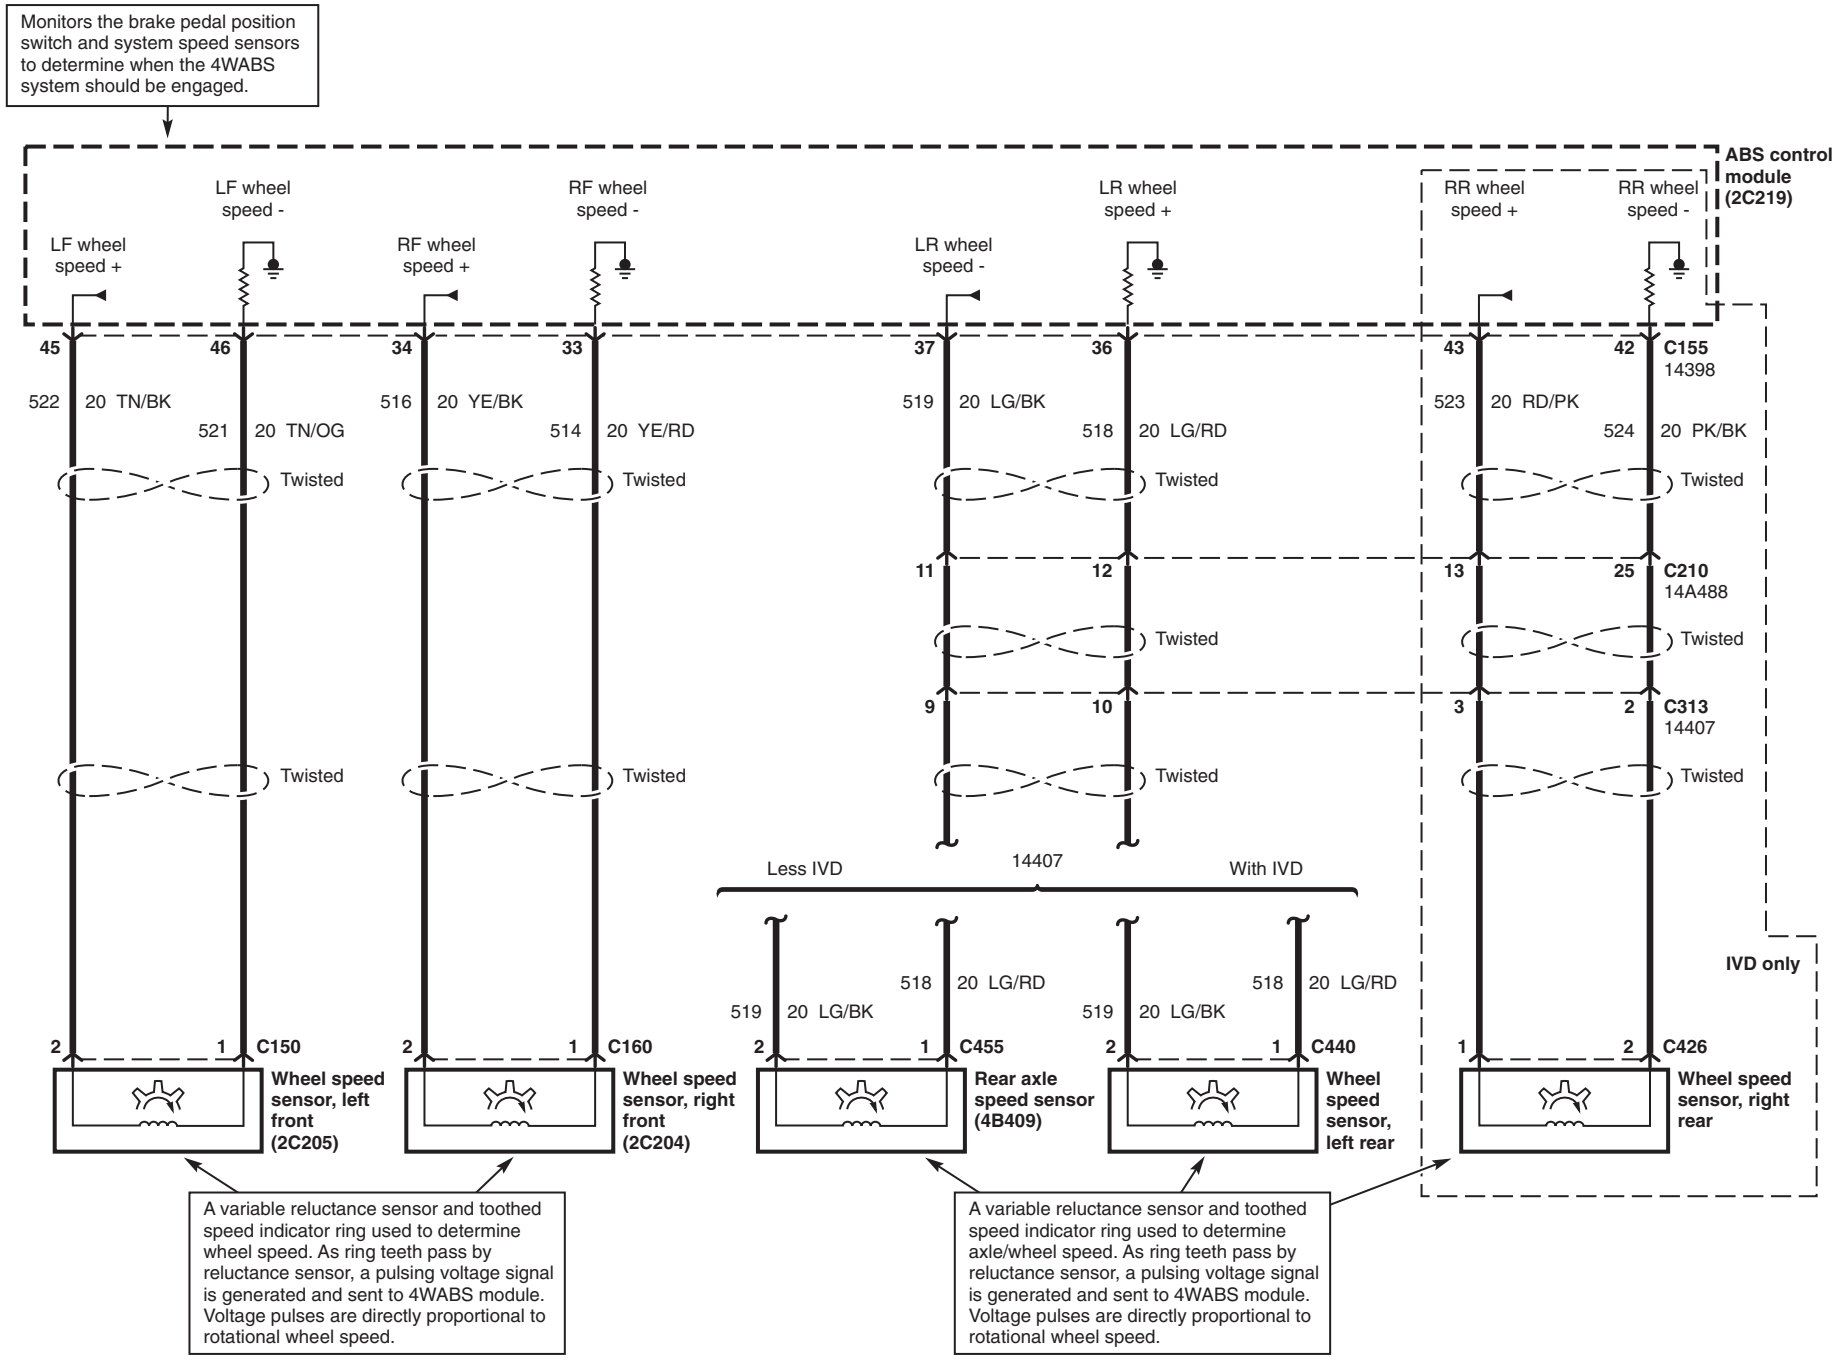
Monitors the brake pedal position switch and system speed sensors to determine when the 4WABS system should be engaged.
ABS control module (2C219)
LF wheel speed +
LF wheel speed -
RF wheel speed +
RF wheel speed -
LR wheel speed -
LR wheel speed +
RR wheel speed +
RR wheel speed -
45
46
34
33
37
36
43
42
C155
14398
522 20 TN/BK
521 20 TN/OG
516 20 YE/BK
514 20 YE/RD
519 20 LG/BK
518 20 LG/RD
523 20 RD/PK
524 20 PK/BK
Twisted
11
12
13
25
C210
14A488
9
10
3
2
C313
14407
14407
Less IVD
With IVD
IVD only
2
1
C150
Wheel speed sensor, left front (2C205)
C160
Wheel speed sensor, right front (2C204)
C455
Rear axle speed sensor (4B409)
C440
Wheel speed sensor, left rear
C426
Wheel speed sensor, right rear
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
A variable reluctance sensor and toothed speed indicator ring used to determine axle/wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.