C220b

14401

A30
Instrument cluster

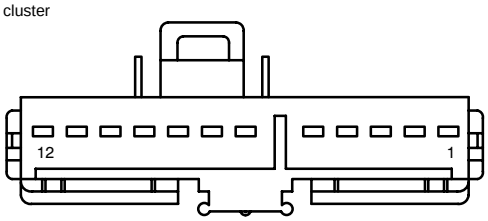

F12020

Pin	Circuit	Circuit Function
1	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
2	570 (BK/WH)	Ground
3	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
4	19 (LB/RD)	Power, Hot with Headlamps on
5	3 (LG/WH)	Turn lamps, feed, left front
6	932 (GY/WH)	High beam lamp, feed
7	57 (BK)	Ground
8	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
9	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
10	1017 (BK/WH)	Check cap indicator lamp
11	–	not used
12	29 (YE/WH)	Fuel pump/fuel gauge sender

C220c

14401

A30
Instrument cluster

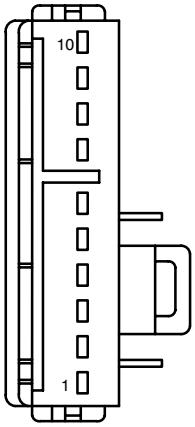

F10024

Pin	Circuit	Circuit Function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	584 (YE)	Voltage supplied in Start and Run (overload protected)
3	904 (LG/RD)	Generator/Battery indicator, control
4	608 (BK/YE)	Air bag indicator, control
5	977 (VT/WH)	Brake indicator, control
6	603 (DG)	Anti–lock brake indicator, control
7	1001 (WH/YE)	Voltage supplied at all times (overload protected)
8	398 (BK/YE)	Ground
9	–	not used
10	871 (YE)	Safety belt indicator, control