C309 (BK)

14N104

O21
Power point, rear



F02163

Pin	Circuit	Circuit Function
1	ZA01 (WH/BU)	Voltage in Run or Accessory (overload protected)
2	ZAE1 (BK)	Ground

C311a (BK)

14N104

N431
Sliding door contact switch, left



F04163

Pin	Circuit	Circuit Function
1	–	not used
2	PH30 (WH/RD)	Door unlock, output
3	SC26 (VT)	Door unlock, switch sense
4	PH48 (GN/YE)	Door lock, output

C311b (WH)

14A507

N431
Sliding door contact switch, left

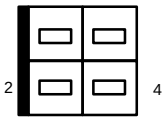

F04043

Pin	Circuit	Circuit Function
1	PH31 (WH/RD)	Door unlock, output
2	PH46 (GN/YE)	Door lock, output
3	–	not used
4	SC24 (VT)	Door unlock, switch sense

C312 (WH)

14A333

N424
Rear blower motor switch (rear)

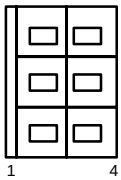

F06116

Pin	Circuit	Circuit Function
1	HB16 (GN)	Rear blower motor resistor assembly, to switch - Low
2	HB15 (PK/BU)	Rear blower motor resistor assembly, to switch
3	–	not used
4	HB14 (YE/BK)	Rear fan switch relay, to switch - High
5	HB17 (BN)	Rear blower motor resistor assembly, to switch
6	HB11 (LG/BK)	Rear blower motor switch (rear), to Rear blower motor switch (front)

C313 (BK)

14A333

N430
Sliding door ajar switch, right



F01035

Pin	Circuit	Circuit Function
1	LI94 (RD/GN)	Sliding door ajar switch, right

C315 (GY)

14A507

M212
Door lock actuator assembly, left sliding door

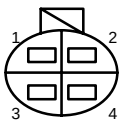

F04159

Pin	Circuit	Circuit Function
1	PH50 (GN/YE)	Door lock, output
2	PH31 (WH/RD)	Door unlock, output
3	SC24 (VT)	Door unlock, switch sense
4	PH46 (GN/YE)	Door lock, output