C704 (BK)

14632/19A017

Door lock actuator,
left rear (218A43)

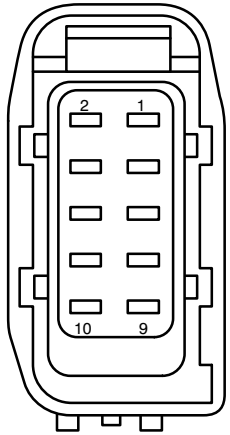

F10089

Pin	Circuit	Circuit function
1	–	not used
2	117 (PK/BK)	Door lock, output
3	–	not used
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	–	not used
8	760 (PK/LB)	Door ajar switch, left rear
9	–	not used
10	118 (PK/OG)	Door unlock, output

C801 (GY)

14632

Window adjust
switch, right rear
(14A412)

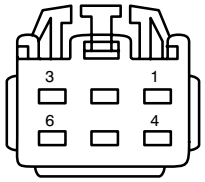

F06213

Pin	Circuit	Circuit function
1	316 (YE/LB)	Window switch, feed, right rear, Down
2	884 (YE/BK)	Window switch, to, Window motor, right rear
3	170 (RD/LB)	Accessory delay relay, switched power, output
4	–	not used
5	885 (YE/LB)	Window switch, to, Window motor, right rear
6	317 (GY/OG)	Window switch, feed, right rear, Up

C802 (BK)

14632/19A017

Speaker, right rear
(18808)

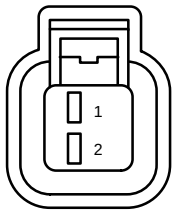

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –