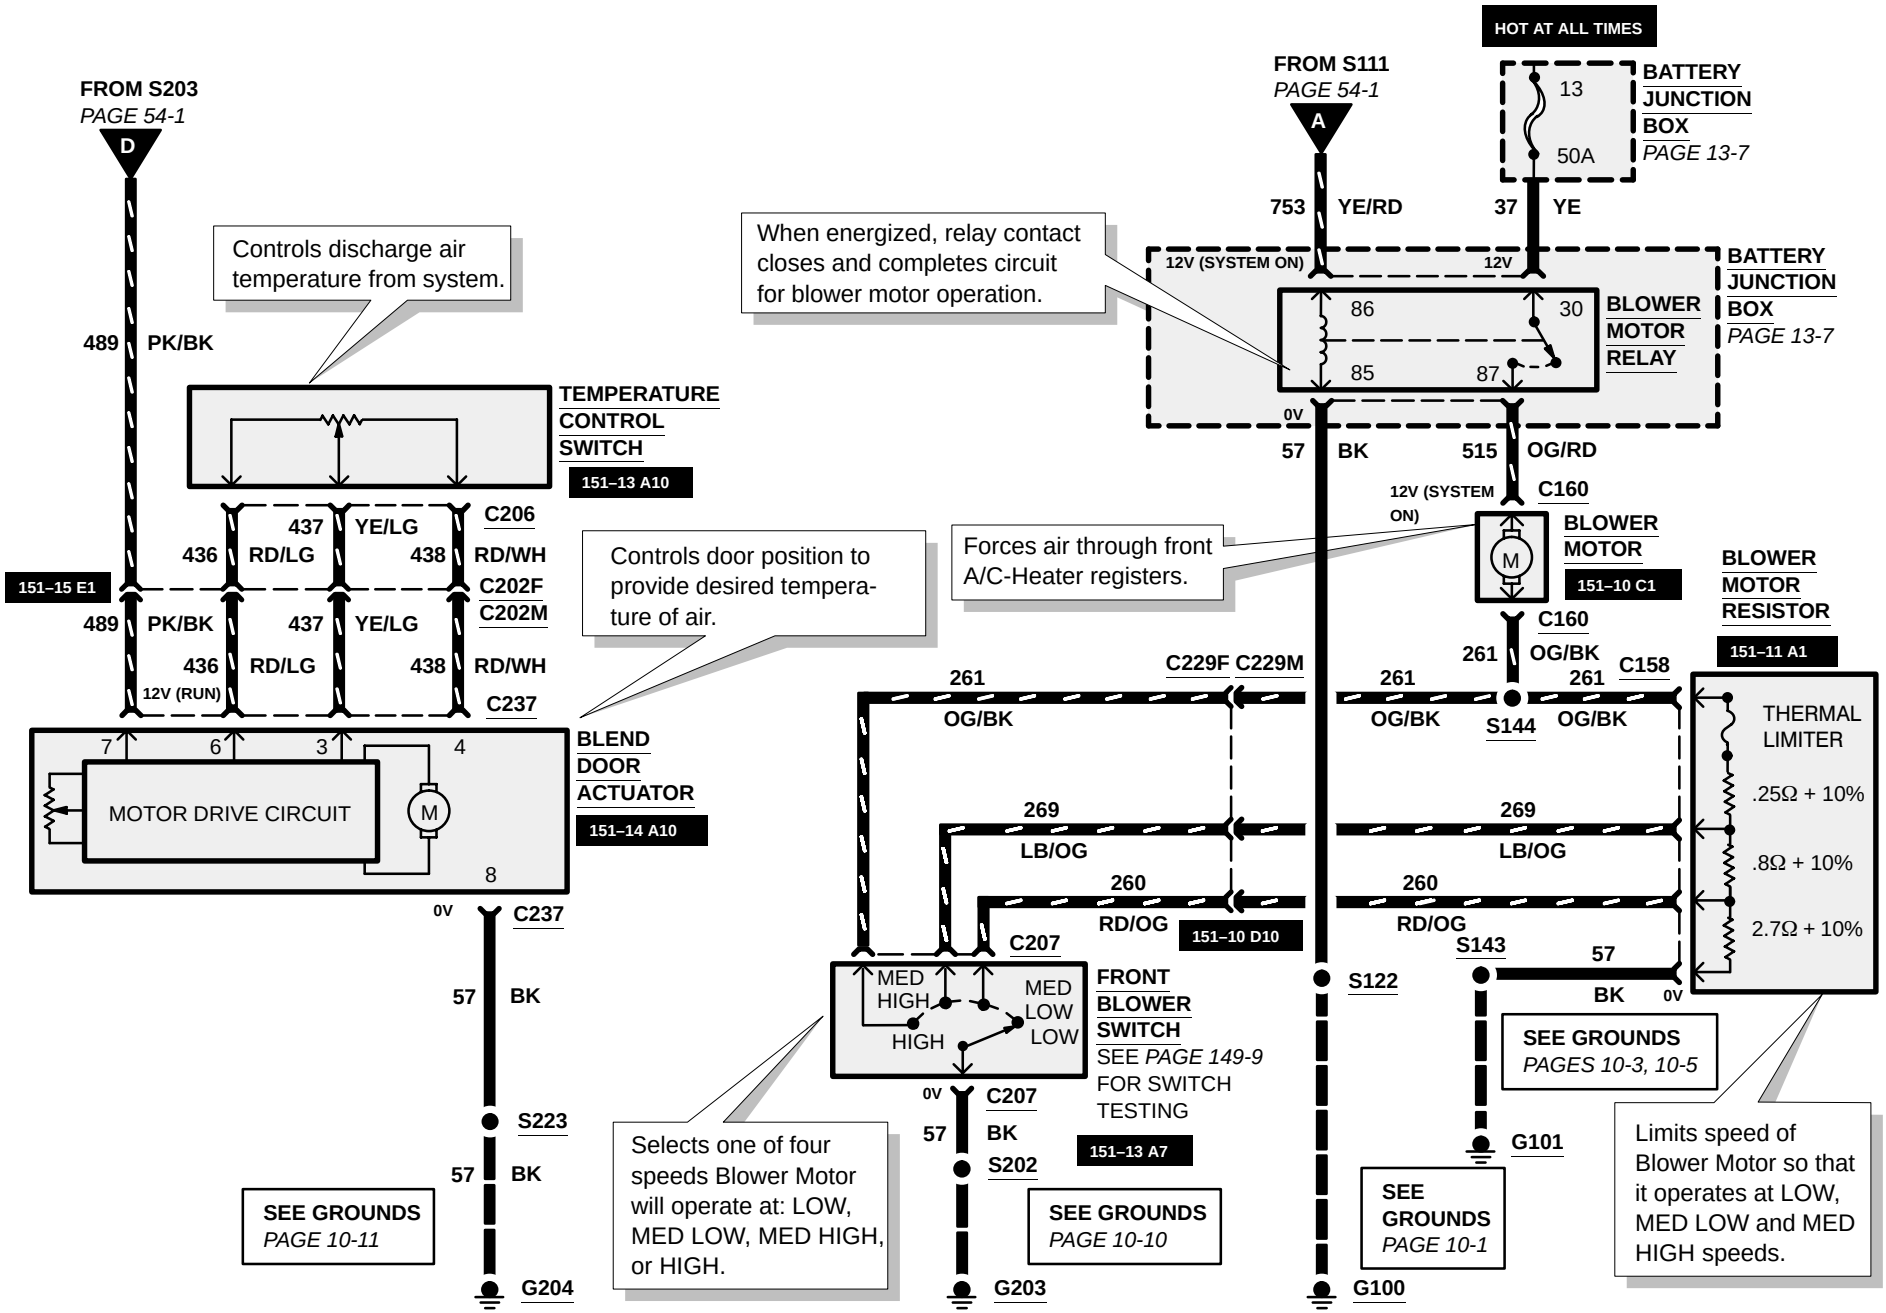
FROM S203
PAGE 54-1
D
Controls discharge air temperature from system.
489 PK/BK
TEMPERATURE CONTROL SWITCH
151–13 A10
437 YE/LG
436 RD/LG
C206
438 RD/WH
C202F
C202M
151–15 E1
489 PK/BK
437 YE/LG
436 RD/LG
438 RD/WH
12V (RUN)
C237
Controls door position to provide desired temperature of air.
7
6
3
4
MOTOR DRIVE CIRCUIT
M
8
BLEND DOOR ACTUATOR
151–14 A10
0V
C237
57 BK
S223
57 BK
G204
SEE GROUNDS
PAGE 10-11
HOT AT ALL TIMES
FROM S111
PAGE 54-1
A
13
50A
BATTERY JUNCTION BOX
PAGE 13-7
753 YE/RD
37 YE
When energized, relay contact closes and completes circuit for blower motor operation.
12V (SYSTEM ON)
12V
86
30
85
87
BLOWER MOTOR RELAY
BATTERY JUNCTION BOX
PAGE 13-7
0V
57 BK
515 OG/RD
C160
12V (SYSTEM ON)
Forces air through front A/C-Heater registers.
M
BLOWER MOTOR
151–10 C1
BLOWER MOTOR RESISTOR
151–11 A1
C160
261 OG/BK
C158
C229F C229M
261 OG/BK
261 OG/BK
S144
261 OG/BK
THERMAL LIMITER
.25Ω + 10%
.8Ω + 10%
2.7Ω + 10%
269 LB/OG
269 LB/OG
260 RD/OG
260 RD/OG
151–10 D10
C207
MED HIGH
HIGH
MED LOW
LOW
FRONT BLOWER SWITCH
SEE PAGE 149-9 FOR SWITCH TESTING
151–13 A7
S143
57 BK
0V
S122
SEE GROUNDS
PAGES 10-3, 10-5
G101
Selects one of four speeds Blower Motor will operate at: LOW, MED LOW, MED HIGH, or HIGH.
0V
C207
57 BK
S202
SEE GROUNDS
PAGE 10-10
G203
SEE GROUNDS
PAGE 10-1
G100
Limits speed of Blower Motor so that it operates at LOW, MED LOW and MED HIGH speeds.