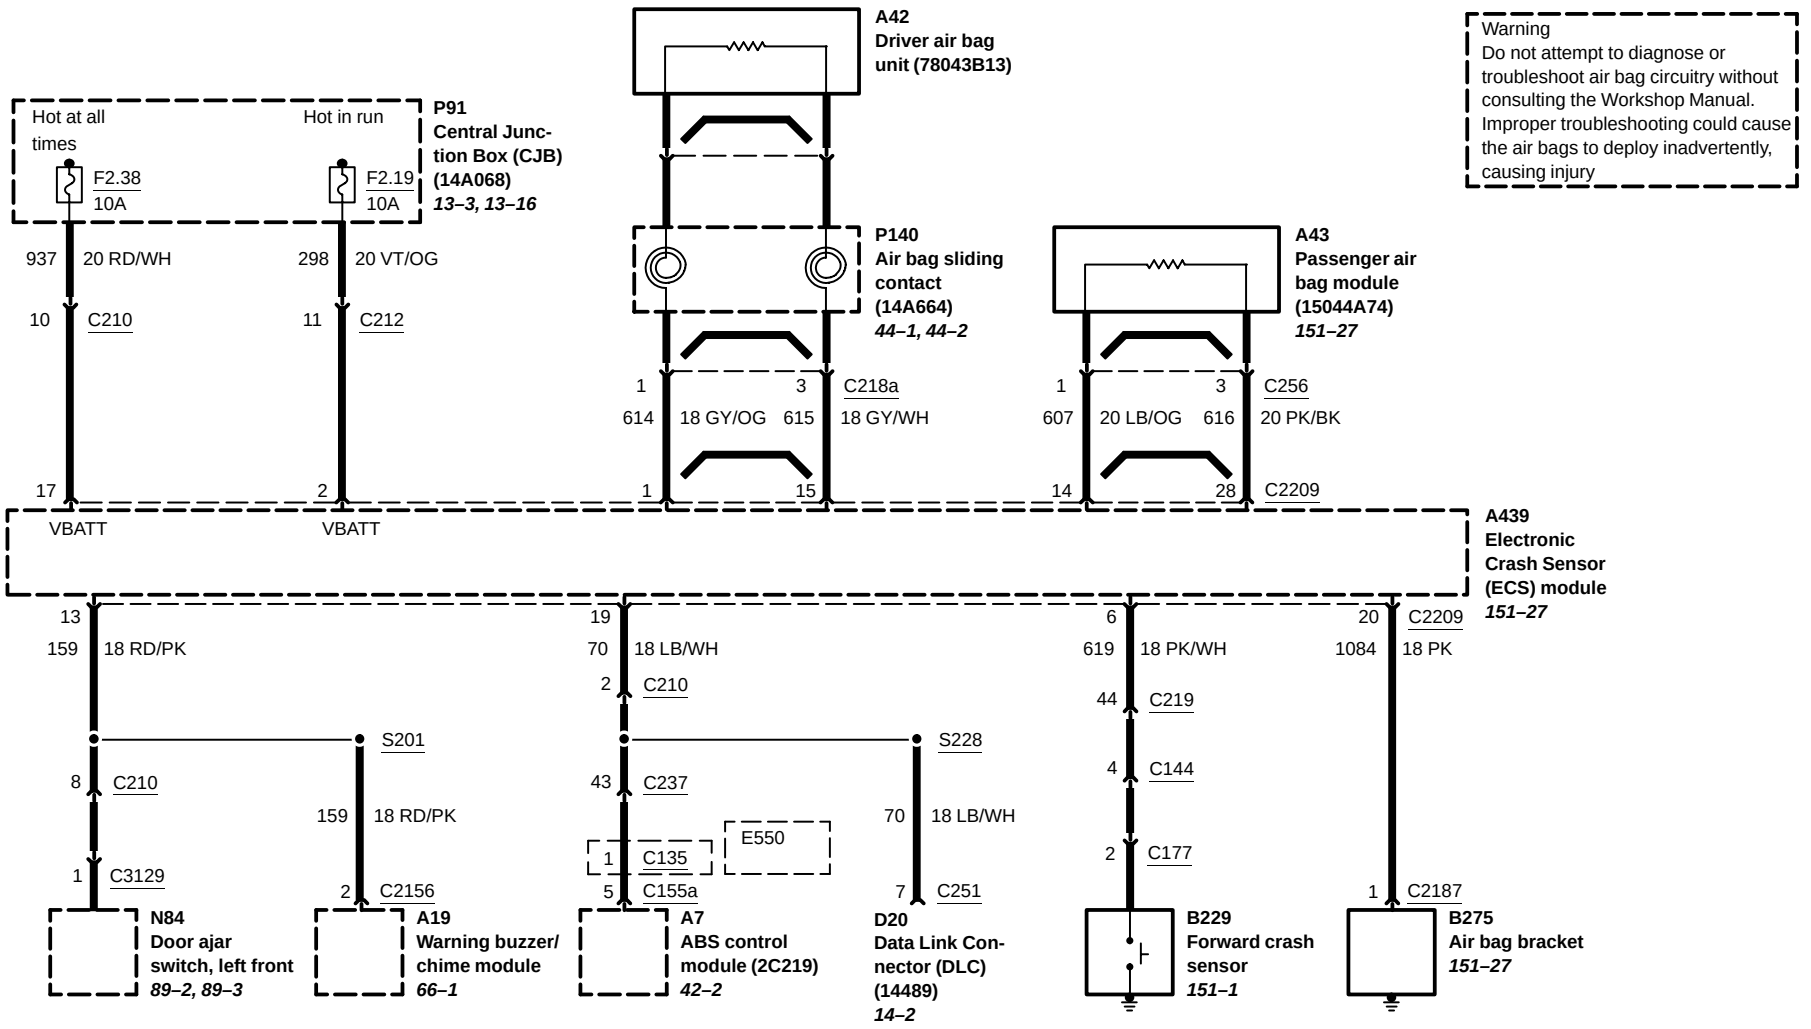
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury
A42
Driver air bag unit (78043B13)
P91
Central Junction Box (CJB) (14A068)
13–3, 13–16
Hot at all times
Hot in run
F2.38
10A
F2.19
10A
937
20 RD/WH
298
20 VT/OG
10
C210
11
C212
17
2
VBATT
VBATT
P140
Air bag sliding contact (14A664)
44–1, 44–2
1
614
18 GY/OG
3
615
18 GY/WH
C218a
1
15
A43
Passenger air bag module (15044A74)
151–27
1
607
20 LB/OG
3
616
20 PK/BK
C256
14
28
C2209
A439
Electronic Crash Sensor (ECS) module
151–27
13
159
18 RD/PK
19
70
18 LB/WH
6
619
18 PK/WH
20
1084
18 PK
C2209
2
C210
44
C219
4
C144
2
C177
8
C210
1
C3129
S201
159
18 RD/PK
2
C2156
43
C237
S228
70
18 LB/WH
1
C135
E550
5
C155a
7
C251
1
C2187
N84
Door ajar switch, left front
89–2, 89–3
A19
Warning buzzer/ chime module
66–1
A7
ABS control module (2C219)
42–2
D20
Data Link Connector (DLC) (14489)
14–2
B229
Forward crash sensor
151–1
B275
Air bag bracket
151–27