C1245b

9D930

K382
Manifold intake air heater relay

F01025

Pin	Circuit	Circuit function
1	38 (BK/OG)	Voltage supplied at all times (overload protected)

C1245c

9D930

K382
Manifold intake air heater relay

F01025

Pin	Circuit	Circuit function
1	462 (VT)	Manifold intake air heater relay, to, Powertrain Control Module (PCM) (12A650)

C1245d

9D930

K382
Manifold intake air heater relay

F01025

Pin	Circuit	Circuit function
1	3996 (RD/YE)	output, to, Manifold intake air heater relay
	(RD)	Manifold intake air heater relay, to, Air intake heater grid

C1249a

14N144/14300

O3
Battery II

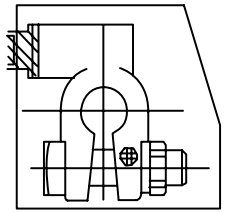

F01155

Pin	Circuit	Circuit function
1	2037 (RD)	Battery cable +

C1249b

14301

O3
Battery II

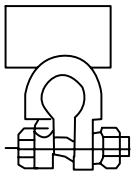

F01157

Pin	Circuit	Circuit function
1	2057 (BK)	Battery cable –

C1250

12A581

K132
Stop lamp relay

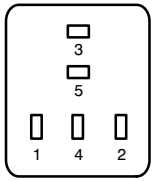

F05139

Pin	Circuit	Circuit function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground
3	810 (RD/LG)	Brake pedal position switch (13480), input
4	–	not used
5	10 (LG/RD)	Voltage supplied at all times (overload protected)