## C485 (BK)

**14A005/18C620**

Speaker, right rear
(18808)

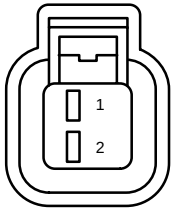


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 802 (OG/RD) | Speaker, right rear (18808) + |
| 2 | 803 (BN/PK) | Speaker, right rear (18808) - |

## C487 (GN)

**18C620**

Reversing lamp, left
(13411)




F03033

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 140 (BK/PK) | Voltage supplied in reverse |

## C488 (GN)

**18C620**

Reversing lamp,
right (13411)

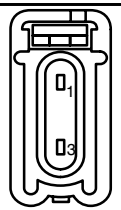


F03033

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 140 (BK/PK) | Voltage supplied in reverse |

## C489

**13B783**

Cargo space lamp

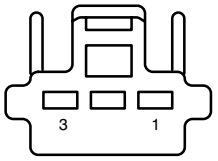


F03173

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 2 | 57 (BK) | Ground |
| 3 | 705 (LG/OG) | Battery saver relay, switched power |

## C490 (GY)

**17A413**

License lamps
(13550)

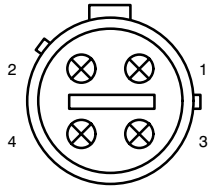


F04205

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 14 (BN) | Power, Exterior lamps |
| 3 | 57 (BK) | Ground |
| 4 | 14 (BN) | Power, Exterior lamps |

## C491 (GY)

**17A413**

Pulse stretcher
module

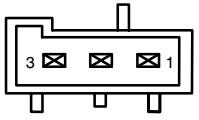


F03157

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 543 (DG) | Voltage supplied at all times (overload protected) |
| 2 | 1088 (PK/WH) | Door unlock, input |
| 3 | 57 (BK) | Ground |