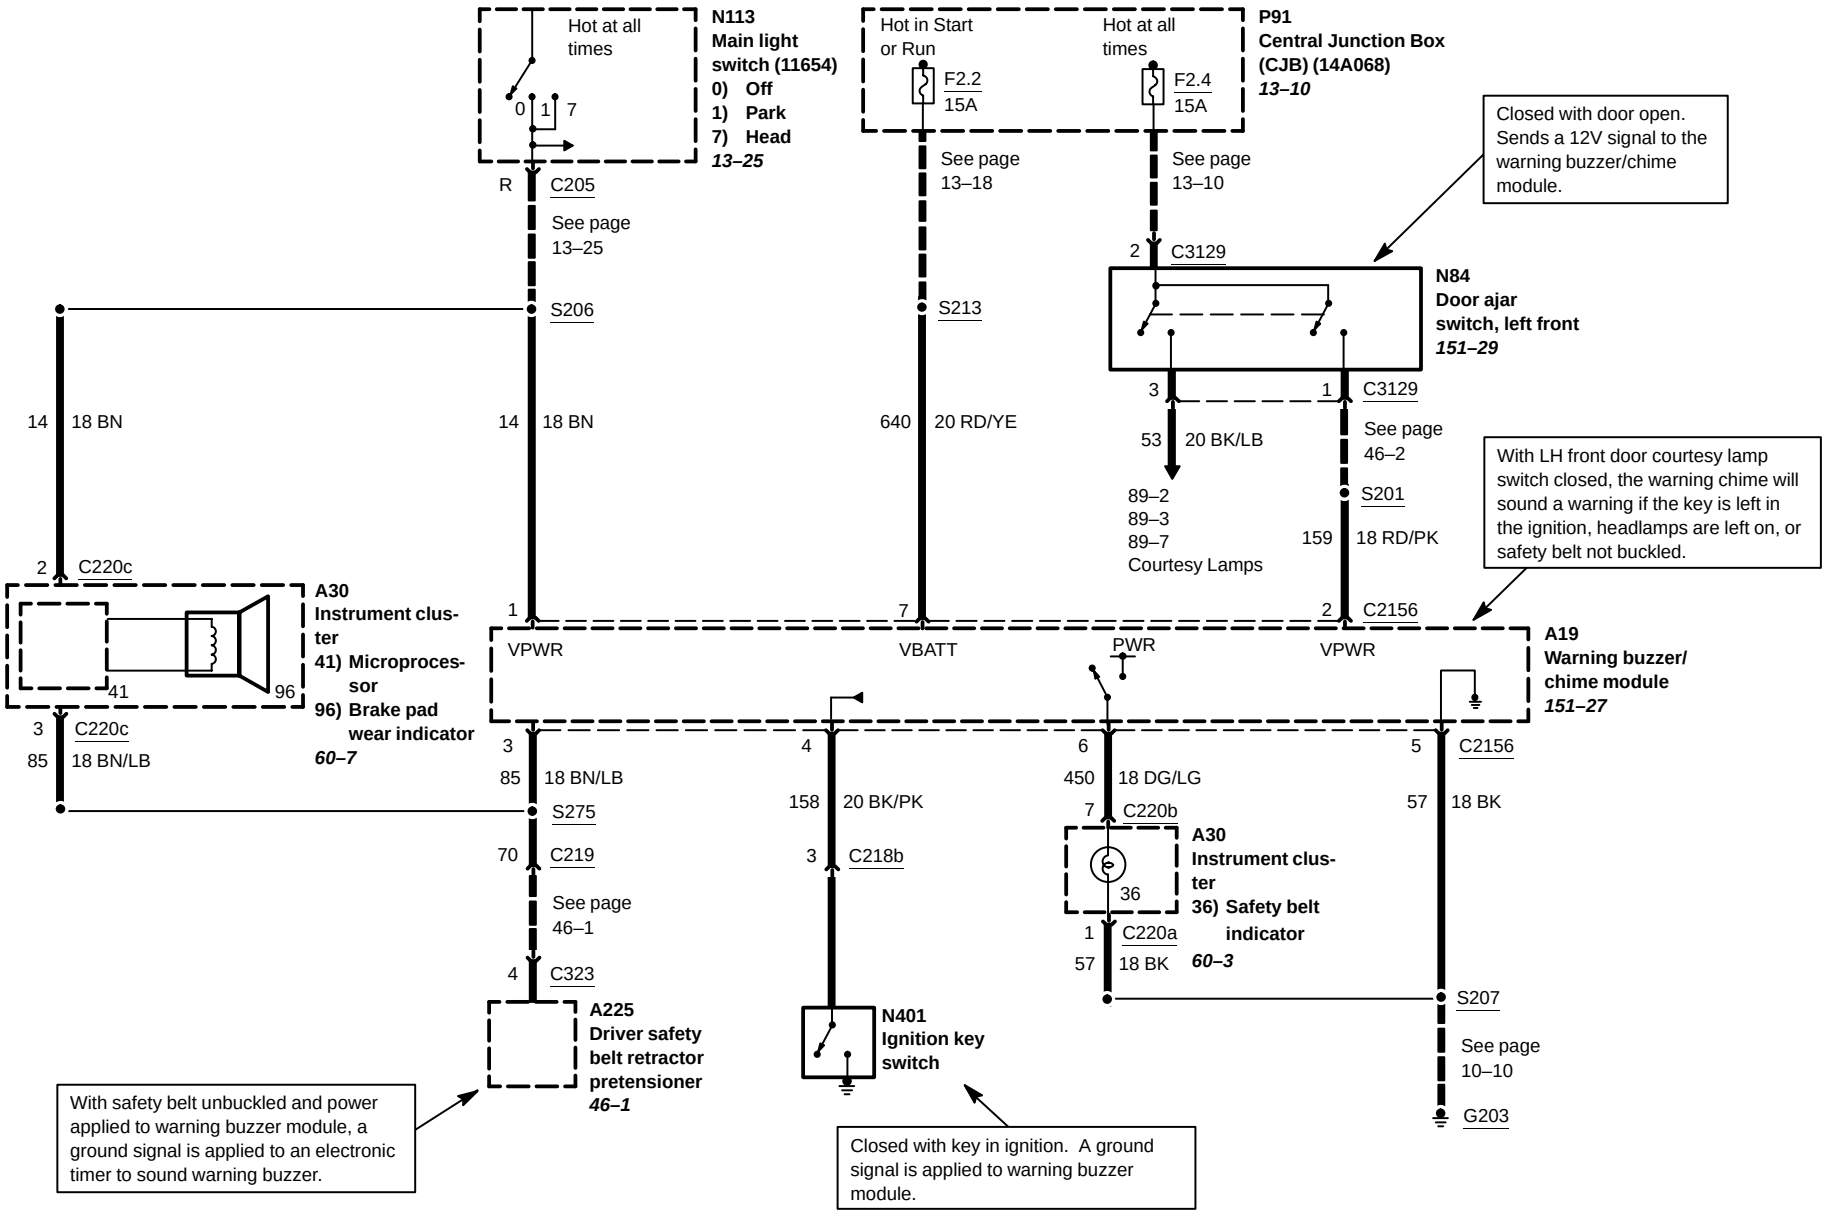
Hot at all times
N113
Main light switch (11654)
0) Off
1) Park
7) Head
13–25
Hot in Start or Run
Hot at all times
P91
Central Junction Box (CJB) (14A068)
13–10
F2.2
15A
F2.4
15A
See page 13–18
See page 13–10
Closed with door open. Sends a 12V signal to the warning buzzer/chime module.
R
C205
See page 13–25
2
C3129
N84
Door ajar switch, left front
151–29
S206
S213
3
1
C3129
14
18 BN
14
18 BN
640
20 RD/YE
53
20 BK/LB
See page 46–2
89–2
89–3
89–7
Courtesy Lamps
S201
159
18 RD/PK
With LH front door courtesy lamp switch closed, the warning chime will sound a warning if the key is left in the ignition, headlamps are left on, or safety belt not buckled.
2
C220c
A30
Instrument cluster
41) Microprocessor
96) Brake pad wear indicator
60–7
1
7
2
C2156
A19
Warning buzzer/chime module
151–27
VPWR
VBATT
PWR
VPWR
41
96
3
C220c
85
18 BN/LB
3
85
18 BN/LB
4
158
20 BK/PK
6
450
18 DG/LG
5
C2156
57
18 BK
S275
3
C218b
7
C220b
70
C219
A30
Instrument cluster
36) Safety belt indicator
60–3
36
See page 46–1
1
C220a
57
18 BK
4
C323
S207
See page 10–10
A225
Driver safety belt retractor pretensioner
46–1
N401
Ignition key switch
G203
With safety belt unbuckled and power applied to warning buzzer module, a ground signal is applied to an electronic timer to sound warning buzzer.
Closed with key in ignition. A ground signal is applied to warning buzzer module.