92-1 EXTERIOR LAMPS

2001 CONTINENTAL
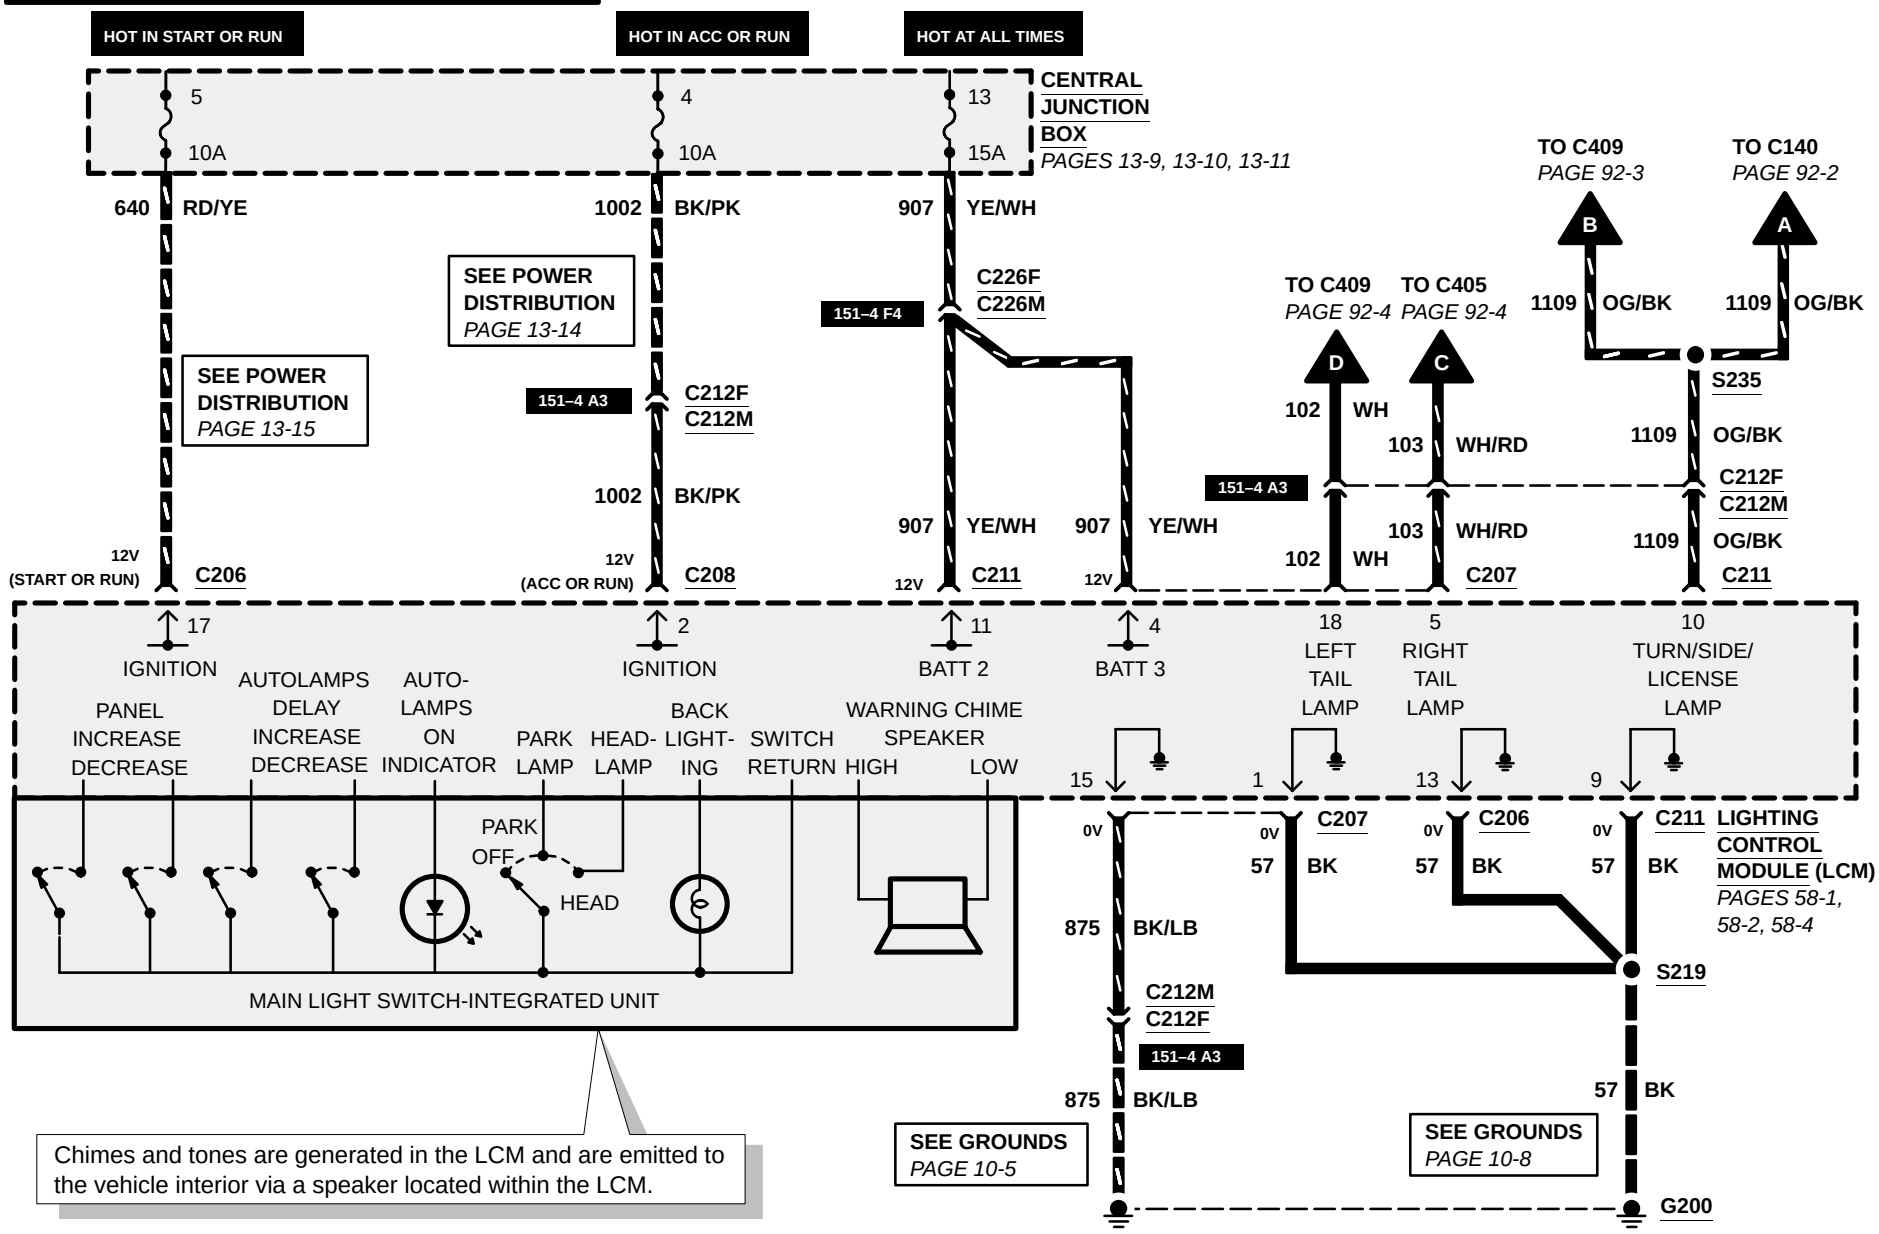
For diagnostic information, refer to Section 417-01 of the Workshop Manual.