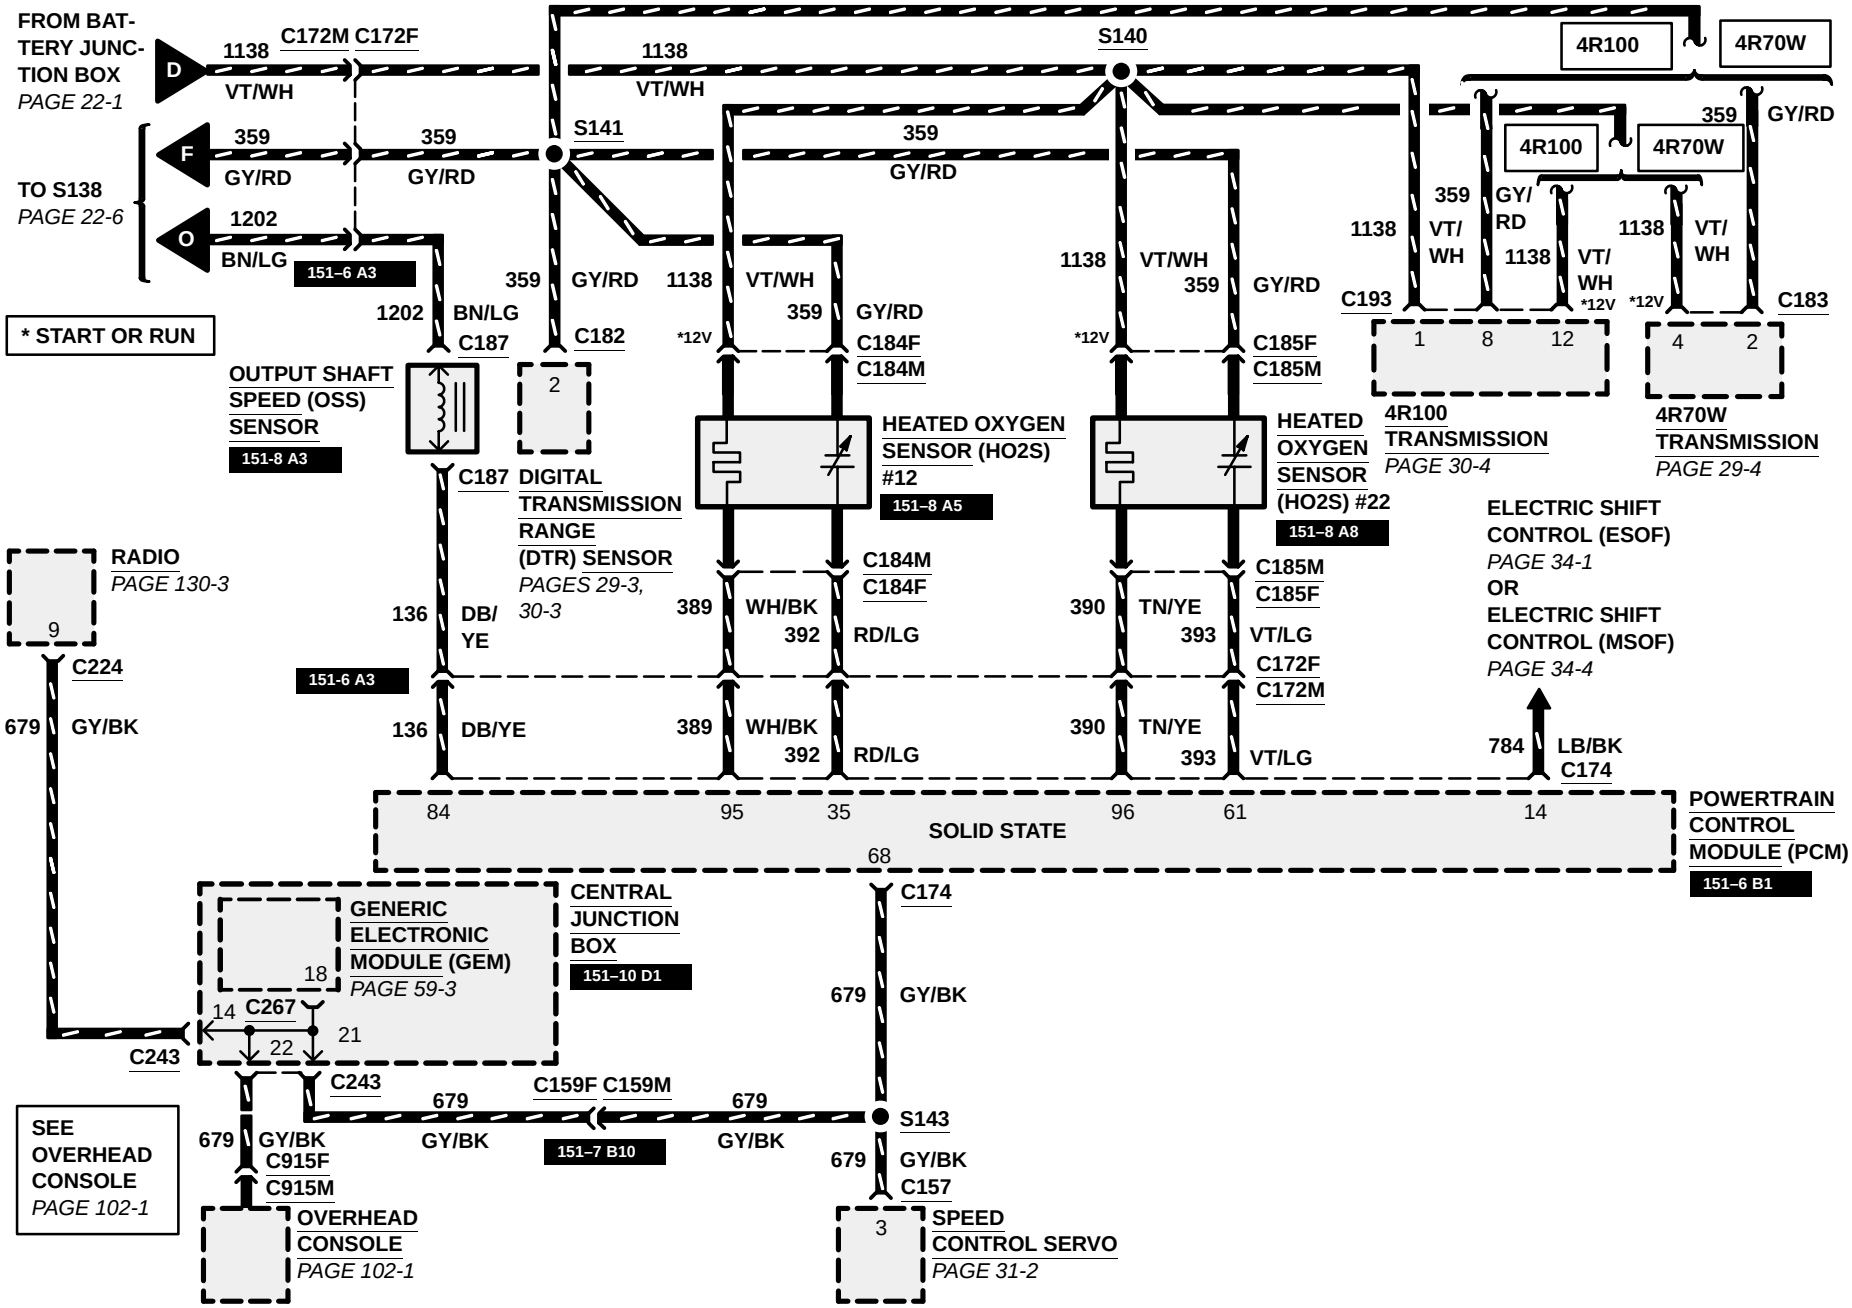
FROM BATTERY JUNCTION BOX
PAGE 22-1
D
1138
C172M C172F
VT/WH
F
359
GY/RD
359
GY/RD
TO S138
PAGE 22-6
O
1202
BN/LG
151–6 A3
* START OR RUN
1202
BN/LG
C187
OUTPUT SHAFT SPEED (OSS) SENSOR
151-8 A3
C187
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGES 29-3, 30-3
136
DB/YE
151-6 A3
136
DB/YE
RADIO
PAGE 130-3
9
C224
679
GY/BK
C243
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-3
18
14
C267
21
22
CENTRAL JUNCTION BOX
151–10 D1
C243
679
GY/BK
C915F
C915M
OVERHEAD CONSOLE
PAGE 102-1
SEE OVERHEAD CONSOLE
PAGE 102-1
679
GY/BK
C159F C159M
679
GY/BK
151–7 B10
679
GY/BK
S143
679
GY/BK
C157
3
SPEED CONTROL SERVO
PAGE 31-2
359
GY/RD
S141
2
C182
1138
VT/WH
S140
1138
VT/WH
359
GY/RD
359
GY/RD
*12V
C184F
C184M
HEATED OXYGEN SENSOR (HO2S) #12
151–8 A5
C184M
C184F
389
WH/BK
392
RD/LG
389
WH/BK
392
RD/LG
1138
VT/WH
359
GY/RD
*12V
C185F
C185M
HEATED OXYGEN SENSOR (HO2S) #22
151–8 A8
C185M
C185F
390
TN/YE
393
VT/LG
390
TN/YE
393
VT/LG
C172F
C172M
4R100
4R70W
359
GY/RD
4R100
4R70W
C193
1
8
12
4
2
C183
1138
VT/WH
359
GY/RD
1138
VT/WH
*12V
1138
VT/WH
*12V
4R100 TRANSMISSION
PAGE 30-4
4R70W TRANSMISSION
PAGE 29-4
ELECTRIC SHIFT CONTROL (ESOF)
PAGE 34-1
OR
ELECTRIC SHIFT CONTROL (MSOF)
PAGE 34-4
784
LB/BK
C174
84
95
35
96
61
14
SOLID STATE
68
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1
C174
679
GY/BK