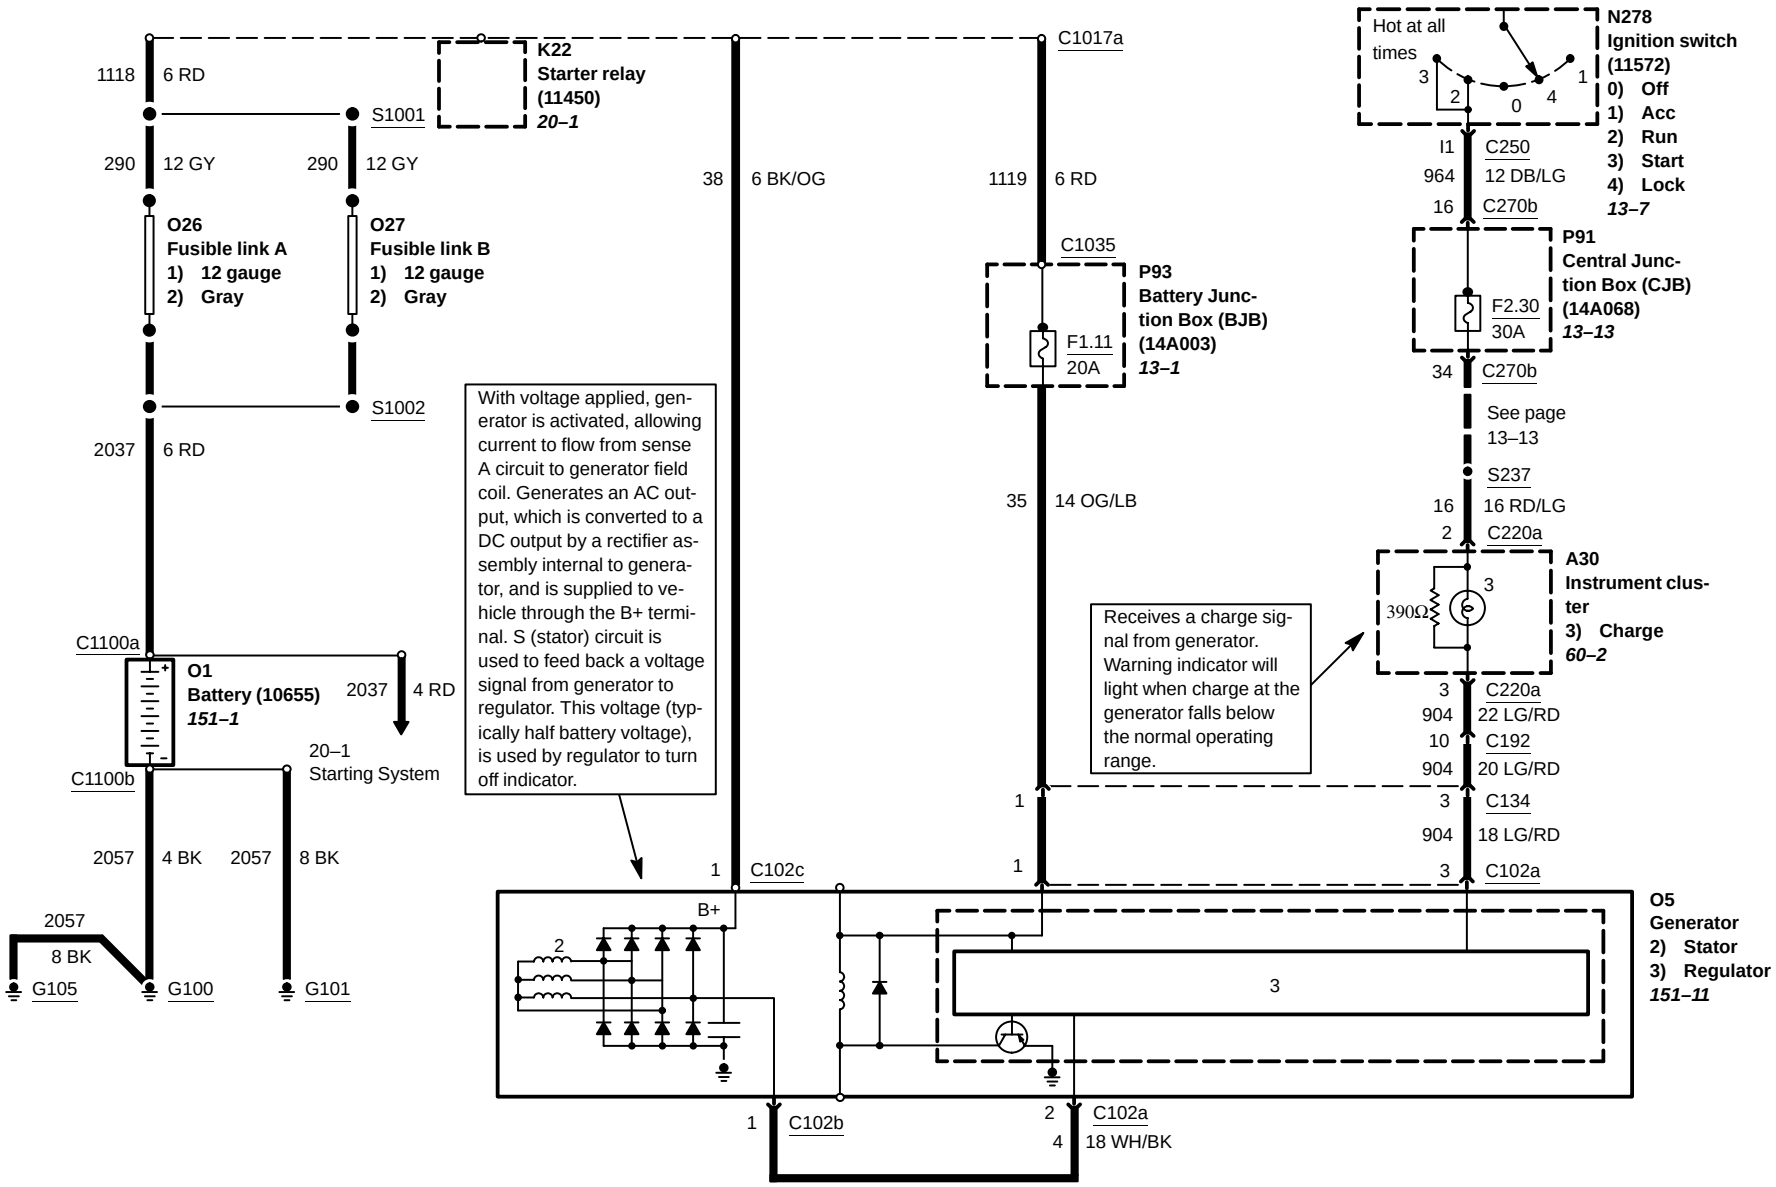
1118 6 RD
S1001
290 12 GY
290 12 GY
O26
Fusible link A
1) 12 gauge
2) Gray
O27
Fusible link B
1) 12 gauge
2) Gray
S1002
2037 6 RD
K22
Starter relay
(11450)
20–1
38 6 BK/OG
C1017a
1119 6 RD
C1035
P93
Battery Junction Box (BJB)
(14A003)
13–1
F1.11
20A
35 14 OG/LB
Hot at all times
N278
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
13–7
I1 C250
964 12 DB/LG
16 C270b
P91
Central Junction Box (CJB)
(14A068)
13–13
F2.30
30A
34 C270b
See page 13–13
S237
16 16 RD/LG
2 C220a
A30
Instrument cluster
3) Charge
60–2
390Ω
3 C220a
904 22 LG/RD
10 C192
904 20 LG/RD
3 C134
904 18 LG/RD
3 C102a
C1100a
O1
Battery (10655)
151–1
2037 4 RD
20–1
Starting System
C1100b
2057 4 BK
2057 8 BK
2057
8 BK
G105
G100
G101
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
Receives a charge signal from generator. Warning indicator will light when charge at the generator falls below the normal operating range.
1 C102c
B+
2
3
O5
Generator
2) Stator
3) Regulator
151–11
1 C102b
2 C102a
4 18 WH/BK