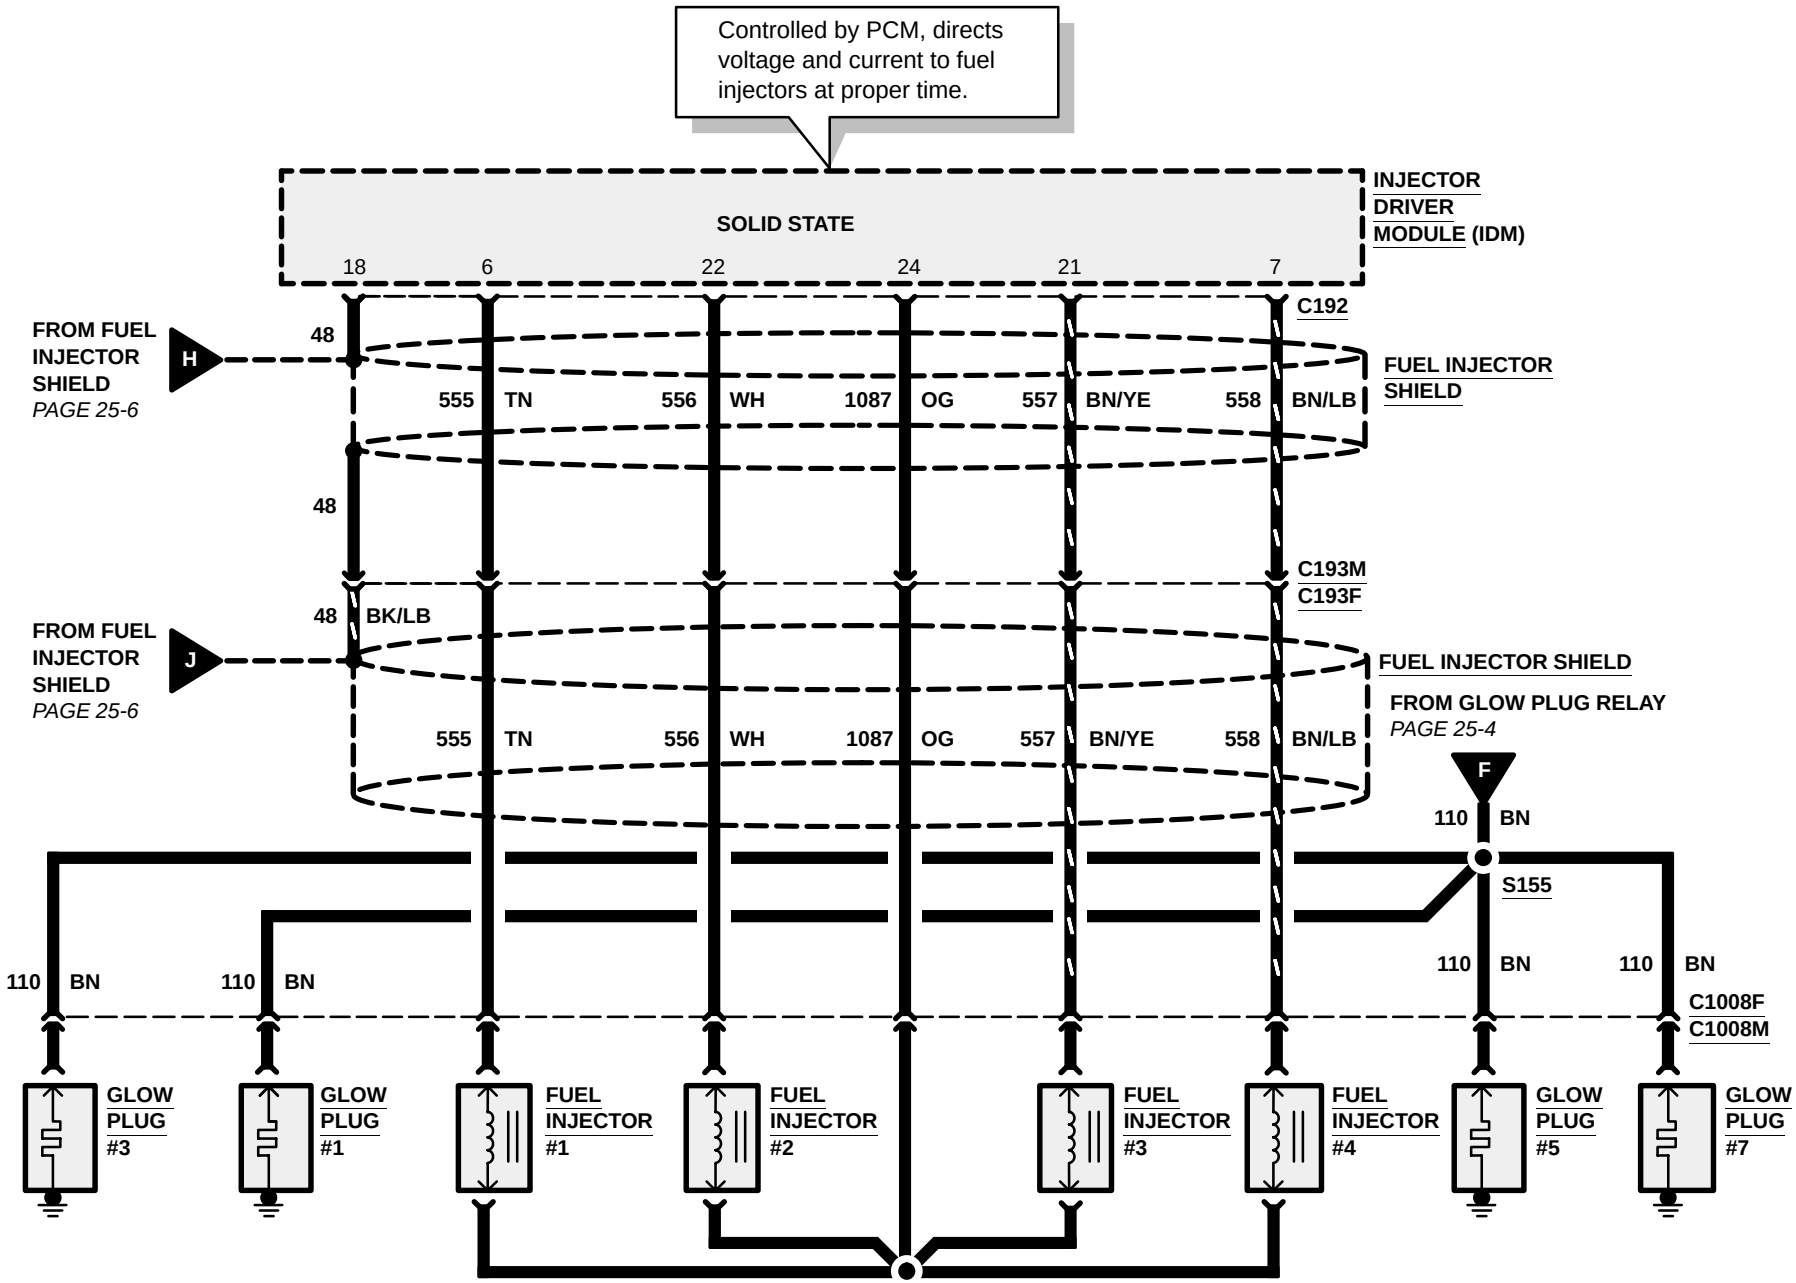
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
INJECTOR DRIVER MODULE (IDM)
18
6
22
24
21
7
C192
FROM FUEL INJECTOR SHIELD
PAGE 25-6
H
48
555 TN
556 WH
1087 OG
557 BN/YE
558 BN/LB
FUEL INJECTOR SHIELD
48
C193M
C193F
48 BK/LB
FROM FUEL INJECTOR SHIELD
PAGE 25-6
J
FUEL INJECTOR SHIELD
FROM GLOW PLUG RELAY
PAGE 25-4
F
110 BN
S155
110 BN
110 BN
110 BN
110 BN
C1008F
C1008M
GLOW PLUG #3
GLOW PLUG #1
FUEL INJECTOR #1
FUEL INJECTOR #2
FUEL INJECTOR #3
FUEL INJECTOR #4
GLOW PLUG #5
GLOW PLUG #7