C802

14632

Y19
Speaker, right rear
(18808)

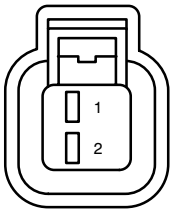

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C803

14632

M117
Power window motor, right rear
(23394)

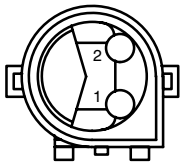

F02004

Pin	Circuit	Circuit function
1	882 (BN/YE)	Window switch to, Window motor, right rear
2	881 (BN)	Window switch to, Window motor, right rear

C804

14632

M65
Door lock actuator, right rear (218A42)

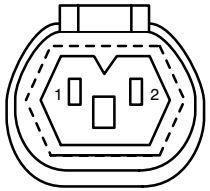

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C820a

14632

N238
Door ajar switch, passenger side rear
(14018)

F01065

Pin	Circuit	Circuit function
1	760 (PK/LB)	Door ajar switch, right rear

C820b

14632

N238
Door ajar switch, passenger side rear
(14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C904

13B472

E174
High mounted stoplamp (13A613)

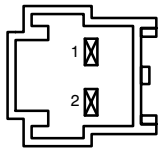

F02077

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	569 (DG)	Brake pedal position switch (13480), to stoplamps