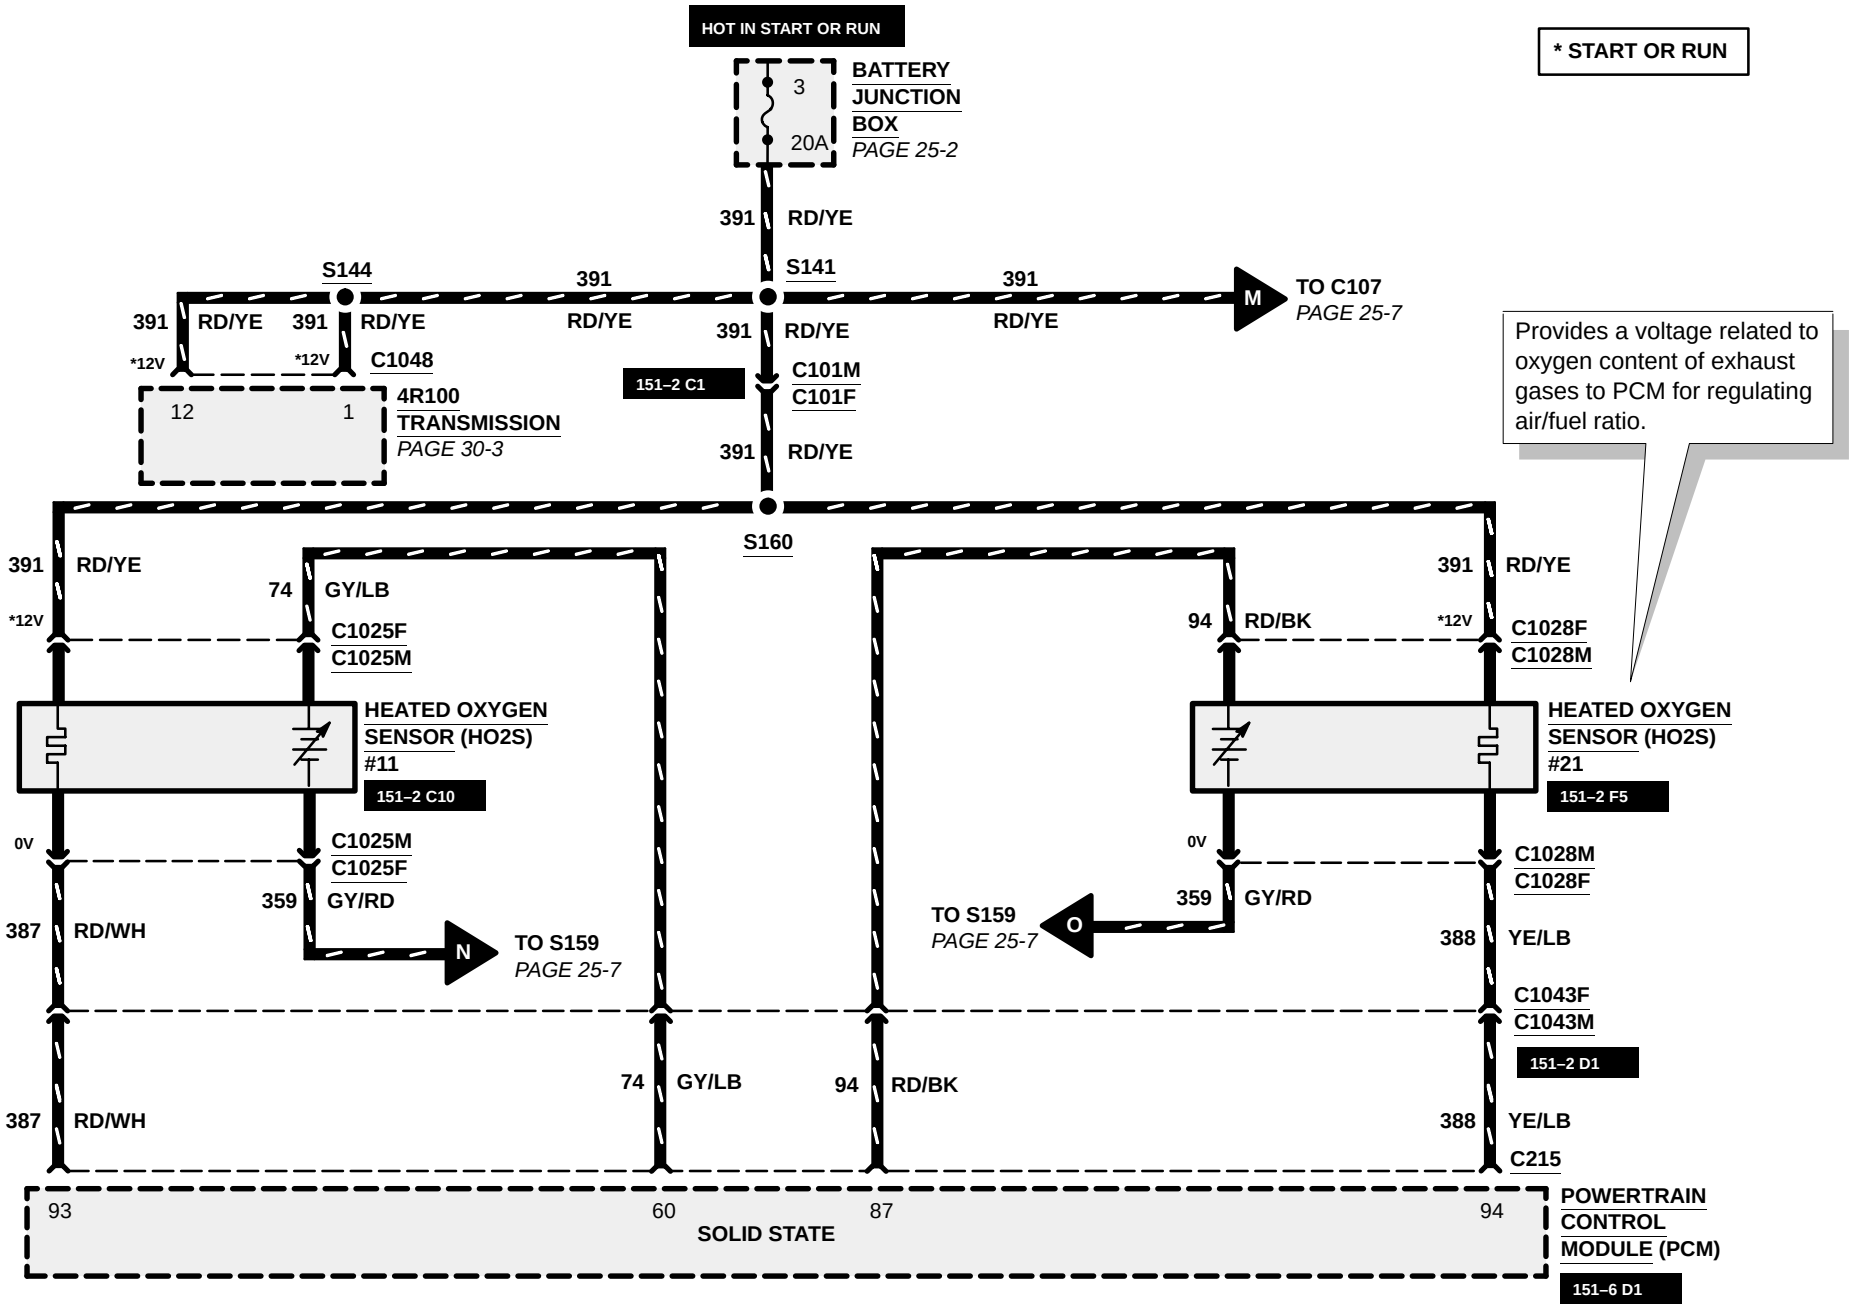
HOT IN START OR RUN
* START OR RUN
BATTERY JUNCTION BOX
PAGE 25-2
3
20A
391 RD/YE
S144
S141
391
391 RD/YE
391 RD/YE
391 RD/YE
391 RD/YE
391 RD/YE
TO C107
PAGE 25-7
M
*12V
*12V
C1048
4R100 TRANSMISSION
PAGE 30-3
12
1
151–2 C1
C101M
C101F
391 RD/YE
S160
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
391 RD/YE
*12V
74 GY/LB
C1025F
C1025M
HEATED OXYGEN SENSOR (HO2S) #11
151–2 C10
0V
C1025M
C1025F
359 GY/RD
387 RD/WH
TO S159
PAGE 25-7
N
74 GY/LB
387 RD/WH
94 RD/BK
391 RD/YE
*12V
C1028F
C1028M
HEATED OXYGEN SENSOR (HO2S) #21
151–2 F5
0V
C1028M
C1028F
359 GY/RD
TO S159
PAGE 25-7
O
388 YE/LB
C1043F
C1043M
151–2 D1
94 RD/BK
388 YE/LB
C215
93
60
87
94
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 D1