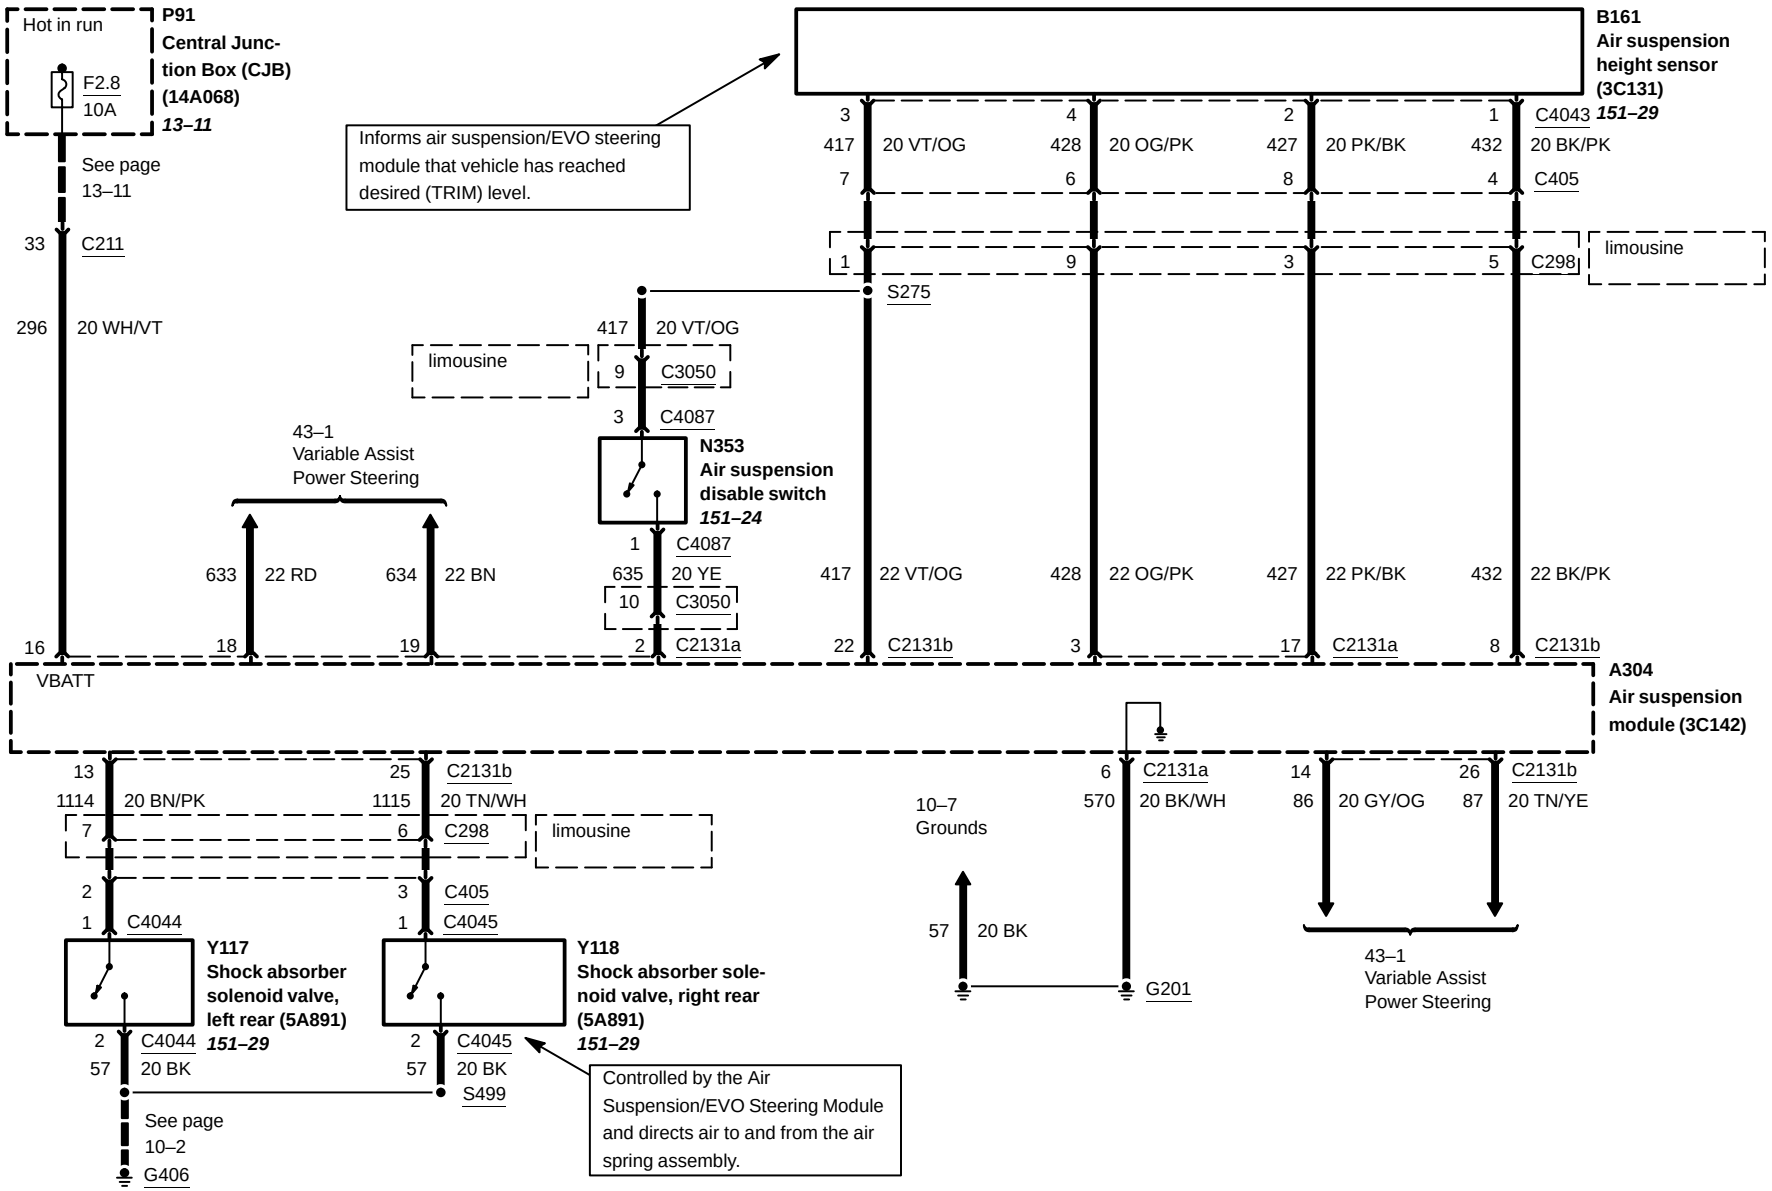
Hot in run
P91
Central Junction Box (CJB)
(14A068)
13–11
F2.8
10A
See page 13–11
33 C211
296 20 WH/VT
Informs air suspension/EVO steering module that vehicle has reached desired (TRIM) level.
B161
Air suspension height sensor (3C131)
151–29
3 417 20 VT/OG 7
4 428 20 OG/PK 6
2 427 20 PK/BK 8
1 432 20 BK/PK 4
C4043
C405
1 9 3 5 C298
limousine
S275
417 20 VT/OG
limousine
9 C3050
3 C4087
43–1
Variable Assist
Power Steering
N353
Air suspension disable switch
151–24
1 C4087
633 22 RD
634 22 BN
635 20 YE
10 C3050
417 22 VT/OG
428 22 OG/PK
427 22 PK/BK
432 22 BK/PK
16 18 19 2 C2131a 22 C2131b 3 17 C2131a 8 C2131b
VBATT
A304
Air suspension module (3C142)
13 1114 20 BN/PK 7
25 1115 20 TN/WH 6 C298
limousine
6 C2131a 570 20 BK/WH
14 86 20 GY/OG
26 87 20 TN/YE C2131b
10–7
Grounds
57 20 BK
G201
43–1
Variable Assist
Power Steering
2 1 C4044
3 1 C405 C4045
Y117
Shock absorber solenoid valve, left rear (5A891)
151–29
Y118
Shock absorber solenoid valve, right rear (5A891)
151–29
2 C4044 57 20 BK
2 C4045 57 20 BK S499
Controlled by the Air Suspension/EVO Steering Module and directs air to and from the air spring assembly.
See page 10–2
G406