## C220a

### 14401

A30
Instrument cluster

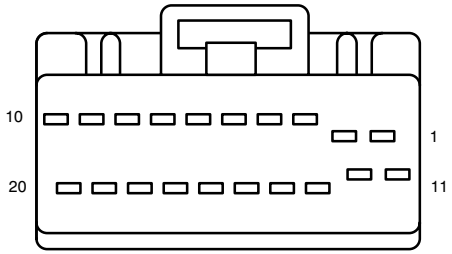


F20017

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 16 (RD/LG) | Voltage supplied in Start and Run (overload protected) |
| 3 | 904 (LG/RD) | Generator/Battery indicator, control |
| 4 | 210 (LB) | Four–wheel drive, High, indicator, control |
| 5 | 1017 (BK/WH) | Check cap indicator lamp |
| 6 | – | not used |
| 7 | 2 (WH/LB) | Turn lamps, feed, right front |
| 8 | – | not used |
| 9 | – | not used |
| 10 | 729 (RD/WH) | Voltage supplied at all times (overload protected) |
| 11 | 1003 (GY/YE) | Voltage in Run (overload protected) |
| 12 | 932 (GY/WH) | High beam, indicator, control |
| 13 | 608 (BK/YE) | Air bag indicator, control |
| 14 | 203 (OG/LB) | Cruise set, indicator, control |
| 15 | – | not used |
| 16 | 603 (DG) | Anti–lock brake indicator, control |
| 17 | 162 (LG/RD) | Parking brake switch (15A851) |
| 18 | 531 (DG/YE) | Brake fluid level switch (2L414), signal |
| 19 | 512 (TN/LG) | Brake indicator, control |
| 20 | 31 (WH/RD) | Engine oil pressure indicator, control |

## C220b

### 14401

A30
Instrument cluster

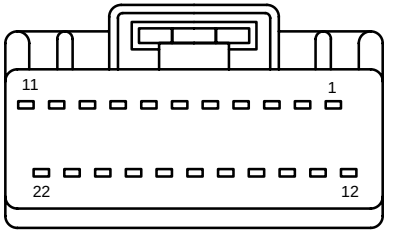


F22010

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 914 (TN/OG) | SCP Bus + |
| 2 | 915 (PK/LB) | SCP Bus – |
| 3 | 29 (YE/WH) | Fuel pump/fuel gauge sender |
| 4 | 3 (LG/WH) | Turn lamps, feed, left front |
| 5 | 433 (DG/OG) | Door ajar indicator, control |
| 6 | – | not used |
| 7 | – | not used |
| 8 | – | not used |
| 9 | – | not used |
| 10 | 450 (DG/LG) | Safety belt indicator, control |
| 11 | – | not used |
| 12 | – | not used |
| 13 | – | not used |
| 14 | 1216 (GY/OG) | RX, signal |
| 15 | 1215 (WH/LG) | TX, signal |
| 16 | – | not used |
| 17 | 676 (PK/OG) | Ground |
| 18 | – | not used |
| 19 | – | not used |
| 20 | – | not used |
| 21 | – | not used |
| 22 | 19 (LB/RD) | Instrument illumination, feed |