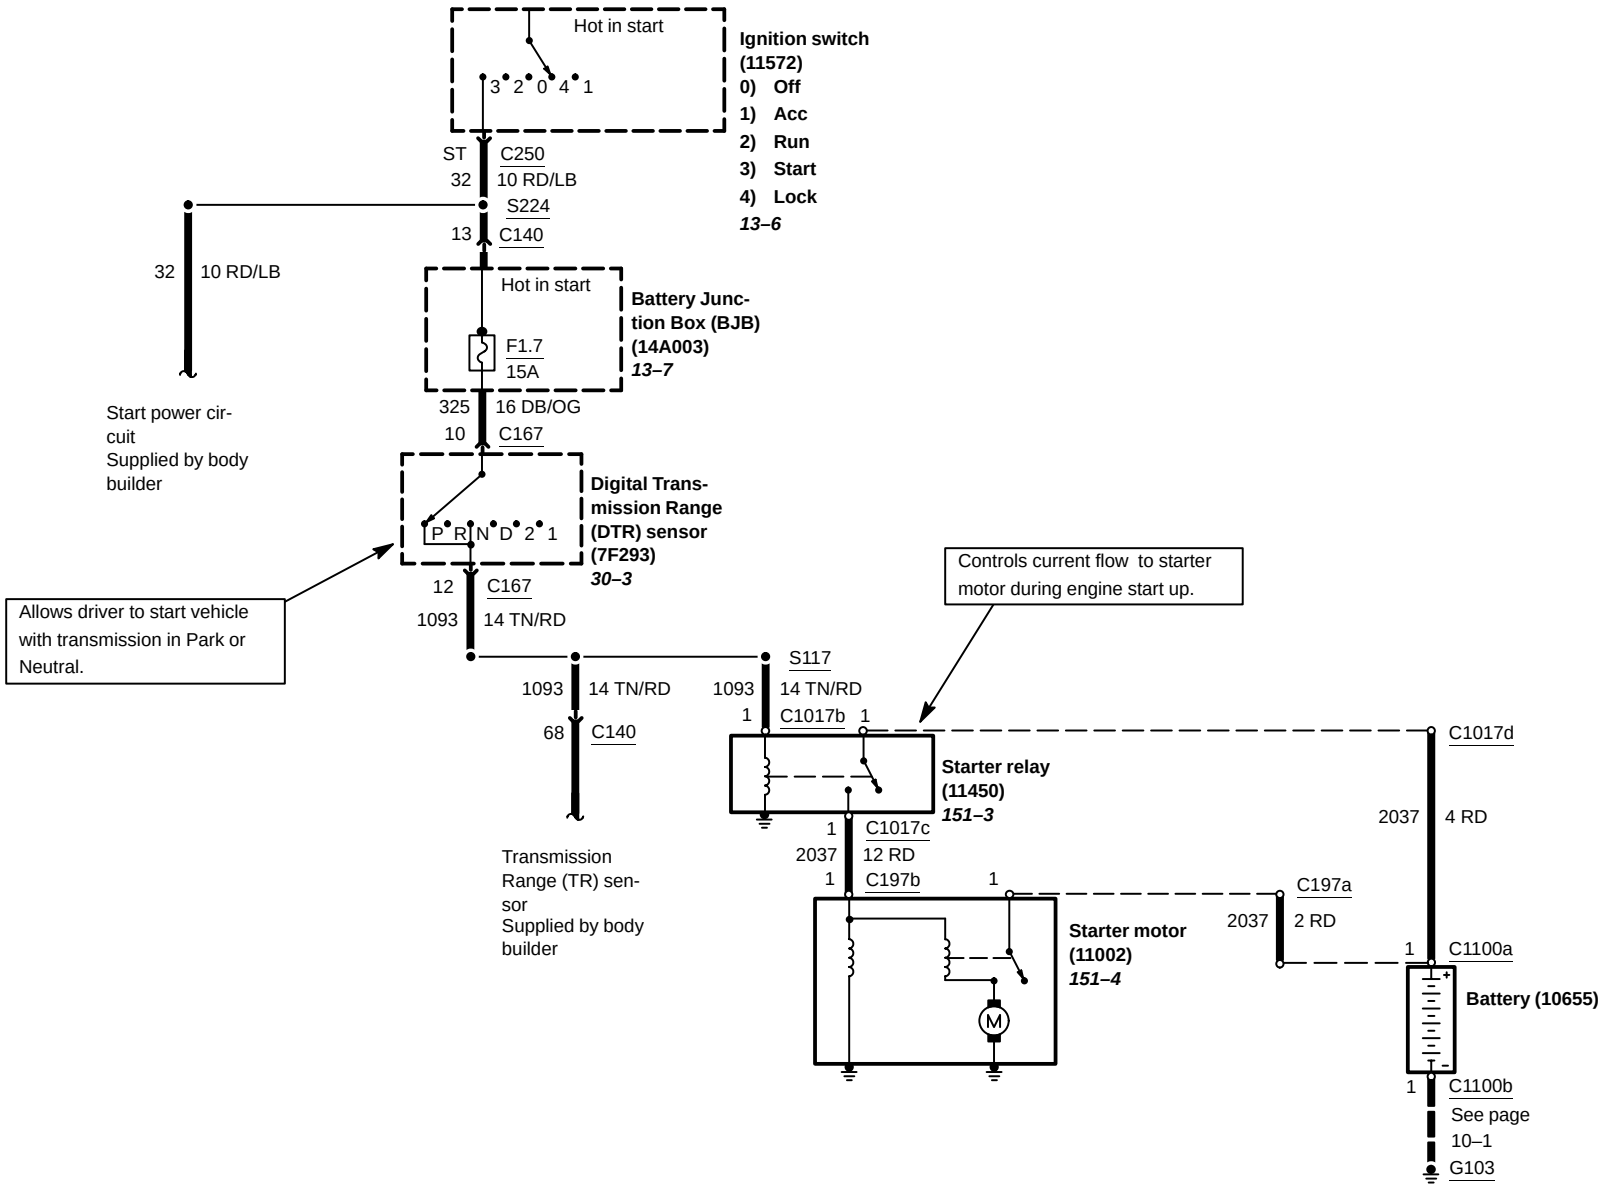

Hot in start
3 2 0 4 1
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
13–6
ST
C250
32
10 RD/LB
S224
13
C140
32
10 RD/LB
Hot in start
F1.7
15A
Battery Junction Box (BJB)
(14A003)
13–7
325
16 DB/OG
10
C167
Start power circuit
Supplied by body builder
P R N D 2 1
Digital Transmission Range
(DTR) sensor
(7F293)
30–3
Allows driver to start vehicle with transmission in Park or Neutral.
12
C167
1093
14 TN/RD
Controls current flow to starter motor during engine start up.
S117
1093
14 TN/RD
1
C1017b
1
C1017d
Starter relay
(11450)
151–3
1
C1017c
2037
12 RD
1
C197b
1
C197a
2037
2 RD
2037
4 RD
1
C1100a
Battery (10655)
1
C1100b
See page 10–1
G103
1093
14 TN/RD
68
C140
Transmission Range (TR) sensor
Supplied by body builder
M
Starter motor
(11002)
151–4