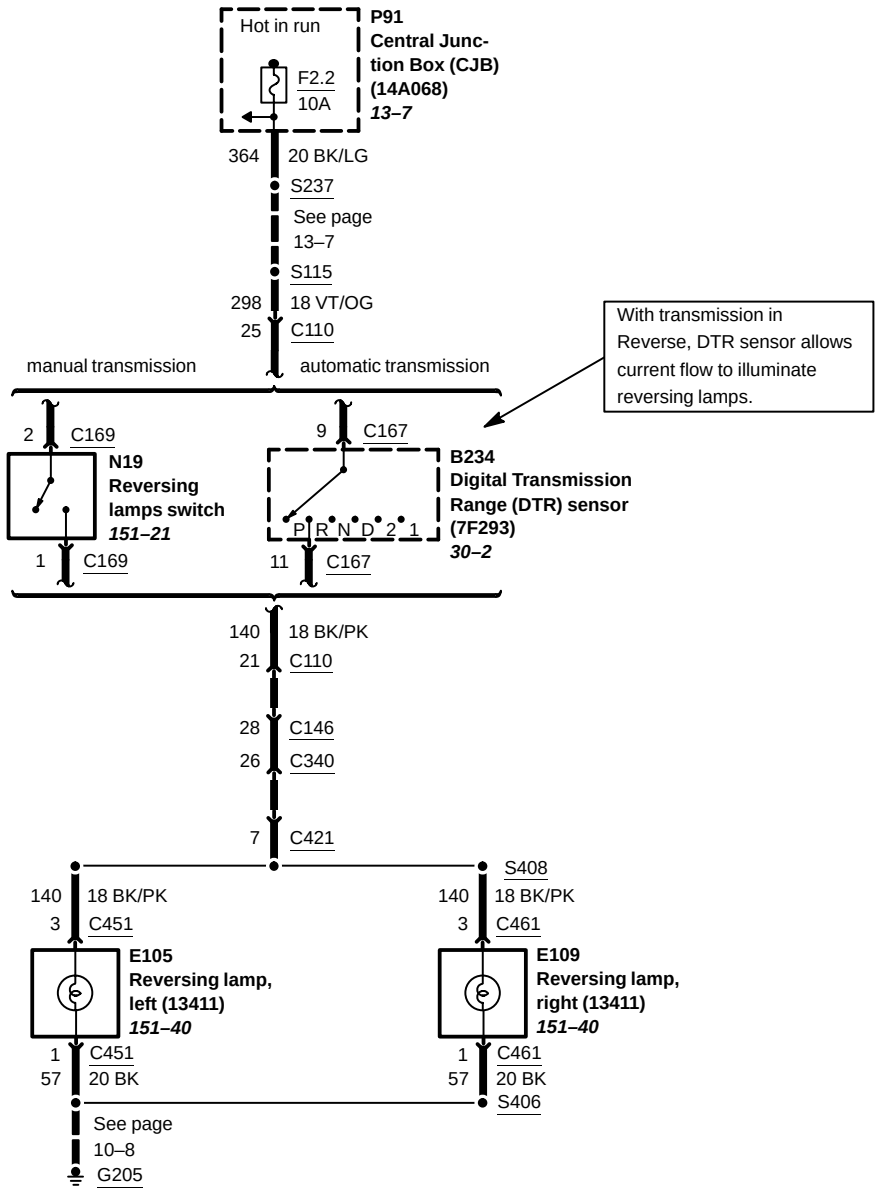
Hot in run
P91
Central Junction Box (CJB)
(14A068)
13–7
F2.2
10A
364
20 BK/LG
S237
See page
13–7
S115
298
18 VT/OG
25
C110
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
manual transmission
automatic transmission
2
C169
N19
Reversing lamps switch
151–21
1
C169
9
C167
B234
Digital Transmission Range (DTR) sensor
(7F293)
30–2
P R N D 2 1
11
C167
140
18 BK/PK
21
C110
28
C146
26
C340
7
C421
140
18 BK/PK
3
C451
E105
Reversing lamp, left (13411)
151–40
1
C451
57
20 BK
See page
10–8
G205
S408
140
18 BK/PK
3
C461
E109
Reversing lamp, right (13411)
151–40
1
C461
57
20 BK
S406