C2111

14014

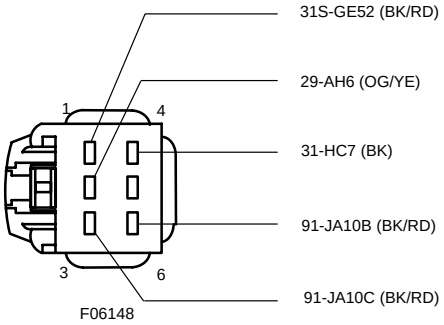

14K155, 19K315

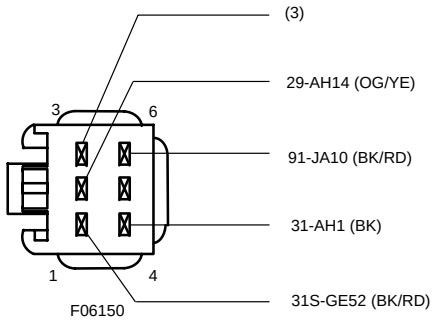

(3) 91-JA10 (BK/RD)
91-JA10A (BK/RD)

C2112

19K315

N242
Power seat switch, driver

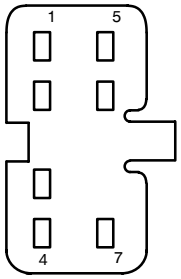

Pin	Circuit	Circuit function
1	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	29-AH14 (OG/YE)	Voltage supplied at all times (overload protected)
3	31-AH6 (BK)	Ground
4	–	not used
5	–	not used
6	31-AH6A (BK)	Ground
7	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open

C2113

14014

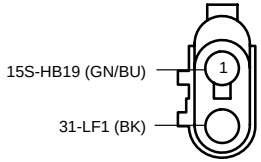
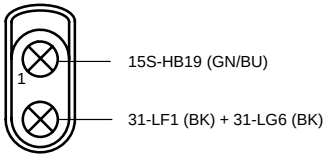
18C619