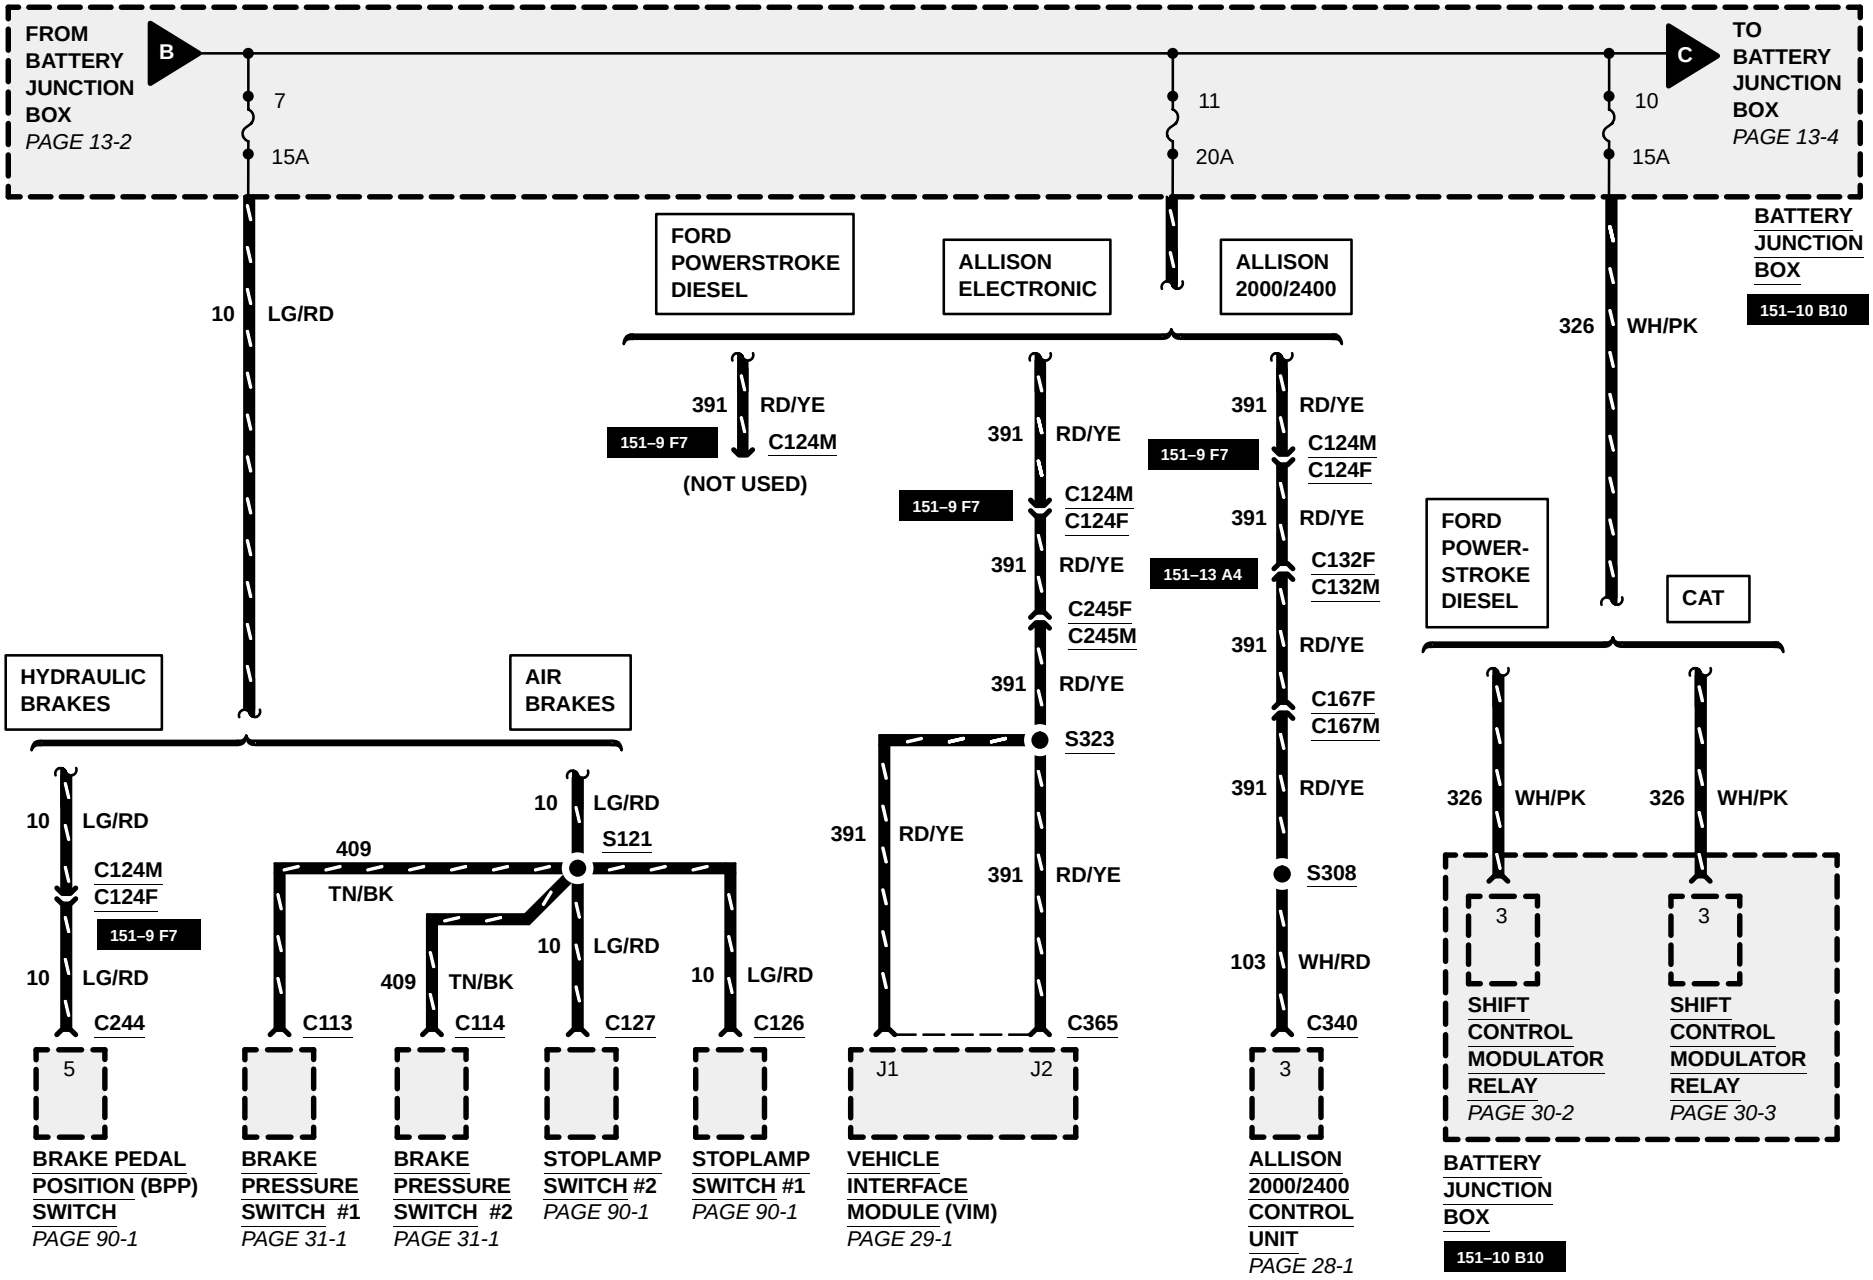
FROM BATTERY JUNCTION BOX
PAGE 13-2
B
7
15A
11
20A
10
15A
C
TO BATTERY JUNCTION BOX
PAGE 13-4
BATTERY JUNCTION BOX
151–10 B10
326 WH/PK
10 LG/RD
FORD POWERSTROKE DIESEL
ALLISON ELECTRONIC
ALLISON 2000/2400
391 RD/YE
151–9 F7
C124M
(NOT USED)
C124F
C132F
C132M
C245F
C245M
C167F
C167M
S323
S308
S121
C365
C340
HYDRAULIC BRAKES
AIR BRAKES
FORD POWER-STROKE DIESEL
CAT
326 WH/PK
409 TN/BK
10 LG/RD
C244
C113
C114
C127
C126
103 WH/RD
151–13 A4
J1
J2
3
5
SHIFT CONTROL MODULATOR RELAY
PAGE 30-2
PAGE 30-3
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-1
BRAKE PRESSURE SWITCH #1
PAGE 31-1
BRAKE PRESSURE SWITCH #2
PAGE 31-1
STOPLAMP SWITCH #2
PAGE 90-1
STOPLAMP SWITCH #1
PAGE 90-1
VEHICLE INTERFACE MODULE (VIM)
PAGE 29-1
ALLISON 2000/2400 CONTROL UNIT
PAGE 28-1
BATTERY JUNCTION BOX
151–10 B10