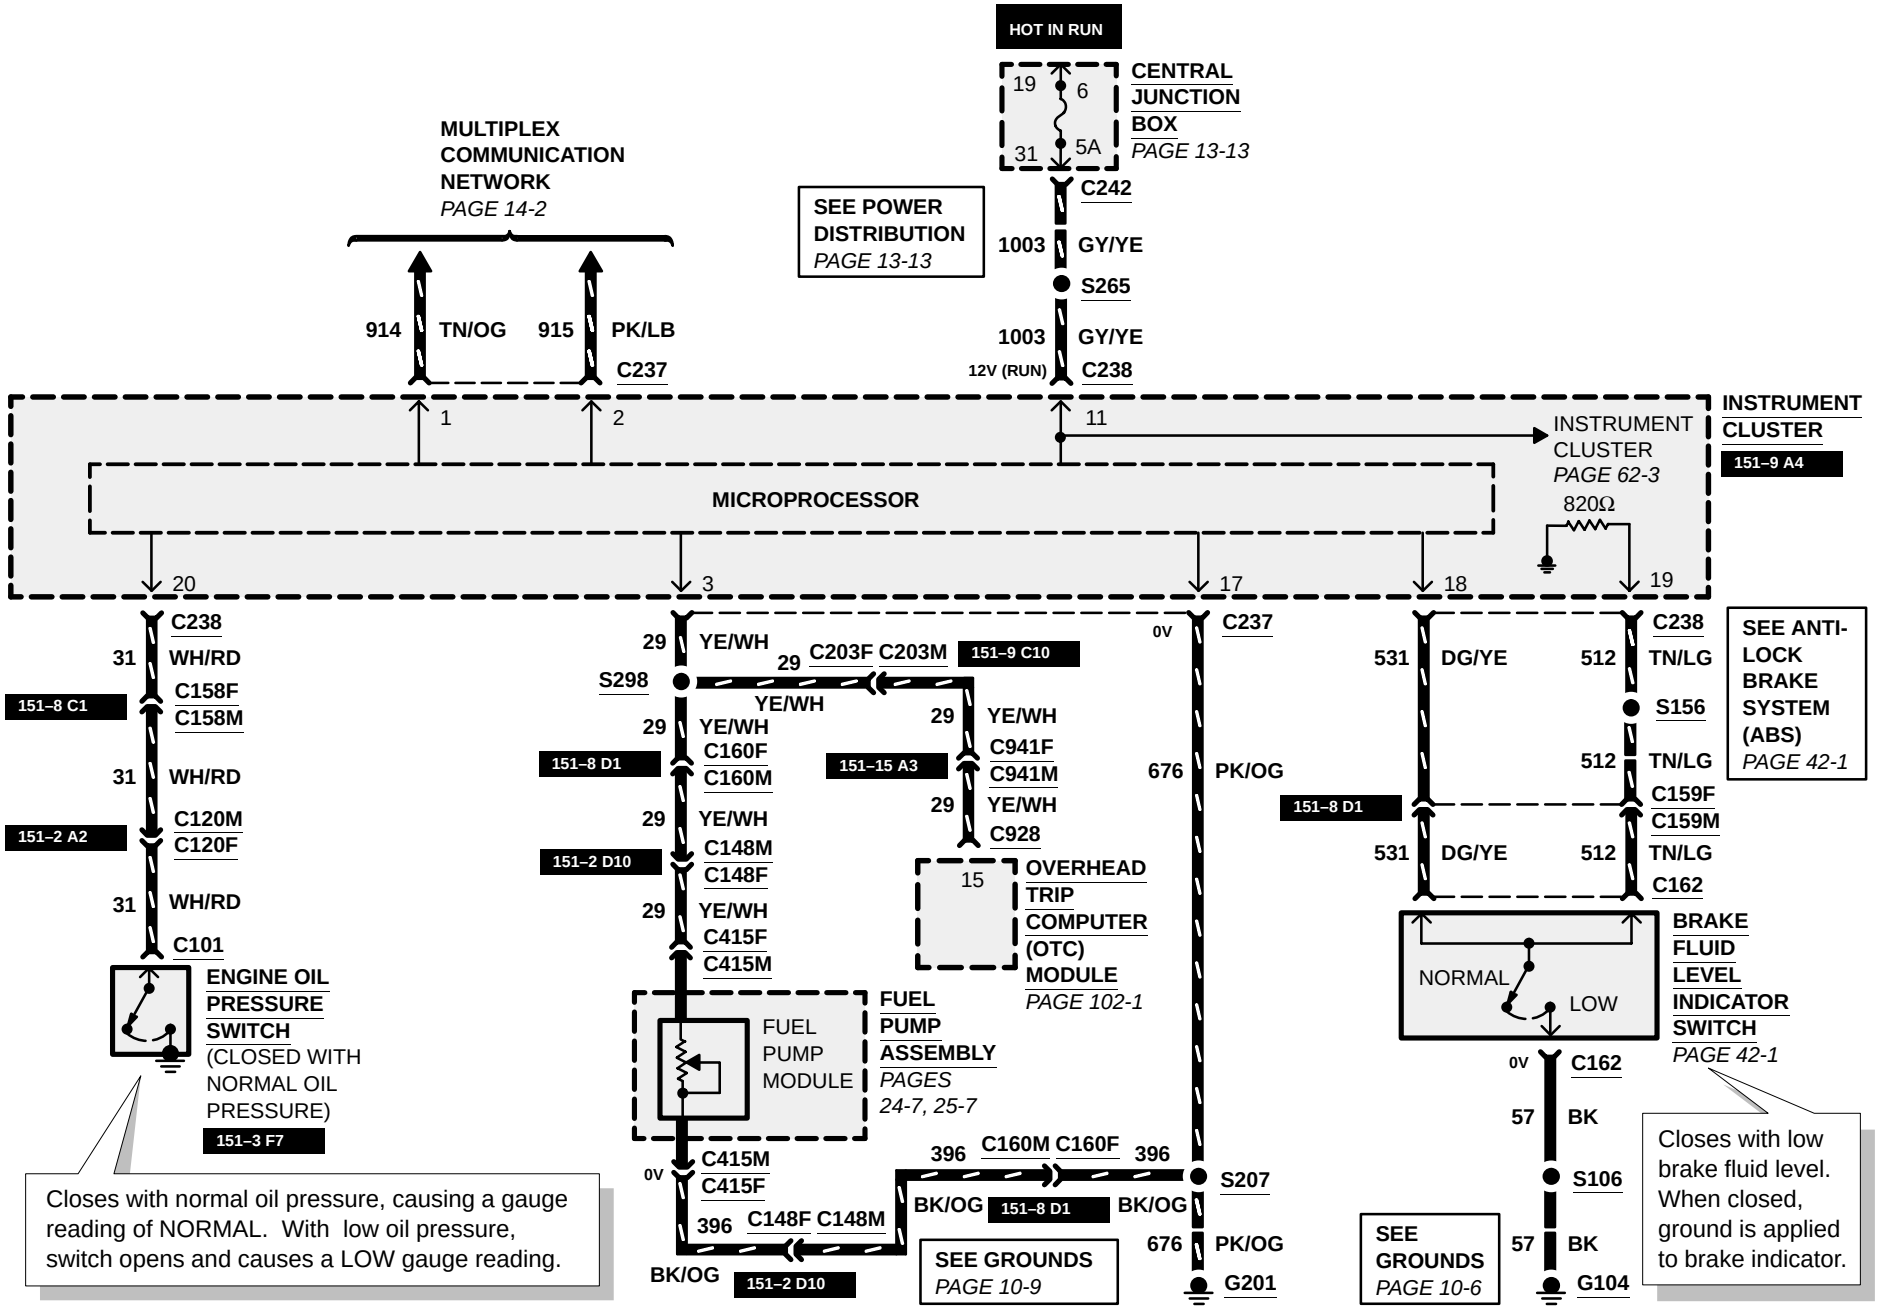
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-13
19
6
31
5A
C242
1003 GY/YE
S265
1003 GY/YE
12V (RUN)
C238
SEE POWER DISTRIBUTION
PAGE 13-13
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
914 TN/OG
915 PK/LB
C237
INSTRUMENT CLUSTER
151–9 A4
INSTRUMENT CLUSTER
PAGE 62-3
820Ω
MICROPROCESSOR
1
2
11
20
3
17
18
19
C238
31 WH/RD
C158F
C158M
151–8 C1
31 WH/RD
C120M
C120F
151–2 A2
31 WH/RD
C101
ENGINE OIL PRESSURE SWITCH
(CLOSED WITH NORMAL OIL PRESSURE)
151–3 F7
Closes with normal oil pressure, causing a gauge reading of NORMAL. With low oil pressure, switch opens and causes a LOW gauge reading.
29 YE/WH
S298
29 C203F C203M
151–9 C10
YE/WH
29 YE/WH
C160F
C160M
151–8 D1
29 YE/WH
C148M
C148F
151–2 D10
29 YE/WH
C415F
C415M
FUEL PUMP MODULE
FUEL PUMP ASSEMBLY
PAGES 24-7, 25-7
0V
C415M
C415F
396 C148F C148M
BK/OG
151–2 D10
29 YE/WH
C941F
C941M
151–15 A3
29 YE/WH
C928
15
OVERHEAD TRIP COMPUTER (OTC) MODULE
PAGE 102-1
396 C160M C160F 396
BK/OG
151–8 D1
BK/OG
SEE GROUNDS
PAGE 10-9
0V C237
676 PK/OG
S207
676 PK/OG
G201
531 DG/YE
512 TN/LG
C238
S156
512 TN/LG
151–8 D1
C159F
C159M
531 DG/YE
512 TN/LG
C162
SEE ANTI-LOCK BRAKE SYSTEM (ABS)
PAGE 42-1
NORMAL
LOW
BRAKE FLUID LEVEL INDICATOR SWITCH
PAGE 42-1
0V C162
57 BK
S106
57 BK
G104
SEE GROUNDS
PAGE 10-6
Closes with low brake fluid level. When closed, ground is applied to brake indicator.