## C165 (BN)

**7A488**

Y206
Transaxle solenoid assembly/transaxle fluid temperature

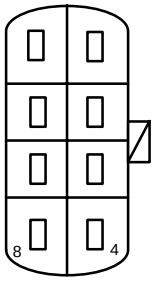


F08105

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | ZY01 (GN/RD) | Electronic Pressure Control (EPC) solenoid |
| 2 | ZY08 (OG/BK) | Coasting clutch solenoid |
| 3 | ZY06 (YE/VT) | Shift solenoid A |
| 4 | ZY07 (YE/GN) | Shift solenoid B |
| 5 | – | not used |
| 6 | ZY70 (OG) | signal, return |
| 7 | ZY33 (LB) | Transmission Fluid Temperature (TFT) sensor, input |
| 8 | ZY05 (OG/BU) | Torque Converter Clutch (TCC) solenoid |

## C166 (BK)

**12B637**

Y108
Injector 1

F02137

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | AV51 (GN/OG) | Fuel injector 1, control |
| 2 | AV81 (YE) | Voltage supplied at all times (overload protected) |

## C167 (BK)

**12B637**

Y110
Injector 3

F02137

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | AV53 (GN/RD) | Fuel injector 3, control |
| 2 | AV83 (YE) | Voltage supplied at all times (overload protected) |

## C168 (BK)

**12B637**

Y112
Injector 5

F02137

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | AV55 (YE/GN) | Fuel injector 5, control |
| 2 | AV85 (YE) | Voltage supplied at all times (overload protected) |