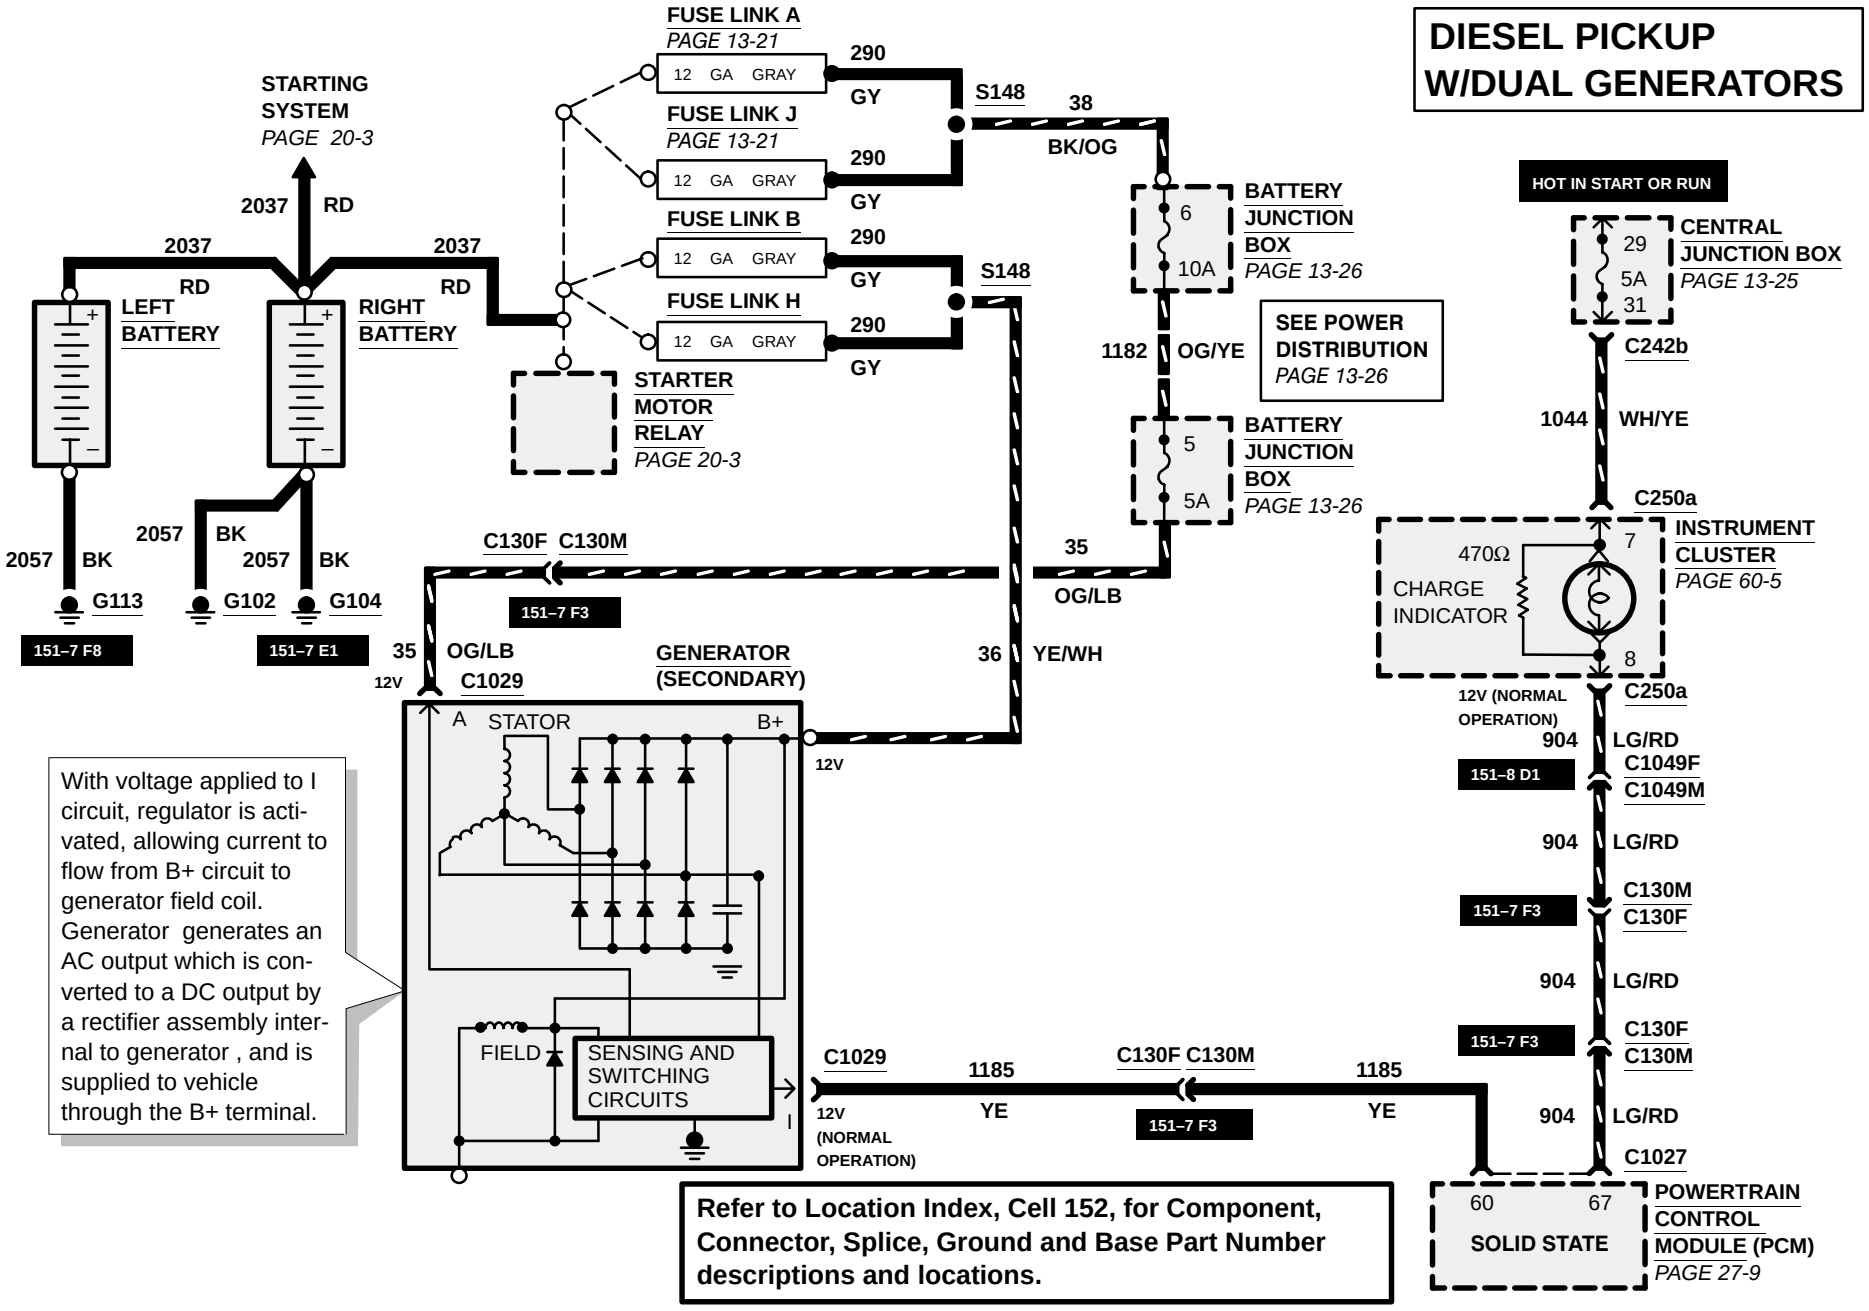
DIESEL PICKUP W/DUAL GENERATORS
STARTING SYSTEM
PAGE 20-3
2037 RD
2037 RD
2037 RD
LEFT BATTERY
RIGHT BATTERY
2057 BK
2057 BK
2057 BK
G113
G102
G104
151–7 F8
151–7 E1
FUSE LINK A
PAGE 13-21
FUSE LINK J
PAGE 13-21
FUSE LINK B
FUSE LINK H
12 GA GRAY
290 GY
S148
38 BK/OG
BATTERY JUNCTION BOX
PAGE 13-26
6
10A
1182 OG/YE
SEE POWER DISTRIBUTION
PAGE 13-26
5
5A
STARTER MOTOR RELAY
PAGE 20-3
C130F C130M
151–7 F3
35 OG/LB
12V
C1029
GENERATOR (SECONDARY)
36 YE/WH
A
STATOR
B+
12V
FIELD
SENSING AND SWITCHING CIRCUITS
I
With voltage applied to I circuit, regulator is activated, allowing current to flow from B+ circuit to generator field coil. Generator generates an AC output which is converted to a DC output by a rectifier assembly internal to generator , and is supplied to vehicle through the B+ terminal.
C1029
1185 YE
12V (NORMAL OPERATION)
C130F C130M
151–7 F3
1185 YE
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-25
29
5A
31
C242b
1044 WH/YE
C250a
INSTRUMENT CLUSTER
PAGE 60-5
470Ω
CHARGE INDICATOR
7
8
C250a
12V (NORMAL OPERATION)
904 LG/RD
151–8 D1
C1049F
C1049M
904 LG/RD
C130M
C130F
151–7 F3
904 LG/RD
C130F
C130M
151–7 F3
904 LG/RD
C1027
60
67
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGE 27-9
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.