C330 (GN)

14B122

Seat adjust switch, passenger side front

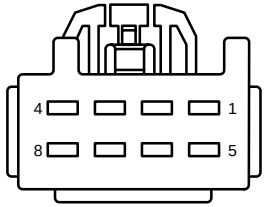

F08193

Pin	Circuit	Circuit function
1	–	not used
2	31-AH2 (BK/BU)	Ground
3	32-AH17 (WH/GN)	Switched between: Battery voltage, Ground or Open
4	30-AH14 (RD/YE)	Voltage supplied at all times (not overload protected)
5	–	not used
6	–	not used
7	33-AH17 (YE/GN)	Switched between: Battery voltage, Ground or Open
8	31-AH1 (BK/YE)	Ground

C334

14A699

Seat cushion heater, right front

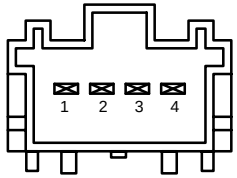

F04139

Pin	Circuit	Circuit function
1	32-HC20 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	8-HC24 (WH/RD)	Sensor signal
3	9-HC24 (BN/RD)	Sensor signal return (reference/ground)
4	34-HC20 (BU/OG)	Switched between: Battery voltage, Ground or Open

C335

14A699

Seat back heater, right front

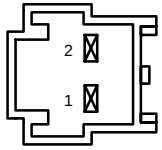

F02077

Pin	Circuit	Circuit function
1	34-HC20 (BU/OG)	Switched between: Battery voltage, Ground or Open
2	32-HC19 (WH/BK)	Switched between: Battery voltage, Ground or Open