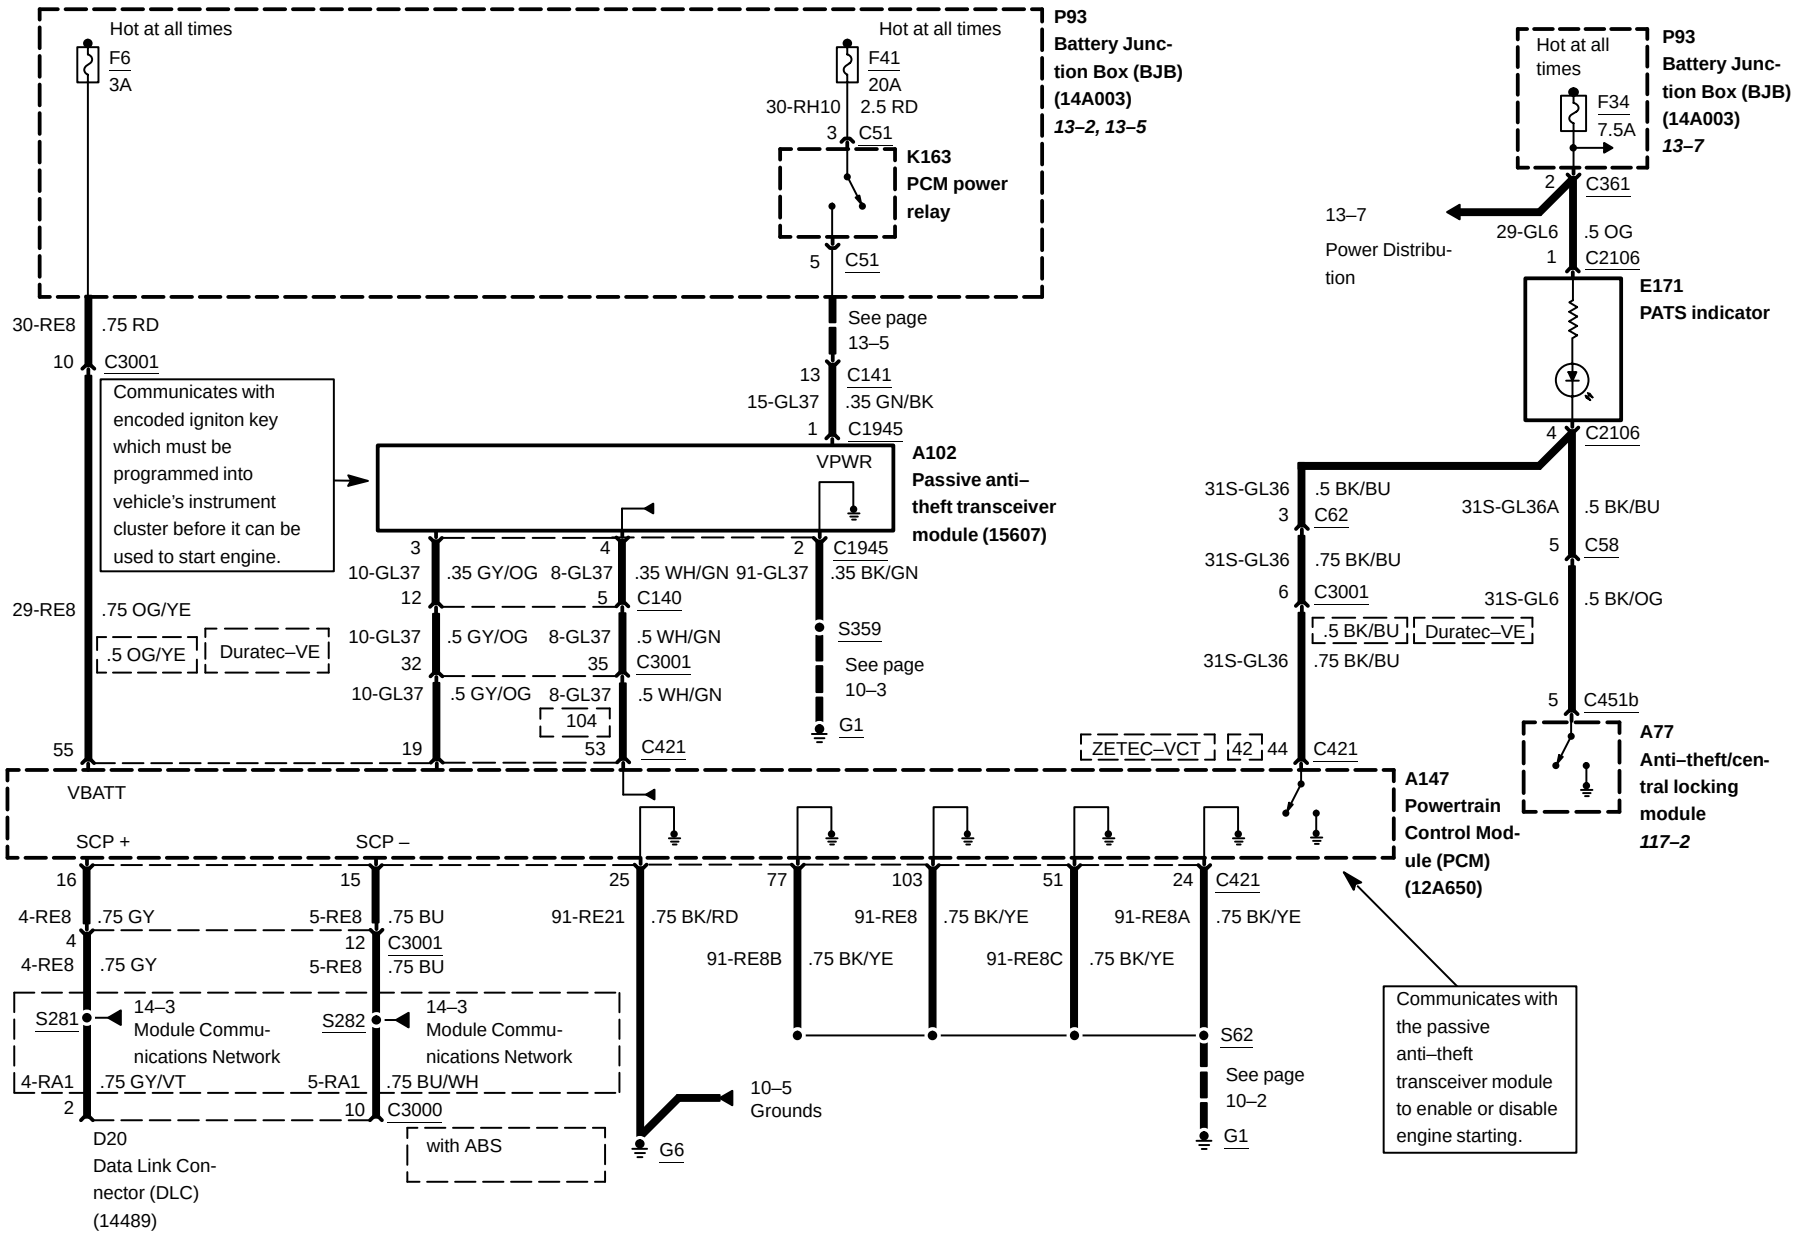
Hot at all times
F6
3A
Hot at all times
F41
20A
30-RH10 2.5 RD
3 C51
K163
PCM power relay
5 C51
P93
Battery Junction Box (BJB)
(14A003)
13–2, 13–5
Hot at all times
F34
7.5A
P93
Battery Junction Box (BJB)
(14A003)
13–7
2 C361
13–7
Power Distribution
29-GL6 .5 OG
1 C2106
E171
PATS indicator
4 C2106
30-RE8 .75 RD
10 C3001
Communicates with encoded igniton key which must be programmed into vehicle's instrument cluster before it can be used to start engine.
See page 13–5
13 C141
15-GL37 .35 GN/BK
1 C1945
VPWR
A102
Passive anti–theft transceiver module (15607)
3 10-GL37 .35 GY/OG 12
4 8-GL37 .35 WH/GN 5 C140
2 C1945 91-GL37 .35 BK/GN
29-RE8 .75 OG/YE
.5 OG/YE
Duratec–VE
10-GL37 .5 GY/OG 32
8-GL37 .5 WH/GN 35 C3001
S359
See page 10–3
10-GL37 .5 GY/OG
8-GL37 .5 WH/GN 104
G1
55
19
53 C421
VBATT
ZETEC–VCT
42 44 C421
A147
Powertrain Control Module (PCM)
(12A650)
31S-GL36 .5 BK/BU
3 C62
31S-GL36A .5 BK/BU
5 C58
31S-GL36 .75 BK/BU
6 C3001
31S-GL6 .5 BK/OG
.5 BK/BU
Duratec–VE
31S-GL36 .75 BK/BU
5 C451b
A77
Anti–theft/central locking module
117–2
SCP +
SCP –
16
15
25
77
103
51
24 C421
4-RE8 .75 GY
5-RE8 .75 BU
91-RE21 .75 BK/RD
91-RE8 .75 BK/YE
91-RE8A .75 BK/YE
4 4-RE8 .75 GY
12 C3001 5-RE8 .75 BU
91-RE8B .75 BK/YE
91-RE8C .75 BK/YE
S281
14–3 Module Communications Network
S282
14–3 Module Communications Network
S62
See page 10–2
4-RA1 .75 GY/VT
5-RA1 .75 BU/WH
2
10 C3000
with ABS
D20
Data Link Connector (DLC)
(14489)
G6
10–5 Grounds
G1
Communicates with the passive anti–theft transceiver module to enable or disable engine starting.