C270d

14401

P91
Central Junction
Box (CJB) (14A068)

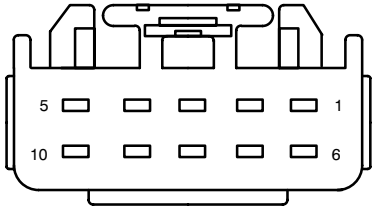

F10117

Pin	Circuit	Circuit function
1	1 (DB)	fused feed, Horn, left
2	936 (DG/WH)	Voltage supplied in Start and Run (overload protected)
3	160 (DB/WH)	Voltage, ignition switch in Start or Run (not overload protected), to, Central Junction Box (CJB) (14A068)
	1003 (GY/YE)	Voltage supplied in Start (overload protected)
4	10 (LG/RD)	Voltage supplied at all times (overload protected)
5	–	not used
6	385 (WH/RD)	Turn signal flasher, to turn signal switch
7	1 (DB)	fused feed, Horn, right
8	75 (DG/LG)	Voltage: Ignition switch in Accessory or Run, to, Central Junction Box (CJB) (14A068)
	50 (RD)	Voltage, ignition switch in Start (not overload protected), to, Central Junction Box (CJB) (14A068)
9	44 (LB)	Turn signal flasher, to turn signal switch
10	37 (YE)	Voltage supplied at all times (overload protected)

C270e

14401

P91
Central Junction
Box (CJB) (14A068)

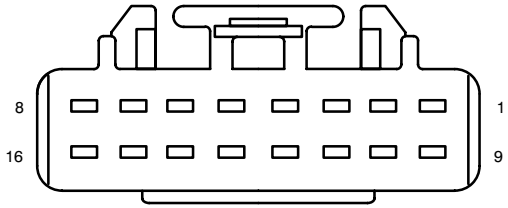

F16055

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage supplied in Start and Run (overload protected)
2	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
3	1003 (GY/YE)	Voltage supplied at all times (overload protected)
4	–	not used
	645 (WH/LB)	Voltage supplied at all times (overload protected)
5	1001 (WH/YE)	Voltage supplied at all times (overload protected)
	645 (WH/LB)	Voltage supplied at all times (overload protected)
6	–	not used
	1003 (GY/YE)	Voltage supplied at all times (overload protected)
7	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
	–	not used
8	53 (BK/LB)	Battery saver relay, switched power, output
9	686 (TN/RD)	Washer motor relay, control
10	53 (BK/LB)	Interior lamp relay, switched power, output
	–	not used
11	686 (TN/RD)	Rear window defrost relay, control
	1009 (OG/YE)	Rear window defrost relay, control
12	–	not used
13	976 (OG)	Voltage supplied in Start (overload protected)
	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
14	–	not used
	295 (LB/PK)	Voltage in Run or Accessory (overload protected)
15	1004 (LB/RD)	Accessory delay relay, control
16	–	not used
	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)