C175

12B637

Powertrain Control Module (PCM) (12A650)

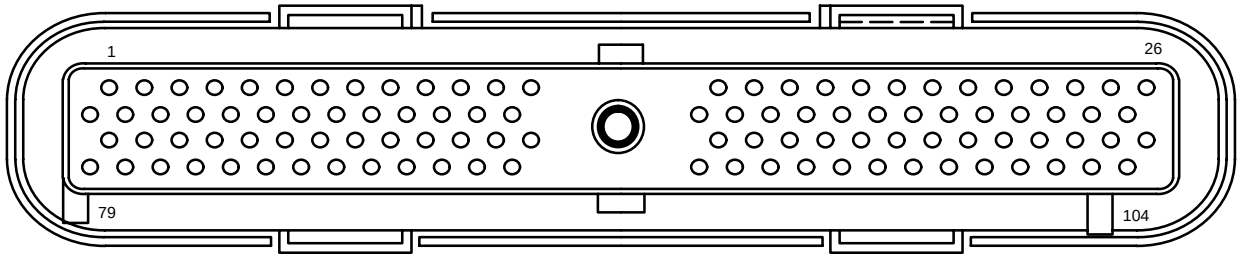

F104001

Pin	Circuit	Circuit function
1	315 (VT/OG)	Shift solenoid B
2	–	not used
3	1012 (OG/BK)	Digital Transmission Range (DTR) sensor, TR1
4	–	not used
5	–	not used
6	970 (DG/WH)	Turbine shaft speed sensor (7M101)
7	–	not used
8	659 (OG/WH)	Inlet Manifold Runner Control (IMRC) module
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	107 (VT)	Module programming signal
14	–	not used
15	915 (PK/LB)	SCP Bus –
16	914 (TN/OG)	SCP Bus +
17	1216 (GY/OG)	RX, signal
18	1215 (WH/LG)	TX, signal
19	–	not used
20	585 (VT)	generator S Circuit
21	138 (BK/PK)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) +
22	139 (GY/YE)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) –
23	–	not used

Pin	Circuit	Circuit function
24	570 (BK/WH)	Ground
25	–	not used
26	526 (DB/LG)	PCM, to, Ignition coil (12029) – 1, 5
27	237 (OG/YE)	Shift solenoid A
28	228 (DB)	Low speed fan control relay, control
29	–	not used
30	343 (DB/LG)	Anti–theft, indicator, input
31	330 (YE/LG)	Power steering pressure switch, input
32	–	not used
33	–	not used
34	–	not used
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12 (9G444), input
36	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
38	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
39	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
40	238 (DG/YE)	Inertia Fuel Shutoff (IFS) switch (9D362), monitor
41	347 (BK/YE)	A/C clutch cycling pressure switch (19D594), output
42	367 (BN)	Intake Manifold Runner Control (IMRC) module
43	–	not used
44	1419 (LG/YE)	Starter relay circuit, control
45	586 (RD/PK)	generator I Circuit
46	639 (LG/VT)	High speed cooling fan relay, control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR), control

Pin	Circuit	Circuit function
48	–	not used
49	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
50	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4
51	570 (BK/WH)	Ground
52	527 (RD/LB)	PCM, to, Ignition coil (12029) – 3, 4
53	971 (PK/BK)	Shift solenoid C
54	473 (RD/LB)	Torque Converter Clutch (TCC) solenoid
55	1119 (RD)	Voltage supplied at all times (overload protected)
56	191 (LG/BK)	Powertrain Control Module (PCM) (12A650), EVAP canister purge valve
57	–	not used
58	–	not used
59	–	not used
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22 (9G444), input
62	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
63	–	not used
64	199 (LB/YE)	Digital Transmission Range (DTR) sensor, to, TR3A
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
66	–	not used
67	91 (VT/WH)	Canister vent
68	–	not used
69	331 (PK/YE)	A/C clutch relay, control
70	–	not used
71	361 (RD)	Voltage supplied in Start and Run (overload protected)
72	–	not used
73	559 (TN/BK)	Fuel injector 5, control
74	557 (BN/YE)	Fuel injector 3, control
75	555 (TN)	Fuel injector 1, control
76	570 (BK/WH)	Ground
77	–	not used

Pin	Circuit	Circuit function
78	528 (PK/WH)	PCM, to, Ignition coil (12029) – 2, 6
79	–	not used
80	926 (LB/OG)	Fuel pump relay, control
81	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid
82	–	not used
83	264 (WH/LB)	Idle air control valve (IAC) (9F715), control
84	136 (DB/YE)	Output Shaft Speed (OSS) sensor (7H103)
85	282 (DB/OG)	Camshaft position sensor (6B288), input
86	439 (TN/LG)	A/C pressure switch, signal
87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input
88	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
89	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
90	351 (BN/WH)	Reference, voltage
91	359 (GY/RD)	signal, return
92	–	not used
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 (9G444), heater
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22 (9G444), heater
97	–	not used
98	–	not used
99	560 (LG/OG)	Fuel injector 6, control
100	558 (BN/LB)	Fuel injector 4, control
101	556 (WH)	Fuel injector 2, control
102	–	not used
103	570 (BK/WH)	Ground
104	–	not used