C446

14A005

K4
Fuel pump relay

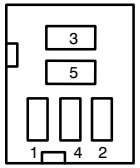

F05109

Pin	Circuit	Circuit Function
1	31-RH5 (BK/BU)	Ground
2	15-RH5 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
3	30-RH5 (RD/BU)	Voltage supplied at all times (not overload protected)
4	–	not used
5	15S-DK32 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C449

14A005

V50
Fuel pump motor diode



F02009

Pin	Circuit	Circuit Function
1	15-RP12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	15-RH5 (GN/BU)	Ground, Switched

C450

9L468

Y131
Evaporative emission (EVAP) canister vent valve (9F945)

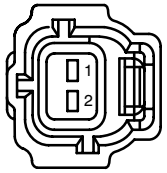

F02103

Pin	Circuit	Circuit Function
1	15S-RL3 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RL3 (BN/BU)	Ground, Switched

C451

14A005

E105
Reversing lamp, left (13411)



F03099

Pin	Circuit	Circuit Function
1	29S-LG9 (OG/BK)	Voltage supplied at all times (overload protected), switch
2	–	not used
3	31S-LG9 (BK/GN)	Ground, switch

C461

14A005

E109
Reversing lamp, right (13411)



F03099

Pin	Circuit	Circuit Function
1	31S-LG16 (BK/RD)	Ground, switch
2	–	Voltage supplied at all times (overload protected), switch
3	29S-LG16 (OG/GN)	not used