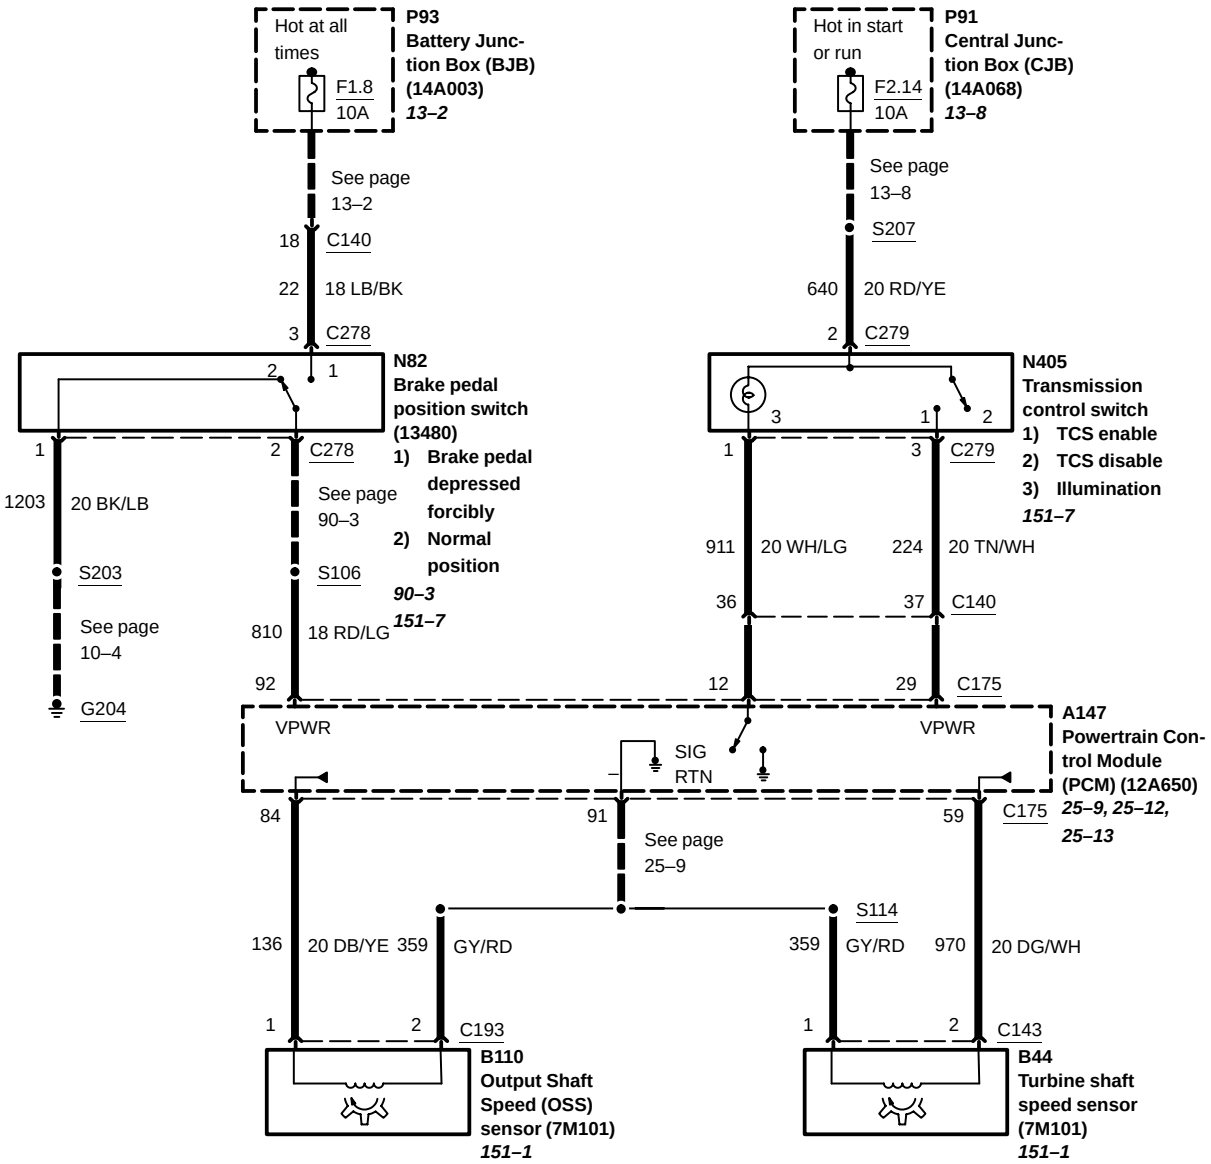
Hot at all times
F1.8
10A
P93
Battery Junction Box (BJB) (14A003)
13–2
See page 13–2
18
C140
22
18 LB/BK
3
C278
Hot in start or run
F2.14
10A
P91
Central Junction Box (CJB) (14A068)
13–8
See page 13–8
S207
640
20 RD/YE
2
C279
N82
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
90–3
151–7
N405
Transmission control switch
1) TCS enable
2) TCS disable
3) Illumination
151–7
1203
20 BK/LB
S203
See page 10–4
G204
See page 90–3
S106
810
18 RD/LG
911
20 WH/LG
224
20 TN/WH
36
37
C140
92
12
29
C175
VPWR
VPWR
SIG RTN
A147
Powertrain Control Module (PCM) (12A650)
25–9, 25–12, 25–13
84
91
59
C175
See page 25–9
S114
136
20 DB/YE
359
GY/RD
359
GY/RD
970
20 DG/WH
C193
C143
B110
Output Shaft Speed (OSS) sensor (7M101)
151–1
B44
Turbine shaft speed sensor (7M101)
151–1