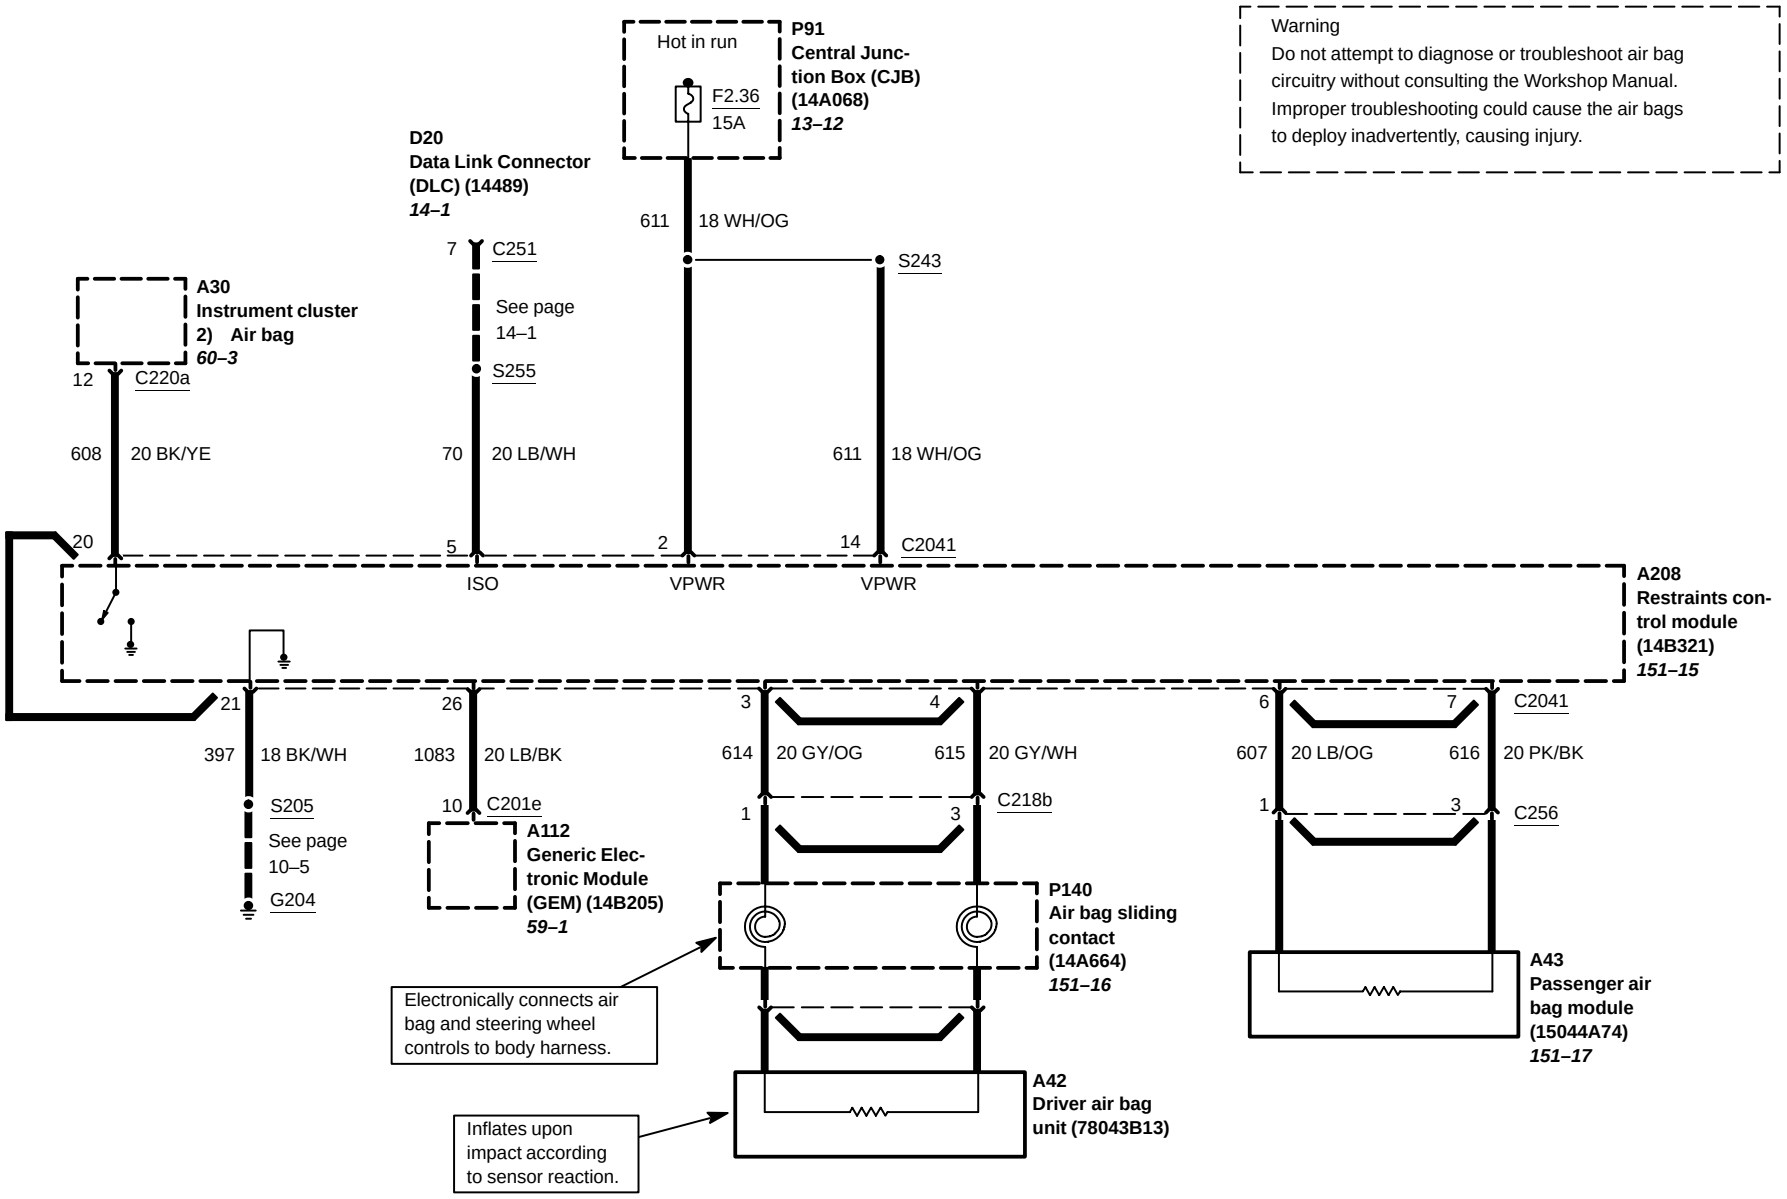
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot in run
F2.36
15A
P91
Central Junction Box (CJB) (14A068)
13–12
611 18 WH/OG
D20
Data Link Connector (DLC) (14489)
14–1
7 C251
See page 14–1
S243
A30
Instrument cluster
2) Air bag
60–3
12 C220a
S255
608 20 BK/YE
70 20 LB/WH
611 18 WH/OG
20
5
2
14 C2041
ISO
VPWR
VPWR
A208
Restraints control module (14B321)
151–15
21
26
3
4
6
7 C2041
397 18 BK/WH
1083 20 LB/BK
614 20 GY/OG
615 20 GY/WH
607 20 LB/OG
616 20 PK/BK
S205
See page 10–5
G204
10 C201e
1
3 C218b
1
3 C256
A112
Generic Electronic Module (GEM) (14B205)
59–1
P140
Air bag sliding contact (14A664)
151–16
A43
Passenger air bag module (15044A74)
151–17
Electronically connects air bag and steering wheel controls to body harness.
Inflates upon impact according to sensor reaction.
A42
Driver air bag unit (78043B13)