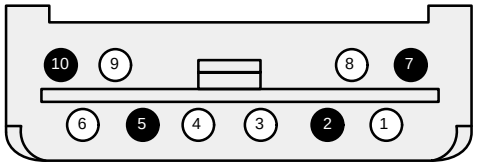

C511 (BLACK)
MEMORY SEAT SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	270 (BN/OG)	Memory Seat Switch Set
2	–	NOT USED
3	268 (BK/OG)	Memory Seat Switch Position #2
4	267 (BN/LG)	Memory Seat Switch Position #1
5	–	NOT USED
6	956 (OG/LG)	Power (Hot at All Times)
7	–	NOT USED
8	272 (WH/OG)	Memory Seat Switch Lamp Drive
9	57 (BK)	Ground
10	–	NOT USED