C701 (GY)

14014

Window adjust switch, left rear (14A412)

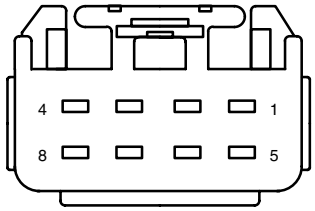

F08207

Pin	Circuit	Circuit function
1	–	not used
2	882 (BN/YE)	Window motor, feed, Up
3	320 (RD/BK)	Window switch, feed, right rear, Up
4	193 (YE/LG)	Window lockout, control
5	319 (YE/BK)	Window switch, feed, right rear, Down
6	881 (BN)	Window motor, feed, Down
7	–	not used
8	–	not used

C702 (BK)

14014

Speaker, left rear (18808)

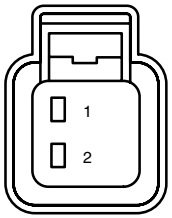

F02337

Pin	Circuit	Circuit function
1	827 (TN/WH)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C703 (BK)

14014

Power window motor, left rear (23394)

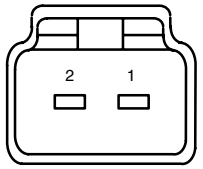

F02381

Pin	Circuit	Circuit function
1	881 (BN)	Window motor, feed, Down
2	882 (BN/YE)	Window motor, feed, Up

C704 (GY)

14014

Door lock actuator, left rear (218A43)

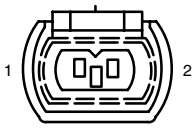

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C715 (BK)

14014

Door ajar switch, driver side rear (14018)

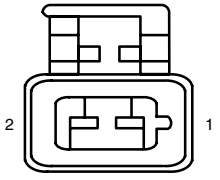

F02379

Pin	Circuit	Circuit function
1	346 (BK/WH)	Door ajar switch, driver side rear (14018), signal
2	57 (BK)	Ground