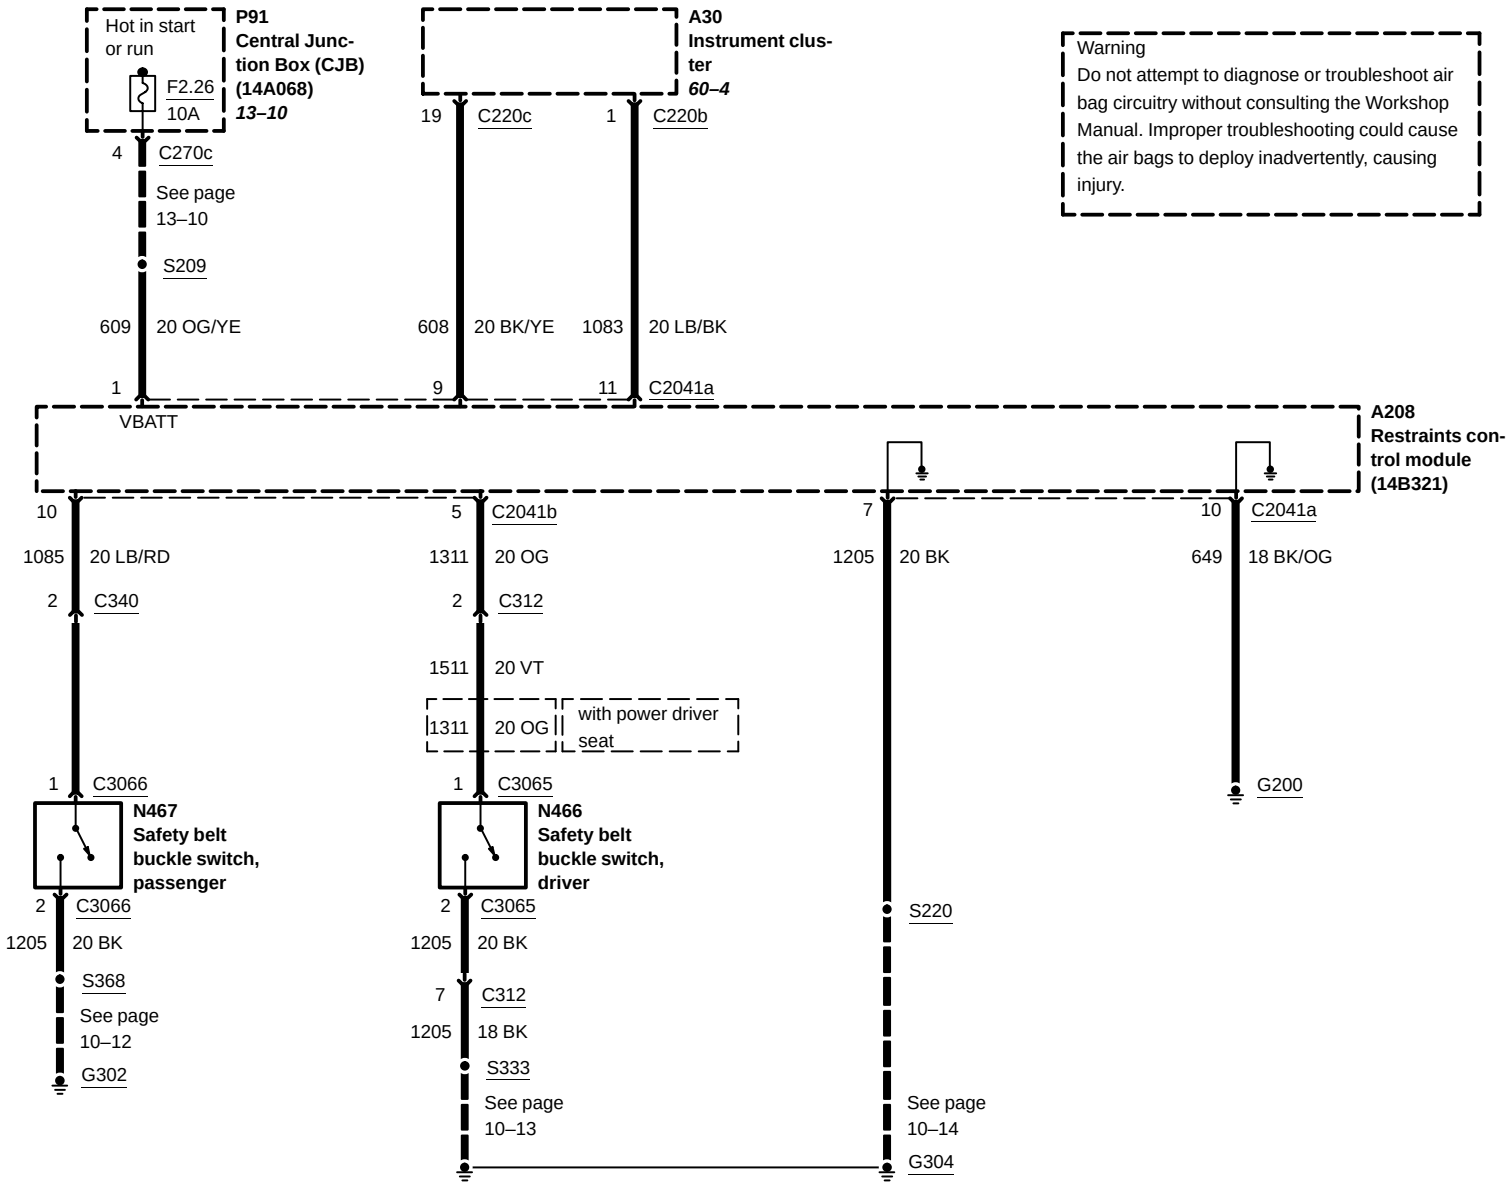
Hot in start or run
F2.26
10A
P91
Central Junction Box (CJB)
(14A068)
13–10
4
C270c
See page 13–10
S209
609
20 OG/YE
1
VBATT
A30
Instrument cluster
60–4
19
C220c
1
C220b
608
20 BK/YE
1083
20 LB/BK
9
11
C2041a
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
A208
Restraints control module
(14B321)
10
1085
20 LB/RD
2
C340
1
C3066
N467
Safety belt buckle switch, passenger
2
C3066
1205
20 BK
S368
See page 10–12
G302
5
C2041b
1311
20 OG
2
C312
1511
20 VT
1311
20 OG
with power driver seat
1
C3065
N466
Safety belt buckle switch, driver
2
C3065
1205
20 BK
7
C312
1205
18 BK
S333
See page 10–13
7
1205
20 BK
S220
See page 10–14
G304
10
C2041a
649
18 BK/OG
G200