EXCURSION

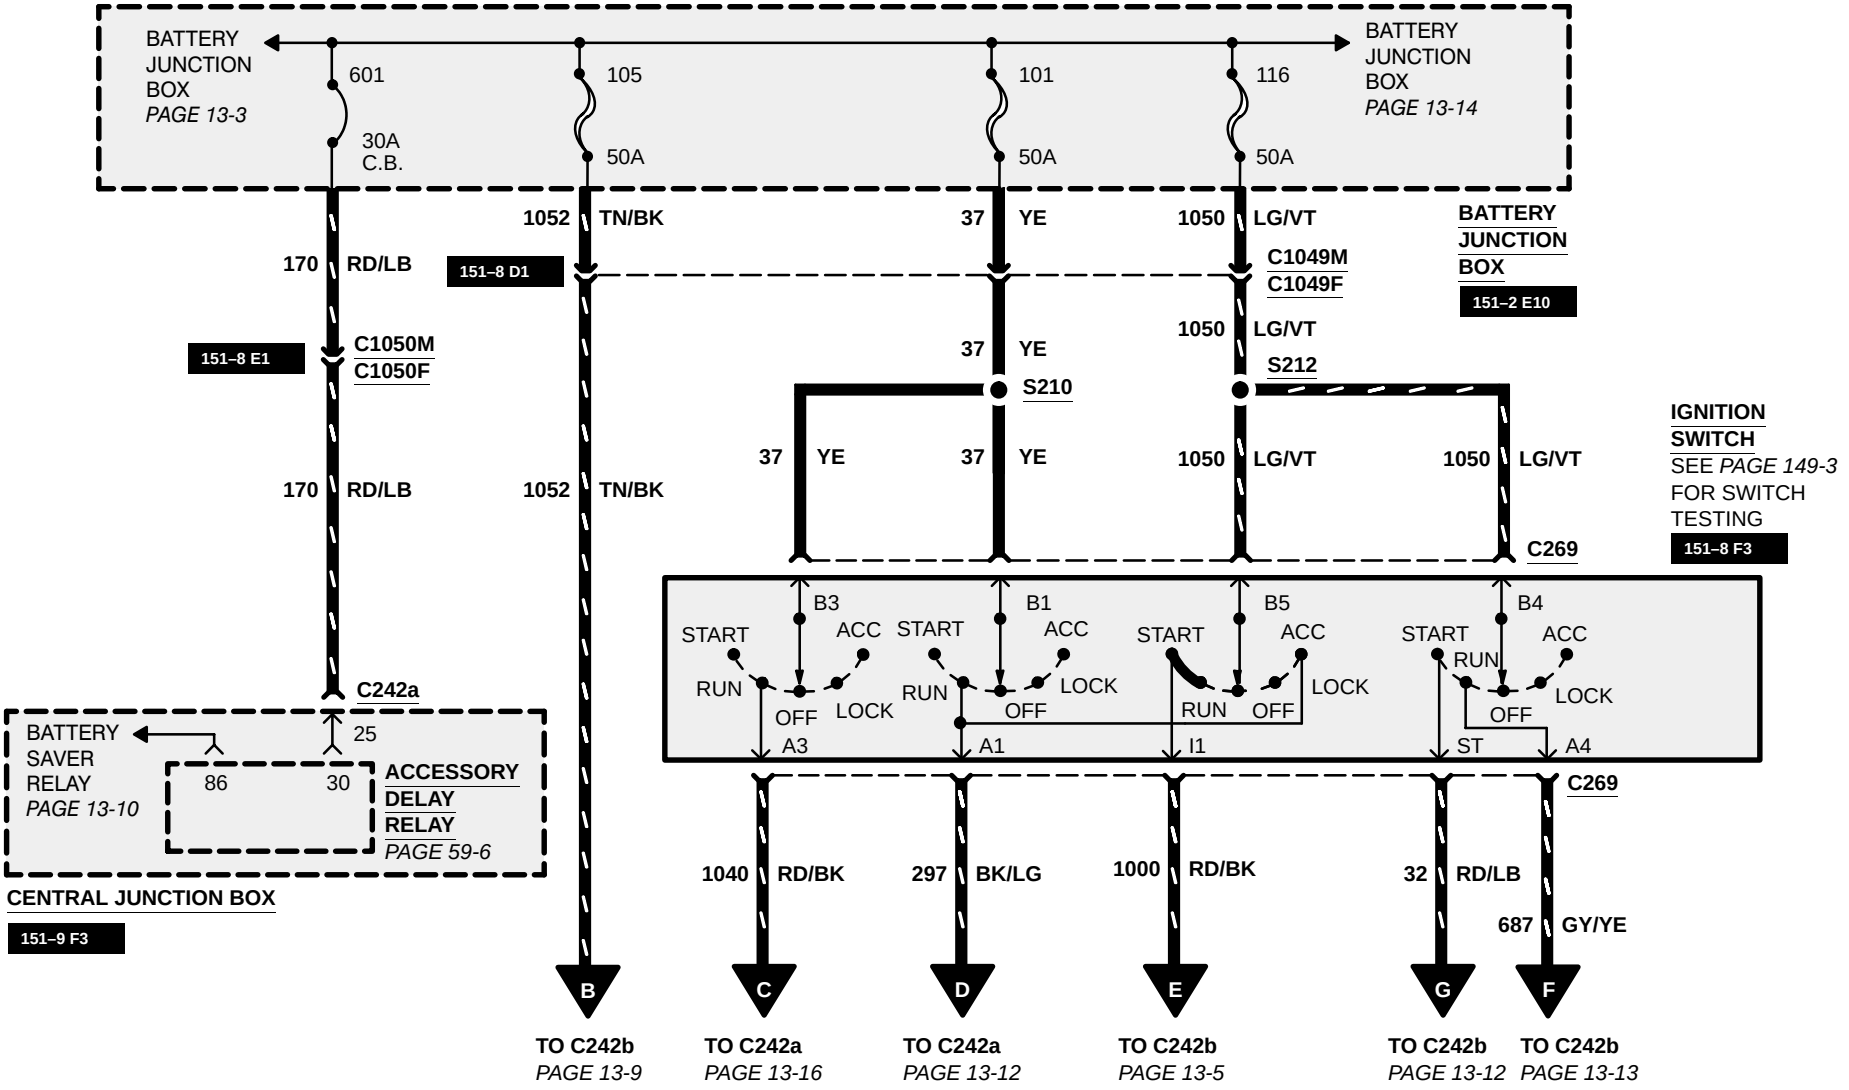
BATTERY JUNCTION BOX
PAGE 13-3
601
30A C.B.
105
50A
101
50A
116
50A
BATTERY JUNCTION BOX
PAGE 13-14
1052 TN/BK
37 YE
1050 LG/VT
BATTERY JUNCTION BOX
151–2 E10
170 RD/LB
151–8 D1
C1049M
C1049F
151–8 E1
C1050M
C1050F
S210
S212
IGNITION SWITCH
SEE PAGE 149-3 FOR SWITCH TESTING
151–8 F3
C269
B3
B1
B5
B4
START
ACC
RUN
OFF
LOCK
A3
A1
I1
ST
A4
C242a
BATTERY SAVER RELAY
PAGE 13-10
25
86
30
ACCESSORY DELAY RELAY
PAGE 59-6
CENTRAL JUNCTION BOX
151–9 F3
1040 RD/BK
297 BK/LG
1000 RD/BK
32 RD/LB
687 GY/YE
B
C
D
E
G
F
TO C242b
PAGE 13-9
TO C242a
PAGE 13-16
TO C242a
PAGE 13-12
TO C242b
PAGE 13-5
TO C242b
PAGE 13-12
TO C242b
PAGE 13-13