

C367

VIDEO CASSETTE PLAYER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	57 (BK)	Ground
2	16 (YE/WH)	Switched System Power Relay Output
3	18 (BK)	Power (Accessory Delay Relay Output)
4	–	NOT USED
5	–	NOT USED
6	255 (PK/DG)	VCP Control
7	245 (YE/RD)	Right Audio Output to RSE Module (+)
8	235 (VT/YE)	Right Audio Output to RSE Module (–)
9	225 (DB/RD)	Left Audio Output to RSE Module (+)
10	215 (PK/BK)	Left Audio Output to RSE Module (–)
11	205 (BK/WH)	Video Output to RSE Module (+)
12	195 (OG/BK)	Video Output to RSE Module (–)

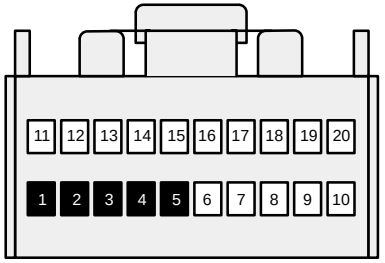

C370

REAR SEAT ENTERTAINMENT (RSE) MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	–	NOT USED
4	–	NOT USED
5	–	NOT USED
6	205 (BK/WH)	Video Input from VCP (+)
7	225 (DB/RD)	Left Audio Input from VCP (+)
8	245 (YE/RD)	Right Audio Input from VCP (+)
9	95 (DG)	Video Output to Display (+)
10	255 (PK/DG)	VCP Control
11	155 (RD)	Left Audio Output to Radio (+)
12	165 (WH)	Left Audio Output to Radio (–)
13	175 (OG)	Right Audio Output to Radio (+)
14	185 (YE)	Right Audio Output to Radio (–)
15	48	Audio Shield
16	195 (OG/BK)	Video Input from VCP (–)
17	215 (PK/BK)	Left Audio Input from VCP (–)
18	235 (VT/YE)	Right Audio Input from VCP (–)
19	105 (DB)	Video Output to Display (–)
20	48	Video Shield