C932 (GY)

14335

Interior/map lamps assembly, rear

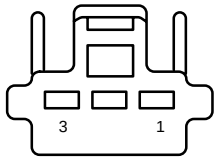

F03173

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	1205 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power

C938a (NA)

14335

Rear A/C control module (front)

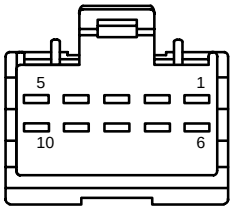

F10125

Pin	Circuit	Circuit function
1	1131 (LG)	Rear A/C control module (front) to Rear A/C control module (rear)
2	1128 (GY/LB)	Mode door actuator, rear (19E616), feed
3	1125 (BN)	Temperature blend door actuator (19E616), return
4	1129 (BN/WH)	Mode door actuator, rear (19E616), return
5	1124 (WH)	Rear A/C control module (front), to, Rear A/C control module (rear)
6	235 (RD/BK)	Instrument illumination, input
7	276 (BN)	Rear A/C control module (front), to, Rear A/C control module (rear)
8	1127 (YE)	Rear A/C control module (front), to, Rear A/C control module (rear)
9	1205 (BK)	Ground
10	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)

* with sliding roof

C938b (GY)

14335

Rear A/C control module (front)

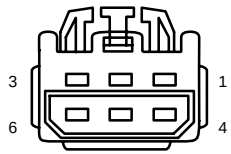

F06229

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	1121 (DG/YE)	Rear A/C control module (front) to Rear A/C control module (rear)
	*260 (RD/OG)	Rear blower motor resistor assembly to Auxiliary A/C control module
3	260 (RD/OG)	Rear blower motor resistor assembly to Auxiliary A/C control module
	*269 (LB/OG)	Rear blower motor resistor assembly, to, Auxiliary A/C control module
4	–	not used
5	269 (LB/OG)	Rear blower motor resistor assembly, to, Auxiliary A/C control module
	*261 (OG/BK)	Rear blower motor resistor assembly, to, Auxiliary A/C control module
6	261 (OG/BK)	Rear blower motor resistor assembly, to, Auxiliary A/C control module
	*515 (OG/RD)	Auxiliary blower motor (19805), to, Auxiliary A/C control module