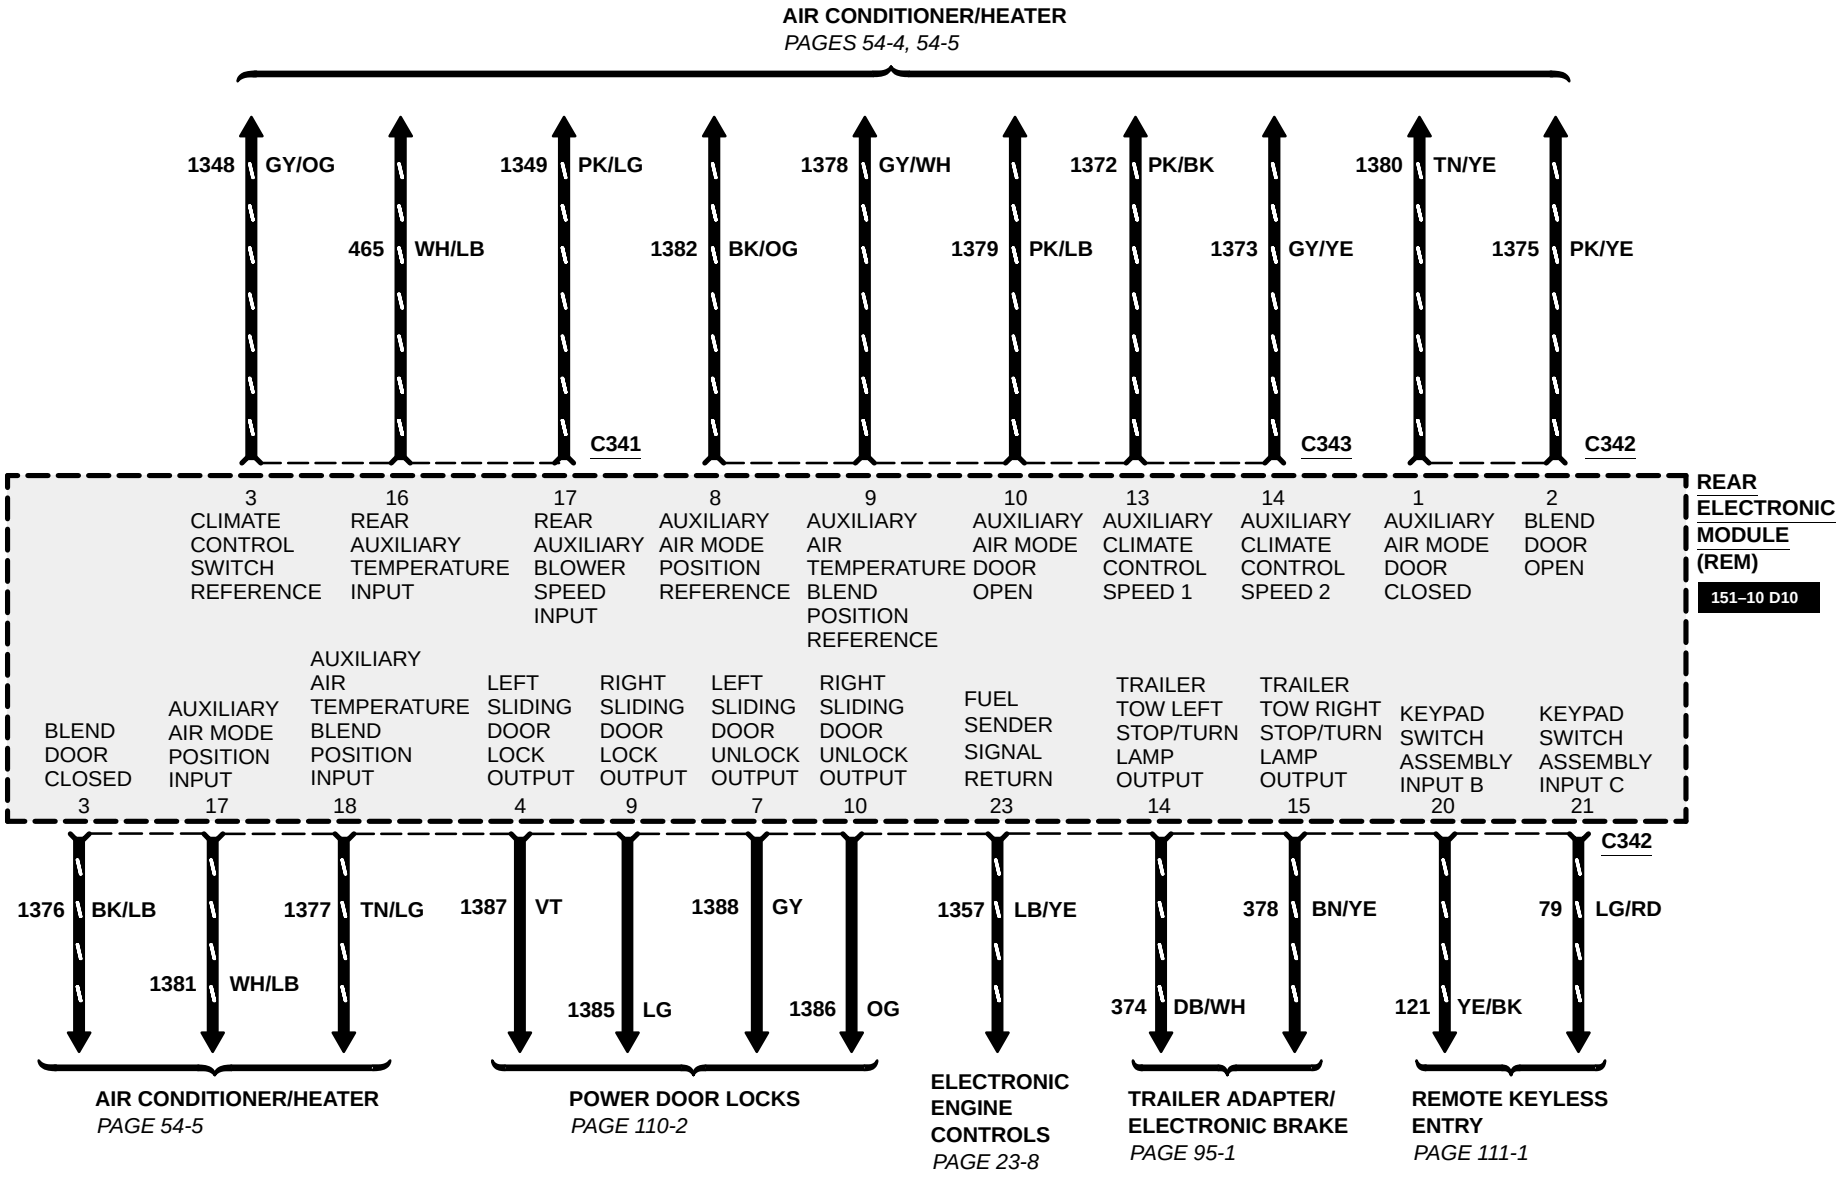
AIR CONDITIONER/HEATER
PAGES 54-4, 54-5
1348 GY/OG
465 WH/LB
1349 PK/LG
1382 BK/OG
1378 GY/WH
1379 PK/LB
1372 PK/BK
1373 GY/YE
1380 TN/YE
1375 PK/YE
C341
C343
C342
3 CLIMATE CONTROL SWITCH REFERENCE
16 REAR AUXILIARY TEMPERATURE INPUT
17 REAR AUXILIARY BLOWER SPEED INPUT
8 AUXILIARY AIR MODE POSITION REFERENCE
9 AUXILIARY AIR TEMPERATURE BLEND POSITION REFERENCE
10 AUXILIARY AIR MODE DOOR OPEN
13 AUXILIARY CLIMATE CONTROL SPEED 1
14 AUXILIARY CLIMATE CONTROL SPEED 2
1 AUXILIARY AIR MODE DOOR CLOSED
2 BLEND DOOR OPEN
BLEND DOOR CLOSED 3
AUXILIARY AIR MODE POSITION INPUT 17
AUXILIARY AIR TEMPERATURE BLEND POSITION INPUT 18
LEFT SLIDING DOOR LOCK OUTPUT 4
RIGHT SLIDING DOOR LOCK OUTPUT 9
LEFT SLIDING DOOR UNLOCK OUTPUT 7
RIGHT SLIDING DOOR UNLOCK OUTPUT 10
FUEL SENDER SIGNAL RETURN 23
TRAILER TOW LEFT STOP/TURN LAMP OUTPUT 14
TRAILER TOW RIGHT STOP/TURN LAMP OUTPUT 15
KEYPAD SWITCH ASSEMBLY INPUT B 20
KEYPAD SWITCH ASSEMBLY INPUT C 21
REAR ELECTRONIC MODULE (REM)
151–10 D10
C342
1376 BK/LB
1381 WH/LB
1377 TN/LG
1387 VT
1385 LG
1388 GY
1386 OG
1357 LB/YE
374 DB/WH
378 BN/YE
121 YE/BK
79 LG/RD
AIR CONDITIONER/HEATER
PAGE 54-5
POWER DOOR LOCKS
PAGE 110-2
ELECTRONIC ENGINE CONTROLS
PAGE 23-8
TRAILER ADAPTER/ ELECTRONIC BRAKE
PAGE 95-1
REMOTE KEYLESS ENTRY
PAGE 111-1