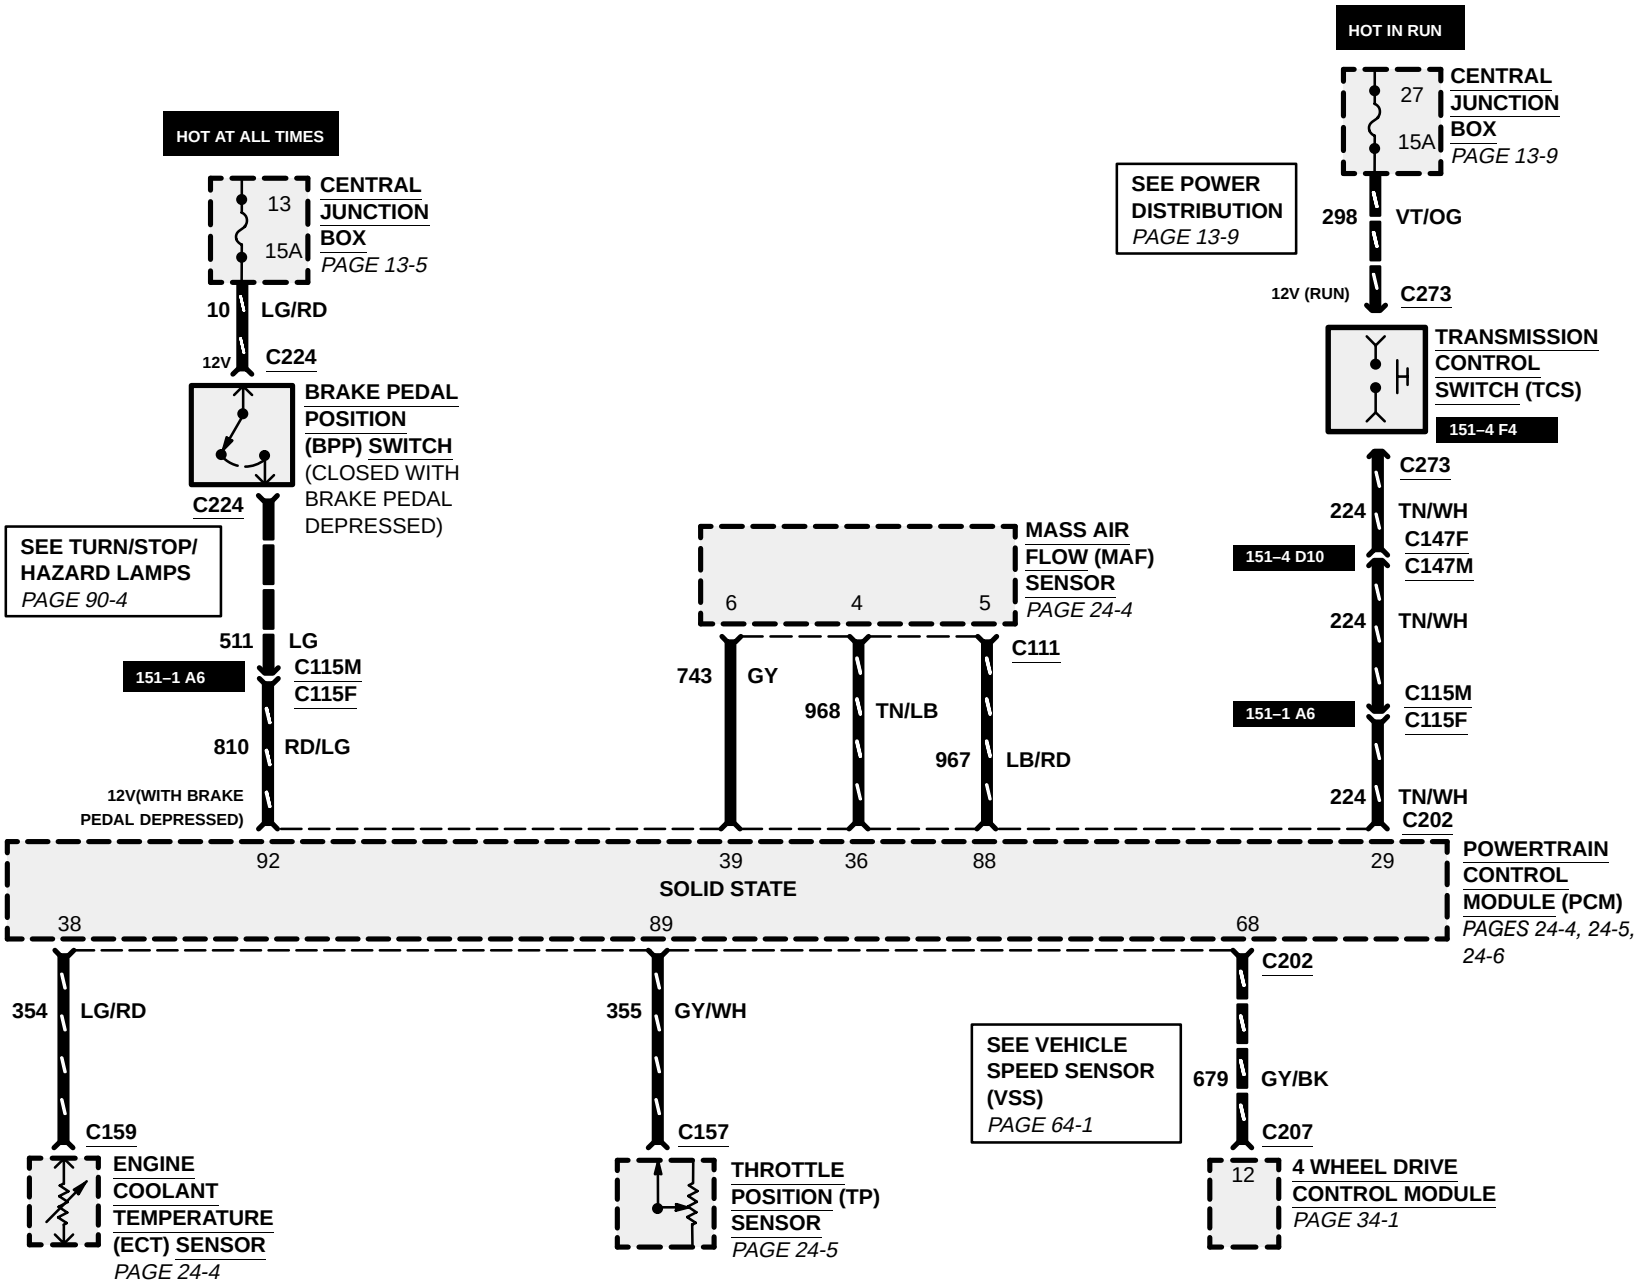
HOT IN RUN
CENTRAL JUNCTION BOX
27
15A
PAGE 13-9
SEE POWER DISTRIBUTION
PAGE 13-9
298 VT/OG
12V (RUN)
C273
TRANSMISSION CONTROL SWITCH (TCS)
151–4 F4
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
13
15A
PAGE 13-5
10 LG/RD
12V
C224
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
C224
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-4
MASS AIR FLOW (MAF) SENSOR
PAGE 24-4
6 4 5
C111
743 GY
968 TN/LB
967 LB/RD
511 LG
151–1 A6
C115M
C115F
810 RD/LG
12V(WITH BRAKE PEDAL DEPRESSED)
C273
224 TN/WH
151–4 D10
C147F
C147M
224 TN/WH
C115M
C115F
151–1 A6
224 TN/WH
C202
92 39 36 88 29
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-4, 24-5, 24-6
38 89 68
C202
354 LG/RD
355 GY/WH
679 GY/BK
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
C159
C157
C207
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
PAGE 24-4
THROTTLE POSITION (TP) SENSOR
PAGE 24-5
12
4 WHEEL DRIVE CONTROL MODULE
PAGE 34-1